

Paladone Nintendo

Paladone Super Mario Bros Icons Light User Manual

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Paladone Super Mario Bros Icons Light. Please read these instructions carefully to ensure proper use and longevity of your product.

SETUP

Powering the Device

The Super Mario Bros Icons Light can be powered in two ways:

- **Micro USB:** Connect the included Micro USB cable to the light and to a compatible USB power source (e.g., a USB wall adapter, computer USB port).
- **Batteries:** Insert 3 x AAA batteries (not included) into the battery compartment located on the underside of the base. Ensure correct polarity.

For optimal performance and continuous use, Micro USB power is recommended.

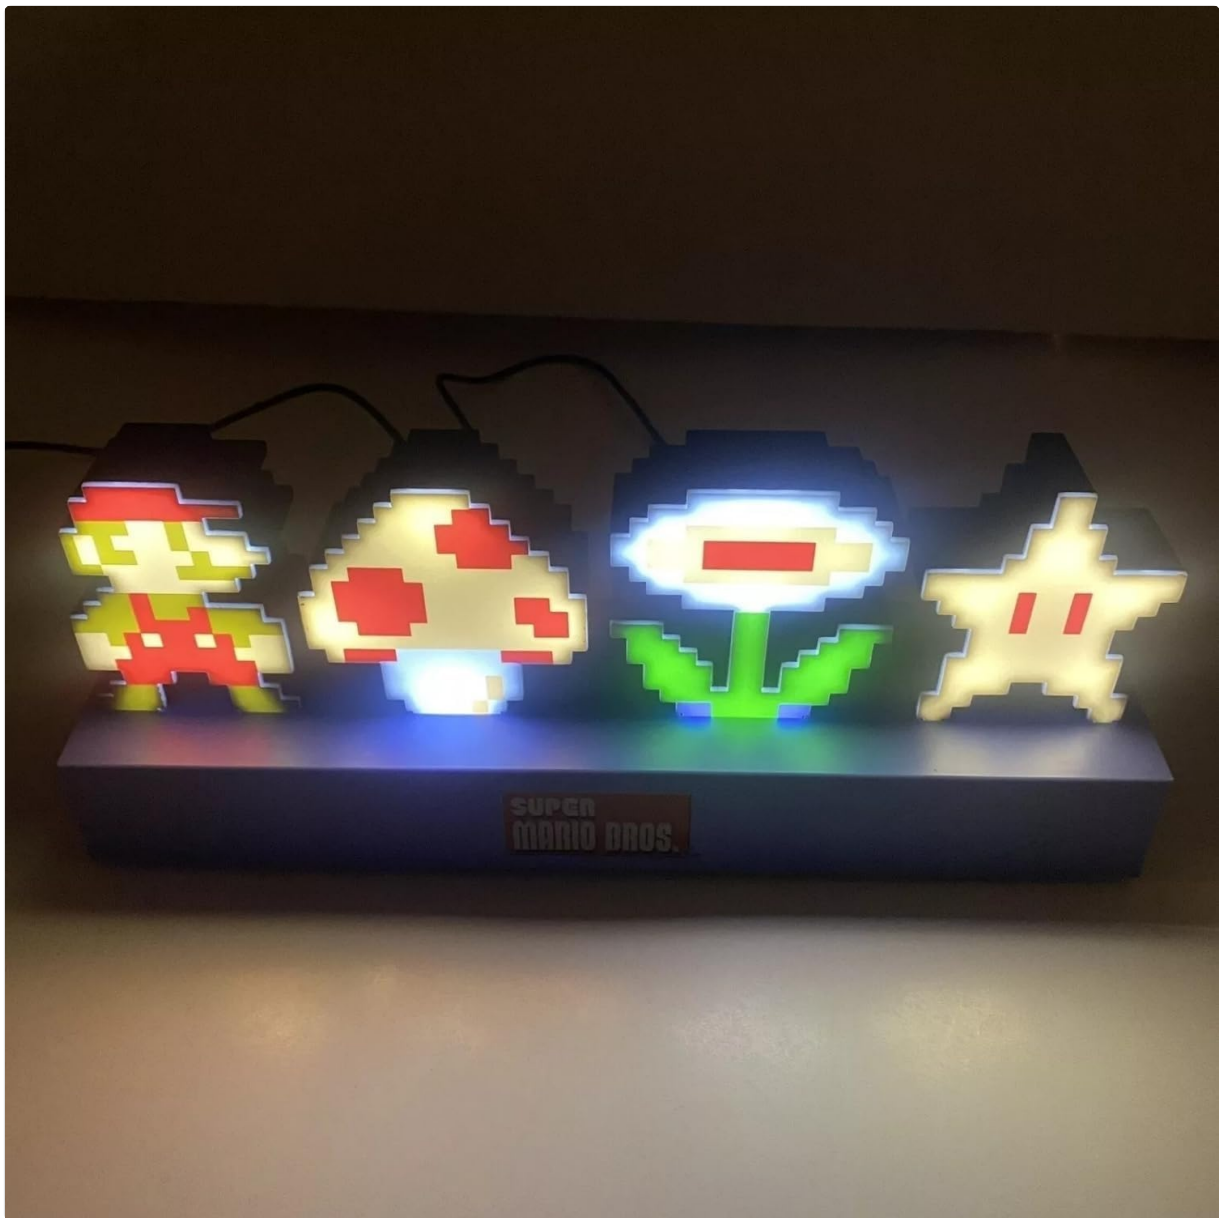


Image: The Super Mario Bros Icons Light, featuring pixelated Mario, Mushroom, Fire Flower, and Star characters on a light blue base, shown unlit.

OPERATING INSTRUCTIONS

The light features a single button on the side of the base to cycle through its various modes.

Light Modes:

1. **Standard Light:** All icons illuminate continuously.
2. **Light Phasing:** The icons will light up in a sequential, fading pattern.
3. **Music Reactive:** The lights will respond to ambient sounds and music, creating a dynamic display.
4. **Off:** Pressing the button after cycling through all modes will turn the light off.

Your browser does not support the video tag.

Video: An official product video demonstrating the three light modes (Standard Light, Light Phasing, and Music Reactive) of the Super Mario Bros Icons Light.



Image: The Super Mario Bros Icons Light illuminated, showcasing the vibrant glow of the pixelated Mario, Mushroom, Fire Flower, and Star icons.

MAINTENANCE

Cleaning:

To clean the light, gently wipe it with a dry, soft cloth. Do not use abrasive cleaners or immerse the device in water.

Storage:

When not in use, store the light in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Light not turning on:** Ensure the Micro USB cable is securely connected to a working power source, or that fresh AAA batteries are correctly installed.
- **Modes not changing:** Press the control button firmly and ensure it clicks. If using batteries, check battery level.
- **Music Reactive mode not responding:** Ensure there is sufficient ambient sound for the light to detect. The microphone is located on the device base.

SPECIFICATIONS

Brand:	Paladone
Model Number:	Nintendo
Product Dimensions:	3.5"D x 12.01"W x 4.72"H
Item Weight:	350 Grams
Power Source:	Corded Electric (Micro USB) or 3x AAA Batteries
Voltage:	9 Volts
Light Source Type:	LED

Control Method:	Touch (Push Button)
Material Type:	Plastic
Color:	Multi-coloured

WARRANTY

For warranty information, please refer to the manufacturer's official website or contact their customer support directly. Keep your proof of purchase for any warranty claims.

SUPPORT

For further assistance or inquiries, please visit the official Paladone store:

[Paladone Official Store](#)