

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Yaheetech](#) /

› [Yaheetech Farmhouse TV Stand YT-00113436ts User Manual](#)

Yaheetech YT-00113436ts

Yaheetech Farmhouse TV Stand YT-00113436ts User Manual

Model: YT-00113436ts | Brand: Yaheetech

1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your Yaheetech Farmhouse TV Stand, model YT-00113436ts. Designed to accommodate TVs up to 65 inches, this entertainment center features a rustic gray wash finish, practical storage with sliding barn doors, and adjustable shelving. Please read these instructions carefully before beginning assembly or use to ensure safe and correct installation and to maximize the lifespan of your product.



Image 1.1: Yaheetech Farmhouse TV Stand (Gray Wash) with a television and decorative items.

2. SAFETY INFORMATION

Please observe the following safety guidelines to prevent injury or damage to the product:

- Ensure that the cabinet is not overloaded beyond its weight capacity. The top surface supports up to 154 lbs (70 kg), and each interior shelf supports up to 22 lbs (10 kg).
- Items should be placed securely on the stand to prevent tipping or structural damage.
- Be aware of the ground clearance to avoid tripping hazards or accessibility issues.
- Always assemble the unit on a soft, clean surface to prevent scratches.
- Keep all small parts and packaging materials away from children and pets during assembly.

- Do not stand or climb on the unit.

3. SETUP AND ASSEMBLY

Assembly of the Yaheetech Farmhouse TV Stand typically takes approximately 1.5 to 2.5 hours with two people. All necessary hardware is included. A Phillips head screwdriver is generally required (not included).

3.1 Before You Begin

- **Unpack All Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface (e.g., carpet or blanket) to prevent scratches.
- **Verify Parts:** Check the included parts list against the contents of your package to ensure all pieces are present and undamaged. If any parts are missing or damaged, contact customer support immediately.
- **Identify Hardware:** Separate and identify all screws, dowels, and other hardware components.

3.2 Assembly Steps (General Guidelines)

Refer to the detailed assembly diagrams provided in your product's specific instruction booklet. The following are general steps:

1. Attach cam locks and dowels to the main side panels.
2. Connect the bottom and middle support panels to the side panels. Ensure proper alignment.
3. Install the back panel(s) using small nails or screws.
4. Assemble the sliding barn doors and attach the top rail and rollers.
5. Insert the adjustable shelves into the desired positions.
6. Attach the top panel to the assembled base.
7. Install any remaining hardware, such as door handles.

PRODUCT SIZE/INCH

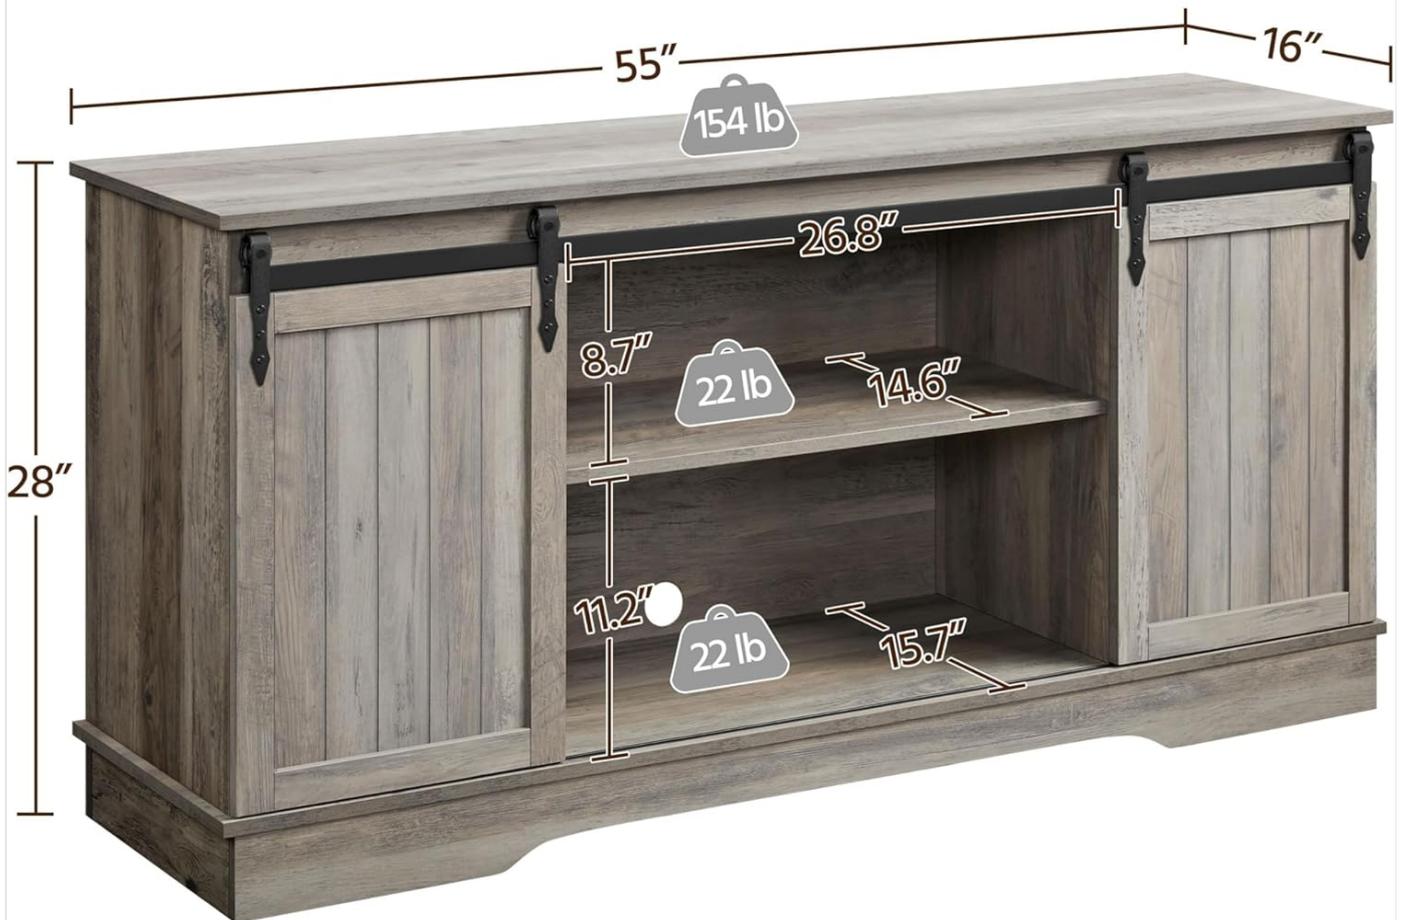


Image 3.1: Product dimensions and weight capacity details. The stand measures 58 inches in length, 16 inches in width, and 28 inches in height. The top surface can hold up to 154 lbs, and each interior shelf can hold up to 22 lbs.



Image 3.2: Visual guide for TV size compatibility, showing the stand can accommodate TVs up to 65 inches.

4. OPERATING INSTRUCTIONS

4.1 Sliding Barn Doors

The TV stand features smooth-gliding barn doors that allow you to conceal or display the central and side storage compartments. To operate, gently slide the doors along the top rail to the desired position. Avoid forcing the doors, as this may damage the mechanism.



Image 4.1: Detail of the black metal sliding barn door hardware, showing the smooth roller mechanism.

4.2 Adjustable Shelving

The side compartments include adjustable shelves. To change the shelf height, remove the shelf and reposition the shelf pins into the desired holes. Ensure all four pins are securely inserted before placing items on the shelf.

4.3 Cable Management

Integrated cable outlets are located on the inner sidewalls of each separated storage space. These openings allow for organized routing of power cords and audio/video cables, keeping your entertainment area tidy and free from tangled wires.



Image 4.2: A circular cable management hole on the back panel of the TV stand, with two black cables passing through it.

5. MAINTENANCE

To maintain the appearance and longevity of your Yaheetech Farmhouse TV Stand, follow these simple care instructions:

- **Cleaning:** Wipe the surfaces with a dry cloth. For more stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth to prevent moisture damage.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or polishes that may damage the finish.
- **Spill Management:** Promptly wipe up any spills to prevent staining or water damage to the engineered wood.
- **Environmental Conditions:** Avoid placing the stand in direct sunlight or near heat sources, as this can cause fading or warping. Maintain a stable room temperature and humidity.
- **Hardware Check:** Periodically check all screws and fittings to ensure they remain tight. Retighten if necessary.

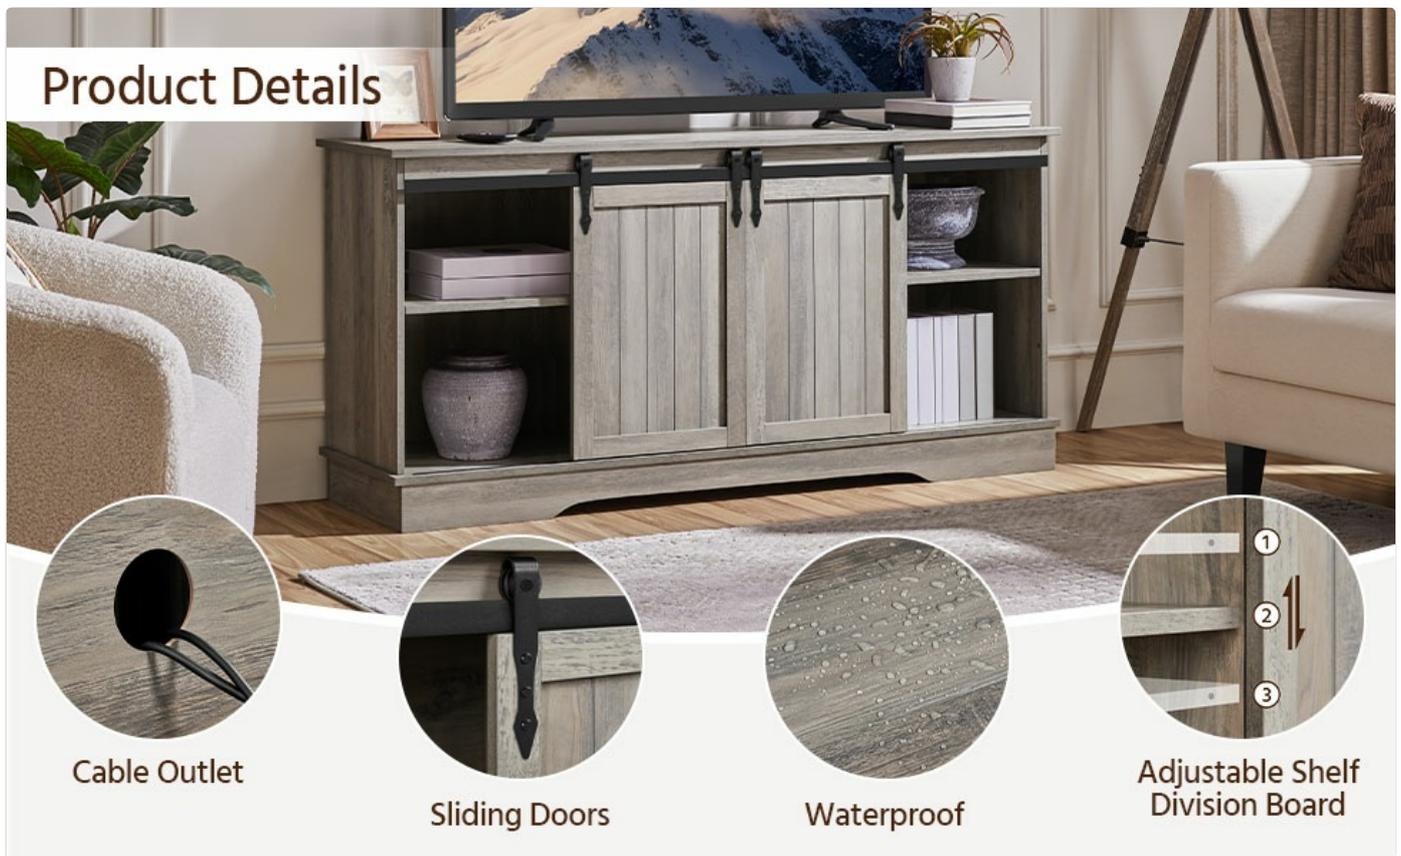


Image 5.1: Illustration of product features, including the waterproof surface and adjustable shelf division board.

6. TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common troubleshooting tips:

- **Wobbly Stand:** Ensure all screws and cam locks are fully tightened. Check that the stand is placed on a level surface. Adjust glides if present.
- **Doors Not Sliding Smoothly:** Inspect the sliding rail for any obstructions or debris. Ensure the rollers are properly seated on the track. A small amount of silicone lubricant can be applied to the track if needed (avoid oil-based lubricants).
- **Missing or Damaged Parts:** If you discover missing or damaged parts during assembly, stop assembly immediately and contact Yaheetech customer support for assistance. Do not attempt to force parts or use substitutes.
- **Scratches or Dents:** Minor scratches can sometimes be touched up with a furniture repair marker that matches the gray wash finish.

7. SPECIFICATIONS

Feature	Detail
Model Number	YT-00113436ts
Brand	Yaheetech
Product Dimensions (L x W x H)	58 x 16 x 28 inches (147.3 x 40.6 x 71.1 cm)
Item Weight	79 pounds (35.8 kg)
Material	Engineered Wood, Metal

Feature	Detail
Color	Gray Wash
Maximum TV Size Supported	Up to 65 inches
Top Surface Weight Capacity	154 pounds (70 kg)
Shelf Weight Capacity	22 pounds (10 kg) per shelf
Special Feature	Adjustable Shelf, Sliding Barn Doors, Cable Management
Product Care Instructions	Wipe with Dry Cloth

8. WARRANTY INFORMATION

Specific warranty details for the Yaheetech Farmhouse TV Stand (Model YT-00113436ts) are not provided within this document. For information regarding product warranty, including coverage, duration, and claims process, please refer to the documentation included with your purchase or contact Yaheetech customer support directly.

9. CUSTOMER SUPPORT

For further assistance, questions about assembly, missing parts, or any other inquiries regarding your Yaheetech product, please contact Yaheetech customer service. You can typically find contact information on the manufacturer's official website or through the retailer where the product was purchased.

Visit the official Yaheetech store: [Yaheetech Store on Amazon](#)