

[Manuals.plus](#) /

› [Berghoff](#) /

› BergHOFF Vintage 15-Piece Tri-Ply Copper Cookware Set Instruction Manual

Berghoff Vintage

BergHOFF Vintage 15-Piece Tri-Ply Copper Cookware Set Instruction Manual

INTRODUCTION

Thank you for choosing the BergHOFF Vintage 15-Piece Tri-Ply Copper Cookware Set. This set is designed for durability and efficient cooking, featuring a unique hammered copper exterior and 18/10 stainless steel interior. This manual provides essential information for the proper use, care, and maintenance of your new cookware.

PRODUCT COMPONENTS

Your BergHOFF Vintage 15-Piece Cookware Set includes the following items:

- 1x 1-quart Saucepan (5.5 inches) with Lid
- 1x 2-quart Saucepan (7 inches) with Lid
- 1x 3-quart Saucepan (8 inches) with Lid
- 1x 5.75-quart Dutch Oven (9.5 inches) with Lid
- 1x 9.5-inch Deep Skillet
- 2x Bamboo Spatulas
- 4x Oversized Bamboo Spoons



Image: The complete BergHOFF Vintage 15-Piece Tri-Ply Copper Cookware Set, including saucepans, Dutch oven, deep skillet, and bamboo utensils.



SETUP AND FIRST USE

1. **Unpack:** Carefully remove all cookware pieces and lids from their packaging.
2. **Wash:** Before first use, wash all cookware and lids thoroughly with warm soapy water. Rinse well and dry immediately to prevent water spots.
3. **Inspect:** Check all pieces for any manufacturing defects or damage.

OPERATING INSTRUCTIONS

Stovetop Compatibility

This cookware set is suitable for use on electric, gas, vitroceramic, and halogen cooktops. **Please note: This cookware is NOT induction ready.**



Image: The base of a BergHOFF Vintage pot, displaying symbols for compatible heat sources (gas, electric, vitroceramic, halogen).

Heat Management

- Use low to medium heat settings for most cooking tasks. The tri-ply construction (copper, aluminum, 18/10 stainless steel) provides excellent heat conductivity and even distribution, making high heat unnecessary and potentially damaging.
- Always match the pan size to the burner size to prevent heat from escaping around the sides and to protect handles from excessive heat.
- Do not preheat empty cookware on high heat. This can cause discoloration and damage.

Oven Use

The cookware is oven safe. Ensure handles and lids are suitable for the desired oven temperature. The glass lids are generally oven safe up to a certain temperature (refer to product specifications or manufacturer's website for exact temperature limits if not specified here).

Product Overview Video

Your browser does not support the video tag.

Video: An overview of the BergHOFF Vintage Tri-ply Copper Cookware, showcasing its hammered and polished design and various pieces.

MAINTENANCE AND CARE

Cleaning Cookware

- **Hand-wash Recommended:** For long-lasting use and to preserve the copper finish, hand-washing is recommended. The cookware is **not dishwasher safe**.
- **Cool Before Washing:** Always allow cookware to cool completely before washing to prevent warping and thermal shock.
- **Gentle Cleaning:** Use warm soapy water and a soft sponge or cloth. Avoid abrasive cleaners, steel wool, or steel scouring pads, as these can scratch the surface.
- **Removing Discoloration:** Cookware may discolor if not completely cleaned before reheating. To remove discolored areas, rub with a cloth dampened with lemon juice or white vinegar, or use a high-quality non-abrasive stainless-steel cleaner.
- **Drying:** Dry immediately after washing to prevent water spots and maintain the luster of the copper.

Cleaning Bamboo Utensils

- Wash bamboo utensils with soap and water.
- Do not soak bamboo utensils for extended periods, as this can cause them to warp or crack.
- Dry thoroughly after washing.

TROUBLESHOOTING

Cookware Discoloration

If your cookware develops discolored areas, it is often due to food residue not being completely removed before reheating, or from using excessively high heat. Refer to the "Maintenance and Care" section for instructions on how to clean and restore the finish using lemon juice, white vinegar, or a specialized stainless-steel cleaner.

SPECIFICATIONS

Feature	Detail
Brand	Berghoff
Model Number	Vintage

Feature	Detail
Material	Tri-Ply (Copper, Aluminum, 18/10 Stainless Steel)
Color	Gold - Hammered
Number of Pieces	15 (including lids and utensils)
Handle Material	Stainless Steel
Lid Material	Glass
Stovetop Compatibility	Electric, Gas, Vitroceramic, Halogen (Not Induction Ready)
Oven Safe	Yes
Dishwasher Safe	No (Hand-wash Recommended)

WARRANTY AND SUPPORT

This BergHOFF Vintage Cookware Set comes with a **1-year limited warranty** from the manufacturer. For warranty claims, product support, or further inquiries, please visit the official BergHOFF store or contact their customer service directly. You can find more information at the [BergHOFF Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09RMV9V56>

More documents and user manuals: <https://manuals.plus/>