

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Beko](#) /

› [Beko MGC20130BFB Microwave Oven with Grill User Manual](#)

Beko MGC20130BFB

Beko MGC20130BFB Microwave Oven with Grill

User Manual

1. INTRODUCTION AND SAFETY INFORMATION

This manual provides important information for the safe and efficient operation of your Beko MGC20130BFB Microwave Oven with Grill. Please read it thoroughly before using the appliance and keep it for future reference.

1.1 General Safety Warnings

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded outlet. Do not operate with a damaged cord or plug.
- **Microwave Radiation:** Do not attempt to operate this oven with the door open or if the door seals are damaged, as this can result in exposure to harmful microwave energy.
- **Supervision:** Close supervision is necessary when the appliance is used by or near children.
- **Flammable Materials:** Do not heat flammable liquids or materials in the microwave. Do not store flammable items inside or on top of the oven.
- **Overheating Liquids:** Liquids heated in a microwave oven can boil over unexpectedly. Use caution when removing containers.
- **Eggs and Whole Foods:** Do not heat whole eggs or hard-boiled eggs in the microwave as they may explode. Pierce foods with skins (e.g., potatoes, apples) before cooking.
- **Metal in Microwave:** Do not use metal containers or foil in microwave mode, as this can cause arcing and damage the oven. Metal can be used during grill mode.
- **Cleaning:** Regularly clean the oven cavity, door, and seals to prevent grease buildup, which can affect performance and safety.

2. SETUP AND INSTALLATION

2.1 Unpacking

Carefully remove all packaging materials from the microwave oven. Check for any damage during transit. If the appliance is damaged, do not operate it and contact your retailer.

2.2 Placement

The Beko MGC20130BFB is a freestanding microwave oven. Place it on a stable, level surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure adequate ventilation around the appliance.



Image: Beko MGC20130BFB Microwave with dimensions. The appliance measures approximately 45 cm in width, 32 cm in depth, and 26 cm in height. Ensure sufficient space for ventilation around the unit.

2.3 Electrical Connection

Plug the power cord into a standard 240V AC, 50Hz grounded electrical outlet. Do not use extension cords or adapters. Ensure the outlet is easily accessible.

2.4 Initial Cleaning

Before first use, wipe the interior and exterior of the oven with a damp cloth. Clean the glass turntable and roller ring with warm, soapy water. Ensure all parts are dry before operating.

3. OPERATING INSTRUCTIONS

3.1 Control Panel Overview



Image: Detailed view of the digital control panel, featuring a digital display, function icons, and control buttons.

The microwave features a digital display and button controls for various functions. Familiarize yourself with the icons for microwave power, grill, defrost, and timer settings.

3.2 Setting the Clock

Upon plugging in, the display will show '0:00'. To set the clock:

1. Press the 'Clock' button (often represented by a clock icon).
2. Use the '+' and '-' buttons to set the hour.
3. Press the 'Clock' button again.
4. Use the '+' and '-' buttons to set the minutes.
5. Press the 'Clock' button one last time to confirm.

3.3 Microwave Cooking

This oven offers 10 power levels for microwave cooking, with a maximum output of 700 Watts.

1. Place food in a microwave-safe container on the glass turntable.
2. Close the door.
3. Press the 'Microwave' button (often a wavy line icon) repeatedly to select the desired power level.
4. Use the '+' and '-' buttons to set the cooking time.
5. Press the 'Start' button (often a play icon) to begin cooking.

3.4 Grill Cooking

The grill function is ideal for browning and crisping food.

1. Place food on the grill rack (if provided) in a heat-resistant dish.
2. Close the door.
3. Press the 'Grill' button (often a zigzag line icon).
4. Use the '+' and '-' buttons to set the grilling time.
5. Press the 'Start' button to begin.

3.5 Defrost Function

The defrost function allows for easy thawing of frozen foods by weight or time.



Image: Visual guide for different food categories suitable for the defrost function, including meat, bread, and vegetables.



Image: Frozen berries, demonstrating a typical item to be defrosted using the appliance's defrost function.

1. Place the frozen food in a microwave-safe container.
2. Press the 'Defrost' button (often a snowflake icon).
3. Select defrost by weight or time using the appropriate buttons.
4. Adjust the weight or time using the '+' and '-' buttons.
5. Press 'Start' to begin.

3.6 Automatic Cooking Programs

The oven includes 10 pre-set automatic cooking programs for convenience. Refer to the specific icons on the control panel for different food types (e.g., popcorn, pizza, beverages). To use:

1. Place food in the oven.
2. Press the 'Auto Cook' button (if available) or directly select the desired program icon.
3. Adjust quantity/weight if prompted.
4. Press 'Start'.



Image: Front view of the Beko MGC20130BFB microwave oven, showcasing its sleek black design and digital control panel.

4. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

4.1 Cleaning the Interior

After each use, wipe the interior with a damp cloth to remove food splatters. For stubborn stains, use a mild detergent and water, then wipe clean. Do not use abrasive cleaners or scouring pads.



Image: Interior view of the Beko MGC20130BFB microwave with the door open, showing the stainless steel cavity and glass turntable, which should be regularly cleaned.

4.2 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the finish.

4.3 Cleaning the Turntable and Roller Ring

The glass turntable and roller ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.

4.4 Odor Removal

To remove odors, combine a cup of water with a few slices of lemon or a tablespoon of vinegar in a microwave-safe bowl. Heat on high for 2-3 minutes, then let it sit in the oven for 5 minutes before wiping clean.

5. TROUBLESHOOTING

If you encounter issues with your microwave, consult the following table for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not start	Door not closed properly; Power cord unplugged; Fuse blown/circuit breaker tripped.	Ensure door is firmly closed; Check power cord connection; Check household fuse/circuit breaker.
Food not heating	Incorrect power level or cooking time set; Door not closed properly.	Adjust power level and cooking time; Ensure door is firmly closed.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Sparking or arcing inside oven	Metal objects in oven; Food splatters/grease buildup.	Remove any metal objects; Clean oven interior thoroughly.
Turntable not rotating	Turntable or roller ring not correctly placed; Obstruction.	Re-position turntable and roller ring; Remove any obstructions.

If the problem persists after attempting these solutions, please contact Beko customer support.

6. SPECIFICATIONS

Feature	Specification
Brand	Beko
Model	MGC20130BFB
Capacity	20 Liters
Microwave Power	700 Watts
Grill Function	Yes
Power Levels	10
Installation Type	Freestanding

Feature	Specification
Color	Black
Interior Material	Stainless Steel
Dimensions (W x D x H)	45 cm x 32 cm x 26 cm
Weight	10.6 Kilograms
Voltage	240 Volts (AC)
Control Type	Digital Buttons
Timer Function	Yes
Cooking Programs	Defrost, Grill, 10 Automatic Programs

7. WARRANTY AND SUPPORT

7.1 Manufacturer's Warranty

This Beko MGC20130BFB Microwave Oven with Grill comes with **a three-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

7.2 Customer Support

For technical assistance, service requests, or further information regarding your appliance, please visit the official Beko website or contact their customer service department. Contact details can typically be found on the Beko website or in your product registration materials.