

Ingenuity 12903

Ingenuity Spring & Sprout 2-in-1 Baby Activity Center & Jumper

Model: 12903

INTRODUCTION

The Ingenuity Spring & Sprout 2-in-1 Baby Activity Center & Jumper is designed to support your child's development from infancy through toddlerhood. This versatile product transitions between two primary modes: a Jumper mode for infants (6-12 months) and an Activity Table mode for toddlers (12-24+ months). It features engaging, nature-inspired activities with lights and sounds, promoting gross motor skills and sensory exploration.



Image: The Ingenuity Spring & Sprout 2-in-1 Baby Activity Center in its primary jumper configuration.

SAFETY INFORMATION

- **Age and Weight Limits:** Suitable for infants aged 6 months and up in Jumper mode, and toddlers aged 12-24+ months in Activity Table mode. Always ensure your child meets the developmental requirements for each mode.
- **Supervision:** Always supervise your child while they are using the activity center. Never leave a child unattended.
- **Proper Setup:** Ensure all components are securely assembled and locked into place before each use. Regularly check for loose parts or damage.
- **Surface:** Place the activity center on a flat, level surface.
- **Batteries:** Use only the specified battery type (2 AA batteries, not included) and follow proper installation guidelines.

SETUP AND ASSEMBLY

Assembly of the Ingenuity Spring & Sprout Activity Center is designed to be straightforward. No special tools are required.

1. Assembling the Base and Activity Tray

Follow the instructions provided in your product packaging to securely attach the activity tray to the support legs and the jumper base.

2. Adjusting Jumper Height

The jumper features 3 adjustable height positions to accommodate your growing child. Locate the adjustment mechanism on the support legs. Press the release buttons and slide the jumper base up or down to the desired height. Ensure it clicks securely into place. Your child's feet should touch the jumper base with their toes and the balls of their feet, not their entire foot, to allow for proper bouncing.



Image: An infant happily engaging with the activity center in jumper mode, demonstrating the appropriate foot placement on the adjustable base.

3. Installing Toys

The 11 engaging, nature-inspired toys can be easily attached to the designated slots on the activity

tray. Ensure each toy is firmly secured.

4. Battery Installation

Some toys require 2 AA batteries (not included). Locate the battery compartment on the electronic toy(s), typically the bear toy. Use a screwdriver to open the compartment, insert the batteries with correct polarity, and close securely.

OPERATING MODES

This activity center offers two distinct modes to adapt to your child's developmental stages.

1. Jumper Mode (6-12 months)

In Jumper mode, the activity center provides a secure and stimulating environment for infants. The 360° rotating seat allows your baby to easily access all 11 nature-inspired toys, promoting exploration and interaction. The stable jump base encourages gross motor skill development through playful bouncing.



Image: An infant enjoying the jumper mode, surrounded by various interactive toys.

2. Activity Table Mode (12-24+ months)

As your child grows and becomes more mobile, the activity center easily converts to an Activity Table. Simply remove the jumper base and replace it with the included toy storage bag. This mode provides a standing play area where toddlers can continue to engage with the toys, fostering independent play and continued development.



Image: A toddler interacting with the activity center in its table configuration, utilizing the toy storage net.

Interactive Toys

The activity center includes a variety of toys designed to stimulate your child's senses and motor skills:

- **Bear Toy:** Features lights and sounds for auditory and visual stimulation.
- **Tree Teethers:** Made from silicone, perfect for soothing gums.
- **House with Mirror:** Encourages self-discovery and imaginative play.
- **Movable Rings and Bunny:** Promote fine motor skills and hand-eye coordination.

Your browser does not support the video tag.

Video: An overview of the Ingenuity Baby Activity Center, highlighting its various features and

CARE AND MAINTENANCE

Keeping your Ingenuity Spring & Sprout Activity Center clean is simple:

- **Seat Pad:** The ultra-plush seat pad is wipeable. For deeper cleaning, refer to the care tag for specific washing instructions.
- **Toys and Table:** All plastic toys and the activity table surface can be easily wiped clean with a damp cloth and mild soap. Ensure all parts are dry before reassembly or use.
- **Storage:** When not in use, store the activity center in a clean, dry place away from direct sunlight.

TROUBLESHOOTING

If you encounter any issues with your Ingenuity Spring & Sprout Activity Center, please consider the following:

- **Toys Not Functioning:** Check if batteries are correctly installed and not depleted. Replace batteries if necessary. Ensure electronic toys are switched on.
- **Difficulty Adjusting Height:** Ensure the release buttons are fully depressed when attempting to adjust the height of the jumper base. Check for any obstructions.
- **Unstable Unit:** Verify that all legs are fully extended and locked into place. Ensure the activity center is on a flat, level surface.

For further assistance, please contact Ingenuity customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	29"L x 29.9"W x 27.8"H
Item Model Number	12903
Batteries Required	2 AA batteries (not included)
Target Gender	Unisex
Material Type	Plastic, Metal, Fabric




Material Composition	80% Plastic, 15% Metal, 5% Fabric
Care Instructions	Wipe Clean
Item Weight	11.15 pounds
Age Range (Description)	Infant, Toddler (6-24+ months)

WARRANTY AND SUPPORT

Ingenuity products are manufactured to high-quality standards and come with a manufacturer's warranty. For specific warranty details, product registration, or customer support, please visit the official Ingenuity website or contact their customer service department. Keep your purchase receipt for warranty claims.

© 2023 Ingenuity. All rights reserved.

Related Documents - 12903

 <p>Spring & Sprout™ 2-in-1 Activity Jumper & Table - First Forest™</p> <p>Activity Jumper / Centre de activités / Trampoline d'activités Actividad de saltar / Actividad de saltar / Trampoline de actividades</p> <p>ingenuity.com</p>	<p>Ingenuity Spring & Sprout 2-in-1 Activity Jumper & Table - First Forest - User Manual</p> <p>Comprehensive user manual and assembly guide for the Ingenuity Spring & Sprout 2-in-1 Activity Jumper & Table in the First Forest theme. Includes safety warnings, battery information, care instructions, parts list, and detailed assembly and usage steps.</p>
 <p>Spring & Sprout™ 2-in-1 Activity Jumper & Table - First Forest™</p> <p>Activity Jumper / Centre de actividades / Trampoline d'activités Actividad de saltar / Actividad de saltar / Trampoline de actividades</p> <p>ingenuity.com</p>	<p>Ingenuity Spring & Sprout 2-in-1 Activity Jumper & Table - First Forest User Manual and Safety Guide</p> <p>Comprehensive user manual for the Ingenuity Spring & Sprout 2-in-1 Activity Jumper & Table - First Forest. Includes essential safety warnings, battery information, care and cleaning guidelines, a parts list, and assembly instructions to ensure safe and proper use.</p>
 <p>ingenuity</p> <p>Cozy Spot™ Reversible Duvet Activity Gym-Calla™</p> <p>Model 12421-WW</p>	<p>Ingenuity Cozy Spot™ Reversible Duvet Activity Gym-Calla™: Care, Assembly, and Safety Instructions</p> <p>Comprehensive guide for the Ingenuity Cozy Spot™ Reversible Duvet Activity Gym-Calla™ (Model 12421-WW). Includes detailed care and cleaning instructions, critical safety warnings to prevent injury, step-by-step assembly procedures, and a complete parts list with descriptions. Designed for babies, this activity gym provides a safe and engaging play environment.</p>



[Ingenuity Step & Sprout 3-in-1 Activity Walker First Forest User Manual](#)

User manual for the Ingenuity Step & Sprout 3-in-1 Activity Walker in the First Forest design. Includes safety warnings, assembly instructions, and care and cleaning guidelines.



[Ingenuity Prop Spot Learn-to-Sit - Loni: User Manual, Safety, and Care Guide](#)

Comprehensive user manual for the Ingenuity Prop Spot Learn-to-Sit - Loni baby floor seat. Includes detailed safety warnings, assembly instructions, care and cleaning guidelines, and a parts list. Covers fall hazards, drowning hazards, suffocation risks, and strangulation prevention.



[Ingenuity Prop Spot Learn-to-Sit - Casi Floor Seat: User Manual, Safety, and Assembly Guide](#)

This comprehensive guide provides essential information for the Ingenuity Prop Spot Learn-to-Sit - Casi floor seat. It includes detailed safety warnings, assembly instructions, care and cleaning guidelines, and a parts list. Ensure safe use for your child by following these instructions.