



[Manuals.plus](#) /

> [BRUNO](#) /

> [BRUNO Cube Timer Clock BCA026-WH Instruction Manual](#)

BRUNO BCA026

BRUNO Cube Timer Clock BCA026-WH Instruction Manual

Model: BCA026-WH

[Introduction](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the BRUNO Cube Timer Clock BCA026-WH. This compact and versatile device functions as both a digital clock and a timer, featuring an alarm, snooze, and backlight. Its intuitive design makes it suitable for various settings, from kitchen counters to office desks. Please read this manual carefully to ensure proper use and to maximize the product's lifespan.



Image 1.1: The BRUNO Cube Timer Clock BCA026-WH in white, displaying the time and its control buttons.

2. SETUP

2.1. Battery Installation

The BRUNO Cube Timer Clock requires two AAA batteries (included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the unit.
2. Slide the cover downwards to open it.
3. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it upwards until it clicks into place.



Image 2.1: The battery compartment located on the back of the clock, showing where to insert two AAA batteries.

2.2. Initial Time and Date Setting

After installing batteries, the display will show a default time. To set the current time and date:

1. Press and hold the **Clock/Date** button (usually marked with a clock icon or 'M') to enter setting mode. The hour digits will flash.
2. Use the **+** and **-** buttons to adjust the hour.
3. Press the **Clock/Date** button again to move to minute setting, then adjust with **+** and **-**.
4. Continue pressing the **Clock/Date** button to cycle through year, month, and day settings, adjusting each with **+** and **-**.
5. Once all settings are complete, press the **Clock/Date** button one last time or wait a few seconds for the device to exit setting mode automatically.
6. To switch between 12-hour and 24-hour display, press the **+** button while the time is displayed in clock mode.

3. OPERATING INSTRUCTIONS

3.1. Switching Between Clock and Timer Modes

The device operates in two main modes: Clock Mode and Timer Mode. To switch between them, press the **Mode** button (often marked with an hourglass icon).

3.2. Setting and Using the Timer

The Cube Timer Clock features a unique rotary switch for quick timer activation and up to three preset timer patterns.

1. **Activating a Preset Timer:** The top part of the clock can be rotated. Each side of the top cube may have a number (e.g., 1, 2, 3) corresponding to a preset timer duration. Simply rotate the top cube so the desired preset number faces upwards to start the timer.
2. **Setting Custom Timer:** In Timer Mode, use the **+** and **-** buttons to set the desired countdown time.
3. **Starting/Stopping Timer:** Press the **Start/Stop** button (often integrated with the Mode button or a separate button) to begin or pause the countdown.
4. **Timer Alarm:** When the timer reaches zero, an electronic alarm will sound. Press any button to stop the alarm.



Image 3.1: Setting the timer by rotating the top cube to select a preset duration.

3.3. Setting the Alarm and Snooze

To set the alarm:

1. In Clock Mode, press and hold the **Alarm** button (marked with a bell icon) to enter alarm setting mode. The alarm hour digits will flash.
2. Use the **+** and **-** buttons to adjust the alarm hour.
3. Press the **Alarm** button again to move to minute setting, then adjust with **+** and **-**.
4. Press the **Alarm** button one last time or wait for the device to exit setting mode.
5. To activate/deactivate the alarm, press the **Alarm** button briefly. An alarm icon will appear/disappear on the display.

When the alarm sounds, press the **Snooze** button (often the top surface of the clock or a dedicated button) to temporarily silence it. The alarm will sound again after a few minutes (typically 5-10 minutes). To turn off the alarm

completely, press any other button.



Image 3.2: Setting the alarm time on the clock.

3.4. Backlight Function

The display features a backlight for visibility in low-light conditions. To activate the backlight, press the **Light** button (if available) or briefly press the top surface of the clock. The backlight will illuminate for a few seconds and then turn off automatically.

4. MAINTENANCE

4.1. Cleaning

To clean your BRUNO Cube Timer Clock:

- Wipe the exterior with a soft, dry cloth.

- For stubborn marks, slightly dampen the cloth with water and a mild detergent, then wipe dry immediately.
- Do not use abrasive cleaners, solvents, or immerse the device in water.

4.2. Battery Replacement

When the display becomes dim or the functions stop working correctly, it's time to replace the batteries. Follow the battery installation steps in Section 2.1. Always replace both batteries at the same time with new ones of the same type (AAA).

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are low or incorrectly installed.	Replace batteries with new AAA batteries, ensuring correct polarity.
Timer or alarm does not activate.	Timer/alarm not set correctly or not activated.	Review Section 3.2 and 3.3 to ensure timer/alarm is set and activated.
Buttons are unresponsive.	Temporary electronic glitch or very low batteries.	Remove and reinsert batteries. If issue persists, replace batteries.

6. SPECIFICATIONS

- **Model:** BCA026-WH
- **Dimensions:** W58 x H78 x D58 mm
- **Weight:** Approximately 100g
- **Power Source:** AAA batteries x 2
- **Functions:** Timer, 12/24 hour display, Date display, Electronic alarm, Snooze, Backlight
- **Material:** ABS resin (main body)
- **Country of Origin:** China

7. WARRANTY INFORMATION & SUPPORT

7.1. Warranty

This BRUNO product is covered by a limited warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official BRUNO website.

7.2. Customer Support

If you encounter any issues or have questions regarding your BRUNO Cube Timer Clock that are not addressed in this manual, please contact BRUNO customer support. Contact information can typically be found on the product packaging, the official BRUNO website, or through your retailer.

