

## G3 Ferrari G20128 Cico

# G3 Ferrari G20128 Cico Electric Coffee Grinder User Manual

## INTRODUCTION

Thank you for choosing the G3 Ferrari G20128 Cico Electric Coffee Grinder. This appliance is designed for grinding coffee beans and spices efficiently. Its compact design, stainless steel blades, and safety features ensure a reliable and convenient grinding experience. Please read this manual carefully before first use and keep it for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- To protect against electric shock, do not immerse the motor base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always operate the grinder with the lid securely in place.
- Do not use the appliance for anything other than its intended use.
- Do not fill the grinding chamber beyond the maximum capacity of 50 grams.

## PRODUCT COMPONENTS

Familiarize yourself with the main parts of your G3 Ferrari G20128 Cico Electric Coffee Grinder:

- **Motor Base:** Contains the motor and power cord.
- **Grinding Chamber:** Stainless steel bowl where items are ground.
- **Stainless Steel Blades:** Sharp blades for efficient grinding.
- **Transparent Lid:** Covers the grinding chamber and activates the safety mechanism.
- **Pulse Operation Button:** For controlling the grinding process.
- **Cord Winder:** Located at the base for tidy storage.
- **Non-slip Feet:** For stability during operation.



Figure 1: G3 Ferrari G20128 Cico Electric Coffee Grinder, showing its compact white body and transparent lid.



Figure 2: Close-up view of the stainless steel grinding blades inside the chamber.



Figure 3: Detail of the transparent lid, highlighting the safety interlock mechanism.

## SETUP

---

1. **Unpack:** Carefully remove the coffee grinder and all packaging materials.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Clean:** Before first use, wipe the exterior of the motor base with a damp cloth. Clean the grinding chamber and blades with a dry brush or cloth. Do not immerse the motor base in water.
4. **Placement:** Place the grinder on a stable, flat, and dry surface, away from water sources and heat.
5. **Power:** Ensure the power cord is easily accessible and not obstructed.

## OPERATING INSTRUCTIONS

---

Follow these steps to operate your G3 Ferrari G20128 Cico Electric Coffee Grinder:

1. **Prepare Ingredients:** Ensure coffee beans or spices are dry.

2. **Fill Grinding Chamber:** Remove the transparent lid. Add the desired amount of coffee beans or spices to the stainless steel grinding chamber. Do not exceed the maximum capacity of 50 grams.
3. **Secure Lid:** Place the transparent lid back onto the motor base, ensuring it is properly aligned and securely locked. The grinder will not operate if the lid is not correctly positioned due to its safety device.
4. **Plug In:** Connect the power plug to a suitable electrical outlet.
5. **Grind:** Press and hold the pulse operation button. The blades will start rotating. Grind in short bursts (pulses) of a few seconds each. This allows for better control over the grind consistency and prevents overheating.
6. **Check Consistency:** Release the button and remove the lid to check the grind consistency. Repeat pulsing until the desired fineness is achieved.
7. **Unplug and Empty:** Once grinding is complete, unplug the appliance from the power outlet. Carefully remove the lid and pour out the ground coffee or spices.

**Grinding Tips:** For a coarse grind, pulse for 5-10 seconds. For a medium grind, pulse for 10-15 seconds. For a fine grind, pulse for 15-20 seconds, checking frequently. Avoid continuous operation for more than 30 seconds to prevent motor strain.

## CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your coffee grinder:

1. **Unplug:** Always ensure the grinder is unplugged from the power outlet before cleaning.
2. **Clean Grinding Chamber:** Use a small brush (a stiff pastry brush or an old toothbrush works well) to remove any remaining coffee grounds or spice residue from the stainless steel chamber and blades.
3. **Wipe Blades:** Carefully wipe the blades with a damp cloth, then dry thoroughly. Be cautious as blades are sharp.
4. **Clean Lid:** Wash the transparent lid with warm, soapy water. Rinse thoroughly and dry completely before reattaching.
5. **Clean Exterior:** Wipe the exterior of the motor base with a soft, damp cloth. Do not use abrasive cleaners or scourers.
6. **Do Not Immerse:** Never immerse the motor base, cord, or plug in water or any other liquid.
7. **Storage:** Once clean and dry, store the grinder in a cool, dry place. Use the cord winder at the base for neat storage of the power cord.

## TROUBLESHOOTING

If you encounter issues with your G3 Ferrari G20128 Cico Electric Coffee Grinder, refer to the following common problems and solutions:

| Problem                 | Possible Cause                                                                  | Solution                                                                                                                                                                                                                                            |
|-------------------------|---------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Grinder does not start. | 1. Appliance not plugged in.<br>2. Lid not securely placed.<br>3. Power outage. | 1. Ensure the plug is firmly inserted into a working outlet.<br>2. Check that the transparent lid is correctly aligned and locked into position. The safety mechanism prevents operation if not secured.<br>3. Check your household's power supply. |

| Problem                           | Possible Cause                                                         | Solution                                                                                                                                                                                                                 |
|-----------------------------------|------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Grinding is uneven.               | 1. Too much coffee/spices in the chamber.<br>2. Insufficient pulsing.  | 1. Reduce the amount of ingredients to below the 50g maximum capacity.<br>2. Use shorter, more frequent pulses and shake the grinder gently between pulses to redistribute ingredients.                                  |
| Appliance stops during operation. | 1. Overheating due to prolonged use.<br>2. Safety mechanism triggered. | 1. Unplug the grinder and allow it to cool down for at least 10-15 minutes before resuming use.<br>2. Check if the lid has become loose or if the appliance was overloaded. Secure the lid and reduce load if necessary. |

## SPECIFICATIONS

| Feature                | Specification                                                                                                          |
|------------------------|------------------------------------------------------------------------------------------------------------------------|
| Model                  | G20128 Cico                                                                                                            |
| Brand                  | G3 Ferrari                                                                                                             |
| Power                  | 150 Watts                                                                                                              |
| Voltage                | 150 Volts (AC)                                                                                                         |
| Capacity               | 50 Grams                                                                                                               |
| Material               | Plastic and Stainless Steel                                                                                            |
| Color                  | White                                                                                                                  |
| Dimensions (L x W x H) | 10 cm x 10 cm x 18.7 cm                                                                                                |
| Weight                 | 700 Grams                                                                                                              |
| Features               | Pulse operation, Stainless steel blades, Stainless steel container, Lid with safety device, Cord winder, Non-slip feet |

## WARRANTY AND SUPPORT

The G3 Ferrari G20128 Cico Electric Coffee Grinder comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, troubleshooting assistance, or to inquire about warranty claims, please contact G3 Ferrari customer service. Contact information can typically be found on the manufacturer's website or on the product packaging.

Please retain your proof of purchase for any warranty claims.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question