

Swiss Pro+ SP-FOOD600.8B

Swiss Pro+ 13-Piece Food Processor SP-FOOD600.8B Instruction Manual

Model: SP-FOOD600.8B

1. INTRODUCTION

Thank you for choosing the Swiss Pro+ 13-Piece Food Processor. This versatile kitchen appliance is designed to simplify your food preparation tasks with its powerful 600W motor and a variety of attachments. Please read this manual carefully before using the appliance to ensure safe and efficient operation. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged from the power outlet before assembling, disassembling, or cleaning.
- Keep hands and utensils away from moving blades or discs while operating the food processor. Never push food with your hands. Always use the provided food pusher.
- Blades are sharp. Handle with extreme care when assembling, disassembling, and cleaning.
- Do not immerse the motor base in water or any other liquid. Wipe with a damp cloth.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Ensure the lid is securely locked in place before operating the appliance. The safety lock mechanism prevents operation if not properly assembled.
- Do not overload the food processor. Refer to the operating instructions for maximum capacities.
- Place the appliance on a stable, flat, and dry surface. The non-slip rubber feet provide stability during use.

3. PRODUCT COMPONENTS

Your Swiss Pro+ Food Processor comes with the following components:

1. Motor Base (with control knob and non-slip feet)
2. 1.2 Liter Plastic Processing Bowl
3. Lid with Feeding Chute and Safety Lock
4. Food Pusher
5. Stainless Steel Chopping Blade
6. Julienne Blade
7. Slicer Blade
8. Emulsifying Disc
9. Dough Mixer
10. Citrus Juicer Attachment
11. Mincer Attachment
12. Cake Cutter
13. Metal Slicer



Image: The main food processor unit with the processing bowl and chopped red onions, illustrating the chopping blade in action.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your food processor:

1. Place the motor base on a clean, dry, and stable surface.
2. Align the processing bowl with the motor base and twist clockwise until it locks securely into place.
3. Carefully select the desired attachment (e.g., chopping blade, slicer disc) and place it onto the central shaft inside the bowl. Ensure it sits firmly.
4. Place the lid onto the processing bowl, aligning the tab on the lid with the slot on the bowl handle. Twist clockwise until the lid locks into place. You will hear a click, and the safety lock will engage.
5. Insert the food pusher into the feeding chute on the lid.



Image: A user assembling the food processor and preparing to slice cucumbers, demonstrating the setup process.

5. OPERATING INSTRUCTIONS

Once assembled, plug the appliance into a suitable power outlet. The control knob has three settings: 0 (Off), 1 (Low Speed), 2 (High Speed), and P (Pulse).

General Operation:

1. Prepare ingredients by cutting them into appropriate sizes to fit the feeding chute.
2. Place ingredients into the processing bowl or feeding chute, depending on the attachment used.
3. Select the desired speed (1 or 2) or use the Pulse (P) function for short bursts of power.

4. For continuous operation, turn the knob to 1 or 2. For intermittent processing, turn and hold the knob at 'P' and release when done.
5. When processing is complete, turn the knob to '0' and unplug the appliance.
6. Wait for all moving parts to stop before removing the lid and bowl.

Using Specific Attachments:

- **Chopping Blade:** Ideal for chopping vegetables, nuts, and making purees. Place ingredients directly into the bowl. Use speed 1 or Pulse.
- **Slicer/Julienne Blades:** For slicing or julienning vegetables and fruits. Place the blade onto the shaft, secure the lid, then feed ingredients through the chute using the food pusher. Use speed 2.
- **Emulsifying Disc:** For whipping cream, egg whites, or making mayonnaise. Place the disc, add ingredients, and use speed 2.
- **Dough Mixer:** For light doughs. Place the attachment, add ingredients, and use speed 1 or Pulse.
- **Citrus Juicer:** Assemble the juicer attachment. Place half a citrus fruit onto the reamer and press down gently while the motor is running (speed 1).



Image: A carrot being inserted into the feeding chute of the food processor, demonstrating how to use slicing/julienning attachments.



Image: The food processor containing chopped tomatoes, illustrating the result of processing with the chopping blade.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your food processor.

1. Always unplug the appliance before cleaning.
2. Disassemble all removable parts: lid, bowl, and attachments.
3. **Hand Wash:** All removable parts (bowl, lid, blades, attachments) should be hand washed in warm, soapy water. Rinse thoroughly and dry immediately. Be extremely careful when handling sharp blades.
4. **Motor Base:** Wipe the motor base with a damp cloth. Never immerse it in water or place it under running water.
5. For stubborn food residue, soak the parts in warm soapy water before cleaning.
6. Store the food processor and its attachments in a dry place.



Image: A user carefully removing chopped red onions from the processing bowl, indicating the completion of a task and readiness for cleaning.

7. TROUBLESHOOTING

If you encounter issues with your food processor, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Lid/bowl not properly locked; Power outage.	Check power connection; Ensure bowl and lid are securely locked; Check household circuit breaker.
Motor runs, but blades do not move.	Attachment not properly seated on the shaft.	Unplug, remove lid and bowl, re-seat the attachment firmly.
Food is not processed evenly.	Too much food; Ingredients too large; Incorrect speed.	Process smaller batches; Cut ingredients into smaller, uniform pieces; Use Pulse function or higher speed as appropriate.

Problem	Possible Cause	Solution
Loud noise or vibration.	Improper assembly; Overloading.	Check that all parts are correctly assembled and locked; Reduce the amount of food being processed.

8. SPECIFICATIONS

Feature	Detail
Brand	Swiss Pro+
Model Number	SP-FOOD600.8B
Power	600 Watts
Voltage	220-240V, 50/60Hz
Capacity	1.2 Liters (Processing Bowl)
Speeds	2 Speeds + Pulse Function
Material	Aluminum (Motor), Stainless Steel (Blades), Plastic (Bowl)
Color	Black
Special Features	Safety Lock, Non-slip Rubber Feet
Product Dimensions (D x W x H)	18 x 18 x 24 cm
Item Weight	2.3 Kilograms
Care Instructions	Hand Wash (removable parts)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Swiss Pro+ customer service through their official website or the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.