

Briloner 2603-015

Briloner 2603-015 Retro Clamp Reading Lamp User Manual

Model: 2603-015

1. PRODUCT OVERVIEW

The Briloner 2603-015 is a retro-style clamp reading lamp designed for versatile use, such as a desk lamp or reading light. It features a flexible arm and a convenient on/off switch. The lamp is constructed from durable metal with a black exterior and a golden interior shade, providing a stylish and functional lighting solution.

- **Design:** Retro style, black and gold finish, metal construction.
- **Flexibility:** Equipped with a 50 cm (19.7 inches) flexible arm for adjustable light direction.
- **Bulb Socket:** E14 socket, suitable for one bulb up to a maximum of 25W. **Note: Bulb is not included.**
- **Operation:** Features an integrated on/off toggle switch on the power cable.
- **Power Cable Length:** 1.8 meters (5.9 feet).
- **Protection Rating:** IP20 (suitable for indoor use only).
- **Maximum Clamping Thickness:** 28 mm (1.1 inches).



A full view of the Briloner 2603-015 retro clamp lamp, featuring its black exterior and golden interior shade, designed for reading or desk use.



This image shows the Briloner 2603-015 clamp lamp attached to a desk, highlighting its E14 bulb base, on/off switch, and flexible, adjustable arm.

2. SETUP INSTRUCTIONS

2.1 Attaching the Lamp

1. Identify a suitable surface (desk, shelf, etc.) with a maximum thickness of 28 mm (1.1 inches) where you wish to install the lamp.
2. Unscrew the clamp's tightening screw until the clamp opening is wide enough to fit over the edge of your chosen surface.
3. Position the clamp securely on the edge of the surface.
4. Tighten the screw firmly until the lamp is stable and does not wobble. Ensure the clamp pads are making full contact with the surface to prevent damage and ensure stability.



A detailed view of the robust clamp mechanism, showing how it securely attaches the lamp to a desk or shelf edge, with a maximum clamping thickness of 28mm.

2.2 Installing the Bulb

1. Ensure the lamp is unplugged from the power outlet before installing the bulb.
2. Carefully screw an E14 bulb (not included) into the lamp's socket. Do not exceed the maximum wattage of 25W.
3. Do not overtighten the bulb.

2.3 Connecting to Power

1. Once the lamp is securely clamped and the bulb is installed, plug the power cable into a standard electrical outlet.

3. OPERATING INSTRUCTIONS

3.1 Turning the Lamp On/Off

1. Locate the toggle switch on the power cable.
2. Flip the switch to the 'ON' position to illuminate the lamp.
3. Flip the switch to the 'OFF' position to turn off the lamp.



Schalter Switch

This image focuses on the convenient toggle switch located on the power cable, allowing for easy operation of the lamp.

3.2 Adjusting the Light Direction

1. The lamp features a flexible arm that allows you to direct the light precisely where needed.
2. Gently bend and position the flexible arm to achieve your desired lighting angle.
3. Avoid excessive force or sharp bends to prevent damage to the arm.



The image illustrates the lamp's flexible arm, which can be bent and positioned to direct light as needed, shown with a motion blur effect.



The lamp is shown in a typical use scenario, clamped to a desk and providing focused illumination for a workspace.

4. MAINTENANCE

4.1 Cleaning the Lamp

1. Always unplug the lamp from the power outlet before cleaning.
2. Use a soft, dry cloth to wipe down the exterior of the lamp.
3. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.

4.2 Replacing the Bulb

1. Ensure the lamp is unplugged and the bulb has cooled down completely before attempting to replace it.
2. Carefully unscrew the old E14 bulb from the socket.
3. Screw in a new E14 bulb, ensuring it does not exceed 25W.

4. Dispose of the old bulb according to local regulations.

5. TROUBLESHOOTING

- **Lamp does not turn on:**

- Check if the power cable is securely plugged into the outlet.
- Ensure the on/off switch is in the 'ON' position.
- Verify that the bulb is correctly installed and not faulty. Try replacing the bulb with a known working one.
- Check the power outlet by plugging in another device.

- **Light flickers:**

- Ensure the bulb is screwed in tightly.
- Try a different E14 bulb.
- Check for loose connections in the power cable.

- **Lamp is unstable after clamping:**

- Ensure the clamp screw is tightened firmly.
- Verify that the surface thickness is within the 28mm limit.
- Make sure the clamp pads are making full contact with the surface.

6. SPECIFICATIONS



An illustration of the lamp showing its overall dimensions, including the 500mm flexible arm length and a maximum total length of approximately 718mm.

Feature	Detail
Model Number	2603-015
Brand	Briloner
Dimensions (L x W x H)	11.4 x 11.4 x 71.8 cm (4.5 x 4.5 x 28.3 inches)
Weight	570 grams (1.26 lbs)
Material	Metal
Color	Black/Gold

Feature	Detail
Bulb Base	E14
Max Wattage	25 Watts
Number of Bulbs	1 (not included)
Flexible Arm Length	500 mm (19.7 inches)
Power Cable Length	1.8 meters (5.9 feet)
Switch Type	Toggle switch on cable
Ingress Protection (IP) Rating	IP20 (Indoor use only)
Max Clamping Thickness	28 mm (1.1 inches)
Country of Origin	China

7. SAFETY INFORMATION

- Always unplug the lamp before cleaning, maintenance, or bulb replacement.
- Do not exceed the maximum bulb wattage of 25W. Using a higher wattage bulb can cause overheating and fire hazards.
- This lamp is rated IP20 and is intended for indoor use only. Do not expose to water or high humidity.
- Ensure the clamp is securely fastened to a stable surface to prevent the lamp from falling.
- Keep the lamp away from flammable materials.
- Do not attempt to modify or disassemble the lamp beyond bulb replacement. Contact qualified personnel for repairs.
- Keep out of reach of children and pets.

8. WARRANTY AND SUPPORT

Specific warranty details for the Briloner 2603-015 lamp are not provided in this manual. For warranty information, claims, or technical support, please contact Briloner customer service directly or refer to the product packaging and purchase documentation.

You can typically find contact information for Briloner on their official website or through the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question