

[Manuals.plus](#) /

› [SoBuy](#) /

› SoBuy FSR110-K-BR Shoe Cabinet Instruction Manual

SoBuy FSR110-BR

SoBuy FSR110-K-BR Shoe Cabinet Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your SoBuy FSR110-K-BR Shoe Cabinet. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Front view of the assembled SoBuy FSR110-K-BR shoe cabinet in brown.

SAFETY INFORMATION

WARNING: Follow assembly instructions carefully. Do not exceed the recommended load capacity to prevent damage or injury.

Ensure all fasteners are securely tightened. Periodically check and re-tighten fasteners as needed. Do not allow children to climb on or play with the shoe cabinet. Always place the unit on a flat, stable surface.

PACKAGE CONTENTS

Your SoBuy FSR110-K-BR shoe cabinet comes in a flat pack and includes all necessary components for self-assembly. Before starting, verify that all parts listed in the included assembly guide are present and undamaged.

- Engineered wood panels (various sizes)
- 2 Flip-drawer mechanisms
- Handles and associated hardware

- Fasteners (screws, dowels, cam locks, etc.)
- Assembly instructions (separate document)


SETUP AND ASSEMBLY

The SoBuy FSR110-K-BR shoe cabinet requires self-assembly. Please refer to the detailed assembly instructions provided in the package for step-by-step guidance. A Phillips head screwdriver and a hammer (for dowels) are typically required tools.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface to prevent scratches. Identify each part using the labels or diagrams in the assembly guide.
2. **Assemble the Main Frame:** Follow the instructions to connect the side panels, top, and bottom panels using the provided fasteners. Ensure all connections are secure.
3. **Install Flip-Drawer Mechanisms:** Attach the flip-drawer mechanisms to the main frame as directed. Pay close attention to the orientation of these parts.
4. **Assemble Drawers:** Construct the two flip drawers. Attach the front panels and handles.
5. **Insert Drawers:** Carefully insert the assembled flip drawers into their respective mechanisms. Test their movement to ensure smooth operation.
6. **Final Checks:** Ensure all screws are tightened and the cabinet is stable.



Dimensions of the SoBuy FSR110-K-BR shoe cabinet: 60cm width, 24cm depth, 80cm height.

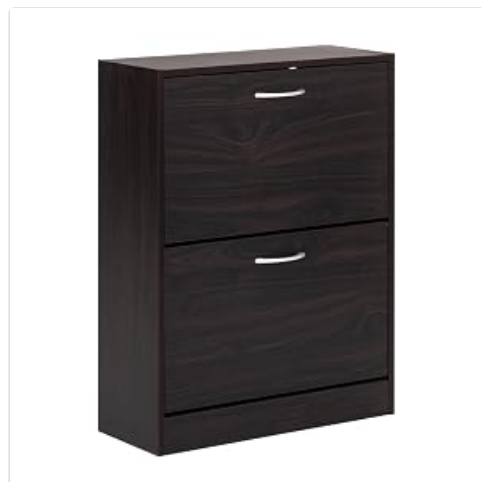

Detailed view of the shoe cabinet's construction and components.

OPERATING INSTRUCTIONS

The SoBuy FSR110-K-BR shoe cabinet features two flip drawers designed for efficient shoe storage.

- **Opening Drawers:** Gently pull the handle of the desired drawer outwards. The drawer will tilt forward, revealing two tiers for shoe placement.
- **Placing Shoes:** Place shoes on the two internal tiers within each flip drawer. The design accommodates various shoe types, though larger boots or high heels may require specific positioning or may not fit.
- **Closing Drawers:** Push the drawer back into the cabinet until it is fully closed and flush with the cabinet front.



View of the shoe cabinet with one flip drawer open, showing shoes stored inside.



The shoe cabinet with both flip drawers open, demonstrating storage capacity.

MAINTENANCE

To ensure the longevity and appearance of your shoe cabinet, follow these maintenance guidelines:

- **Cleaning:** Wipe with a damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the engineered wood finish.
- **Dusting:** Regularly dust the surfaces with a soft, dry cloth.
- **Fasteners:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.

- **Placement:** Avoid placing the cabinet in direct sunlight or near heat sources, as this can cause fading or warping.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawers do not open/close smoothly	Incorrect assembly of flip mechanism; Obstruction; Loose fasteners.	Review assembly instructions for the flip mechanism. Check for any items blocking the drawer path. Tighten all fasteners.
Cabinet is wobbly	Uneven floor; Loose fasteners.	Ensure the cabinet is on a level surface. Re-tighten all assembly screws.
Shoes do not fit	Shoe size/type exceeds drawer capacity.	Adjust shoe placement. Note that larger boots or high heels may not fit optimally.

SPECIFICATIONS

Feature	Detail
Brand	SoBuy
Model Number	FSR110-BR
Colour	Brown
Material	Engineered Wood
Product Dimensions (D x W x H)	24D x 60W x 80H centimetres
Item Weight	16 kg
Weight Capacity Maximum	20 kg
Number of Drawers	2
Number of Shelves (per drawer)	2
Mounting Type	Floor Mount (Freestanding)
Special Feature	Adjustable (internal shelves)
Recommended Uses	Home, Hallway, Living Room

WARRANTY INFORMATION

The SoBuy FSR110-K-BR Shoe Cabinet comes with a **1-year manufacturer warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For any questions, missing parts, or assistance with assembly or product issues, please contact the manufacturer:

Manufacturer: SoBuy

Contact Information: HaotianGroup Inc

Please refer to your purchase documentation or the retailer's website for the most current contact methods (phone, email, or online support portal).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question