



Manuals.plus /

› MUSTAR /

› MUSTAR Electric Guitar Kit MEG-100 Instruction Manual

MUSTAR MEG-100

MUSTAR Electric Guitar Kit MEG-100 Instruction Manual

Model: MEG-100

1. INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your MUSTAR Electric Guitar Kit. This kit is designed for both beginner and intermediate players, offering a complete package to start playing electric guitar.

COMPLETE GUITAR KIT



Image 1.1: A musician playing the MUSTAR Electric Guitar with the included amplifier.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x 39-inch Electric Guitar (Ripple Green)
- 1 x 25-Watt Amplifier
- 1 x Gig Bag
- 1 x Digital Tuner
- 1 x Capo
- 1 x Shoulder Strap
- 1 x Guitar Cable
- 5 x Guitar Picks
- 1 x Set of Extra Strings
- 2 x Allen Wrenches
- 1 x Cleaning Cloth



Image 2.1: Overview of all items included in the MUSTAR Electric Guitar Kit.

3. GUITAR FEATURES

The MUSTAR Electric Guitar features a solid wood body with a high gloss finish, a Canadian maple neck, and a rosewood fingerboard. It is equipped with S-S-S (Single-Single-Single) pickups for a versatile sound.



- **Body:** Solid Wood, 39-inch full size, Ripple Green finish.
- **Neck:** Canadian Maple, C-Shape.
- **Fretboard:** Rosewood.
- **Pickups:** S-S-S configuration with a 5-way switch for tone selection.
- **Controls:** 1 Volume knob, 2 Tone knobs.
- **Bridge:** Tremolo bridge system with a removable whammy bar.
- **Tuners:** Golden tuning pegs.



Image 3.1: Key features of the MUSTAR Electric Guitar.

FOCUS ON TIMBRE, CREATE PERFECT PERFORMANCE

S S S Pickups with 5 Way Switch

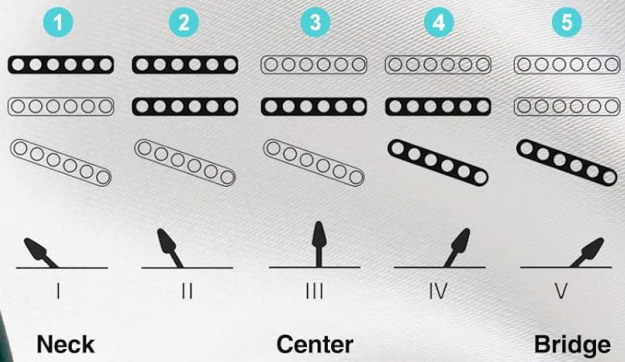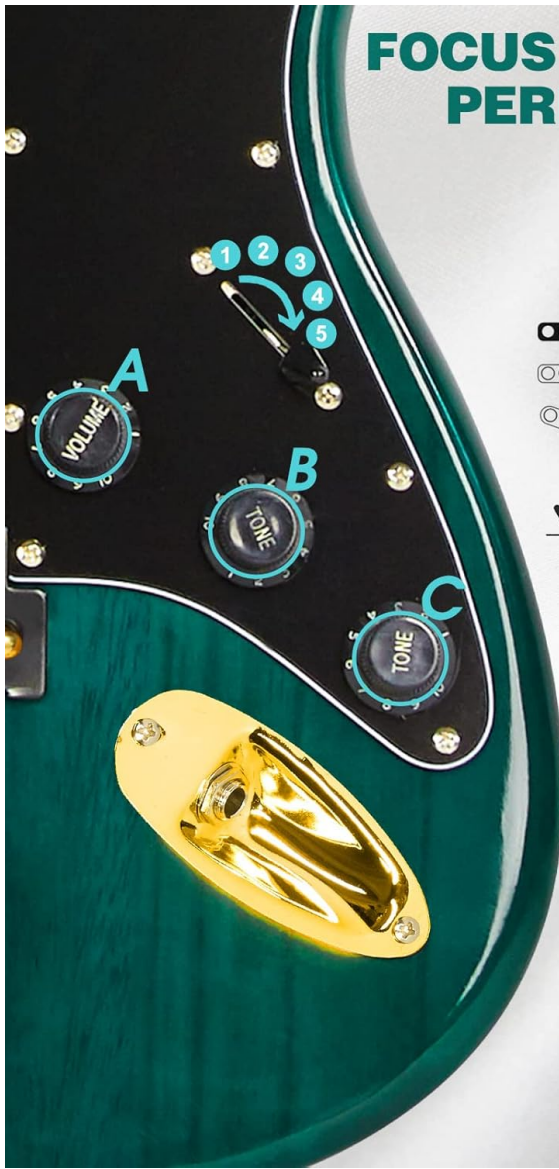

A Volume Knob:
control output volume

B Tone Knob:
control pickup tone of 1 and 2

C Tone Knob:
control pickup tone of 3 and 4

Image 3.2: Controls and pickup configuration.

RIPPLE GREEN BODY & GOLDEN HARDWARE

Unique color matching, inspire more creative inspiration



Image 3.3: Tremolo bar and golden hardware details.

4. AMPLIFIER FEATURES

The included 25-Watt amplifier provides sufficient power for practice and features essential controls for shaping your sound.

- **Power Output:** 25 Watts.
- **Controls:** Gain, Volume, Treble, Middle, Bass.
- **Inputs:** Guitar input, Auxiliary input (for connecting external audio devices like phones or MP3 players).
- **Outputs:** Headphone jack (for silent practice).

Your browser does not support the video tag.

Video 4.1: An overview of the MUSTAR 39-inch Electric Guitar Kit, including a demonstration of the amplifier's features.

5. SETUP

5.1 Connecting the Guitar to the Amplifier

1. Ensure the amplifier is turned off and its volume is set to minimum.
2. Connect one end of the included guitar cable to the output jack on your guitar.
3. Connect the other end of the guitar cable to the 'Input' jack on the amplifier.
4. Plug the amplifier's power cord into a suitable electrical outlet.
5. Turn on the amplifier. Gradually increase the volume to your desired level.

5.2 Tuning the Guitar

Use the included digital tuner to accurately tune your guitar. The tuner clips onto the headstock and detects string vibrations.

1. Clip the digital tuner onto the headstock of your guitar.
2. Turn on the tuner.
3. Pluck each string individually. The tuner display will show the note and indicate if it is sharp (too high) or flat (too low).
4. Adjust the corresponding tuning peg until the tuner indicates the correct note (E, A, D, G, B, E from thickest to thinnest string) and is in tune.

5.3 Attaching the Shoulder Strap

Attach the guitar strap to the strap buttons located on the body of the guitar. Adjust the strap length for comfortable playing while standing or sitting.

5.4 Using the Capo

The capo can be used to raise the pitch of the open strings. Place the capo firmly behind the desired fret on the neck of the guitar.

6. OPERATING THE GUITAR AND AMPLIFIER

6.1 Amplifier Controls

- **Gain:** Controls the amount of overdrive or distortion. Higher gain settings produce a more distorted sound.
- **Volume:** Adjusts the overall output level of the amplifier.
- **Treble:** Adjusts the high-frequency tones.
- **Middle:** Adjusts the mid-range frequency tones.
- **Bass:** Adjusts the low-frequency tones.
- **Headphone Jack:** Connect headphones for private practice. This mutes the main speaker.
- **Auxiliary Input:** Connect an external audio source (e.g., smartphone) to play along with backing tracks.

6.2 Guitar Controls (5-Way Pickup Switch)

The 5-way switch allows you to select different pickup combinations, altering the guitar's tone:

1. **Position 1 (Bridge):** Activates the bridge pickup for a bright, sharp tone.

2. **Position 2 (Bridge & Middle):** Combines bridge and middle pickups for a slightly warmer, quacky tone.
3. **Position 3 (Middle):** Activates the middle pickup for a balanced, clear tone.
4. **Position 4 (Middle & Neck):** Combines middle and neck pickups for a warm, full tone.
5. **Position 5 (Neck):** Activates the neck pickup for a warm, mellow tone.

The Volume knob controls the overall output level of the guitar, and the two Tone knobs adjust the treble frequencies for specific pickups (typically one for neck/middle and one for bridge).

Your browser does not support the video tag.

Video 6.1: A demonstration of the guitar's features and sound customization options.

7. MAINTENANCE

7.1 Cleaning

Regular cleaning helps maintain the appearance and playability of your guitar. Use the included cleaning cloth to wipe down the guitar body, neck, and strings after each use. For deeper cleaning, use guitar-specific cleaning products.

7.2 String Replacement

Strings should be replaced periodically as they wear out, lose their tone, or break. The kit includes a set of extra strings. Use the provided Allen wrenches for any necessary bridge adjustments during string changes.

7.3 General Care

- Store the guitar in its gig bag when not in use to protect it from dust and minor impacts.
- Avoid exposing the guitar to extreme temperatures or humidity, as this can damage the wood.
- Handle the guitar and amplifier with care to prevent physical damage.

8. TROUBLESHOOTING

8.1 No Sound from Amplifier

- Ensure the amplifier is powered on and plugged into a working outlet.
- Check that the guitar cable is securely connected to both the guitar and the amplifier.
- Verify that the guitar's volume knob is turned up.
- Ensure the amplifier's volume knob is turned up and not muted by headphones.
- Test with a different cable or guitar if available to isolate the issue.

8.2 Buzzing or Unwanted Noise

- Check all cable connections for looseness.
- Ensure the guitar strings are properly grounded.

- Try reducing the amplifier's gain or volume settings.
- Move away from electronic devices that might cause interference.

8.3 Difficulty Staying in Tune

- Ensure strings are properly stretched when new.
- Check that strings are correctly wound around the tuning pegs.
- Verify that the tuning pegs are not loose.
- Consider replacing old or worn strings.

9. SPECIFICATIONS

Feature	Specification
Brand	MUSTAR
Model Number	JN-01 (MEG-100)
Item Weight	12.5 pounds
Product Dimensions	39 x 13 x 1.6 inches
Body Material	Solid Wood
Neck Material Type	Maple
Fretboard Material	Solid Wood (Rosewood)
Number of Strings	6
Guitar Pickup Configuration	S-S-S
Guitar Bridge System	Tremolo (Hard Tail)
String Material	Nickel Plated
Hand Orientation	Right
Amplifier Power	25 Watts

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact MUSTAR customer service directly. Keep your proof of purchase for any warranty claims.

