Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > ZWILLING /
- > ZWILLING Enfinigy Wireless Charging Scale 53104-401-0 User Manual

ZWILLING 53104-401-0

ZWILLING Enfinigy Wireless Charging Scale User Manual

Model: 53104-401-0 Brand: ZWILLING

Introduction

The ZWILLING Enfinigy Wireless Charging Scale combines modern design with precise measurement capabilities. This digital kitchen scale features a rechargeable Li-ion battery, eliminating the need for disposable batteries, and is conveniently recharged via a USB cable. Its sensor touch display allows for easy operation, and the scale automatically powers off when not in use to conserve energy. The high-quality glass weighing surface is designed for easy cleaning, enabling direct weighing of various food items like meat and fruit. The large weighing surface ensures the built-in LCD display remains visible even when handling larger quantities. It supports easy switching between grams and ounces, catering to diverse recipe requirements. This ZWILLING digital scale accurately weighs items up to 22 lbs (10 kg) and includes a tare function for weighing multiple ingredients in a single container.



Image: Top-down view of the ZWILLING Enfinigy Wireless Charging Scale in black.

WHAT'S IN THE BOX

- ZWILLING Enfinigy Wireless Charging Scale, Black
- USB Charging Cable (power adapter not included)
- Instruction Manual (this document)

SETUP

- Initial Charge: Before first use, fully charge the scale using the provided USB cable. Connect the USB-C
 end to the scale's charging port and the other end to a compatible USB power adapter (not included). The
 charging indicator lights will illuminate.
- 2. **Placement:** Place the scale on a flat, stable, and level surface to ensure accurate measurements. Avoid placing it near heat sources or in direct sunlight.
- 3. Power On: Press the power button (usually a sensor touch area) to turn on the scale.



Image: Close-up of the USB-C charging port on the ZWILLING Enfinigy Wireless Charging Scale.

OPERATING INSTRUCTIONS

1. Weighing Ingredients

- 1. Ensure the scale is on and displays "0".
- 2. Place the item(s) directly onto the glass weighing surface or in a container.
- 3. Read the weight displayed on the LCD screen. The scale can weigh up to 22 lbs (10 kg) with accuracy to 0.1 oz (0.1 g).



Image: Almonds being weighed directly on the scale's glass surface.

2. Using the Tare Function

- 1. Place an empty container on the scale. The display will show its weight.
- 2. Press the power/tare button (often the same sensor touch button) to reset the display to "0". This subtracts the container's weight.
- 3. Add ingredients to the container. The display will show only the weight of the added ingredients.



Image: A large pot placed on the scale, illustrating the tare function for weighing ingredients.

3. Switching Measurement Units (Grams/Ounces)

To switch between grams (g) and ounces (oz), locate the "UNIT" button, typically found on the underside of the scale. Press this button to toggle between the available measurement units.

Your browser does not support the video tag.

Video: Demonstration of the ZWILLING Enfinigy Digital Food Scale, including unit conversion and tare function. This video highlights the scale's precision and ease of use for various ingredients.

4. Wireless Charging Function

The ZWILLING Enfinigy scale features an integrated wireless charging pad. To charge a compatible smartphone or tablet, place it directly in the center of the scale's surface. Ensure the device's inductive charging coil aligns with the scale's charging area for optimal performance. A slight tap after placing lighter devices may be necessary to activate charging.



Image: A smartphone placed on the scale's surface, indicating active wireless charging.

Your browser does not support the video tag.

Video: Detailed instructions on how to charge a smart device using the wireless charging feature of the ZWILLING Enfinigy kitchen scale. This video emphasizes proper device placement for effective charging.

Your browser does not support the video tag.

Video: Overview of the ZWILLING Enfinigy scale's dual functionality as a charging station and food scale. This video showcases both weighing and wireless charging capabilities.

Maintenance and Care

- **Cleaning:** The high-quality glass weighing surface is easy to clean. Wipe with a damp cloth and mild detergent, then dry thoroughly. Do not immerse the scale in water.
- Storage: Store the scale in a dry place away from extreme temperatures and humidity.
- Avoid Harsh Chemicals: Do not use abrasive cleaners or harsh chemicals, as these can damage the surface and electronic components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scale does not turn on.	Battery is depleted.	Charge the scale using the USB cable.
Inaccurate weight readings.	Scale not on a level surface; overloaded; internal error.	Ensure scale is on a flat, stable surface. Do not exceed maximum weight capacity (22 lbs/10 kg). Turn off and restart the scale.
Wireless charging not working.	Device not aligned; device not Qi-compatible; scale not charged.	Ensure the center of your device is aligned with the wireless charging area on the scale. Verify your device supports Qi wireless charging. Ensure the scale has sufficient battery charge. For lighter devices, a slight tap may be needed to activate charging.
Display is not visible with large items.	Large container or item obstructing view.	The scale is designed with a large weighing surface to minimize this, but for very large items, you may need to adjust placement or use the tare function with a smaller, empty container first.

SPECIFICATIONS

Product Dimensions: 9.4 x 11.5 x 1.8 inches

Weight: 2 Pounds

Item Model Number: 53104-401-0

Manufacturer: ZWILLING

 $\textbf{Brand:} \ \mathsf{ZWILLING}$

Color: Black

Recommended Uses: Kitchen, General Weighing

Special Feature: Smart, Wireless Charging

Display Type: LCD

Maximum Capacity: 22 lbs / 10 kg

Accuracy: 0.1 oz / 0.1 g

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official ZWILLING website or contact ZWILLING customer service directly. Keep your proof of purchase for any warranty claims.

You can visit the ZWILLING Store for more information: ZWILLING Store on Amazon



ZWILLING ENFINIGY Wireless Charging Scale User Manual (Model 53104-4)

User manual for the ZWILLING ENFINIGY Wireless Charging Scale (Model 53104-4). Provides detailed information on safety, specifications, operation, power bank features, maintenance, troubleshooting, and disposal. Learn how to use your wireless charging scale effectively and safely.



ZWILLING ENFINIGY® MILK FROTHER 53104-0 Bedienungsanleitung

Bedienungsanleitung für den ZWILLING ENFINIGY® MILK FROTHER 53104-0. Erfahren Sie mehr über sichere Nutzung, Zubereitung von Milchschaum und Reinigung.



ZWILLING ENFINIGY® KITCHEN SCALES - Safety Information and Technical Data

Comprehensive safety instructions, technical specifications, and disposal information for the ZWILLING ENFINIGY® Kitchen Scales (models 53011 and 53104-4).



ZWILLING ENFINIGY® Kaffeemühle Bedienungsanleitung

Umfassende Bedienungsanleitung und Sicherheitshinweise für die ZWILLING ENFINIGY® Kaffeemühle (Modell 53104-6). Erfahren Sie alles über Inbetriebnahme, Mahlgradeinstellungen, Pflege und Fehlerbehebung für perfekten Kaffeegenuss.



ZWILLING ENFINIGY HAND BLENDER 53104-9: Instruction Manual

Instruction manual for the ZWILLING ENFINIGY HAND BLENDER (model 53104-9), covering safety precautions, technical specifications, operating instructions, cleaning, storage, and disposal.



Zwilling Enfinigy Coffee Grinder Operating Instructions

Comprehensive operating instructions for the Zwilling Enfinigy Coffee Grinder, covering safety, technical data, operation, cleaning, and troubleshooting.