

Deerma NU06

Deerma NU06 Portable Electric Blender Juicer User Manual

Model: NU06

1. INTRODUCTION

Thank you for choosing the Deerma NU06 Portable Electric Blender Juicer. This device is designed for convenient preparation of smoothies, juices, and shakes. Its cordless, USB-rechargeable design and detachable blade system offer portability and ease of use. Please read this manual carefully before operating the appliance to ensure safe and optimal performance.

2. PRODUCT OVERVIEW

The Deerma NU06 is a compact and lightweight personal blender, ideal for use at home, in the office, or while traveling. It features a 150W motor and a 400ml capacity.

Components:

- 1 x Blender Base with Motor and Control Button
- 1 x Blending Cup (400ml) with Detachable Blade Assembly
- 1 x Travel Lid
- 1 x USB Charging Cable



Image 2.1: The Deerma NU06 blender with strawberries, illustrating the main components including the blender base, blending cup, and detachable blade assembly.

3. SETUP

3.1 Unpacking

1. Carefully remove all components from the packaging.
2. Inspect the blender for any damage. Do not use if damaged.
3. Remove any protective films or stickers.

3.2 Initial Charging

Before first use, fully charge the blender. The device is USB rechargeable.

1. Connect the provided USB charging cable to the charging port on the blender base.
2. Connect the other end of the USB cable to a compatible USB power source (e.g., power bank, laptop, USB wall adapter).
3. The indicator light will show charging status. Allow approximately 3-5 hours for a full charge.
4. Disconnect the charging cable once fully charged.

3.3 Assembly

1. Ensure the blade assembly is securely attached to the blending cup.
2. Align the blending cup with the blender base.
3. Twist the blending cup clockwise onto the base until it is firmly locked in place. The blender will not operate if the cup is not correctly assembled and locked.

4. OPERATING INSTRUCTIONS

4.1 Preparing Ingredients

1. Wash all fruits and vegetables thoroughly.
2. Cut ingredients into small pieces (approximately 1-2 cm) to ensure efficient blending and prevent blade obstruction.
3. Add liquid (water, milk, juice) to the blending cup. Ensure the total volume does not exceed the MAX fill line (400ml).
4. Do not blend hot liquids.

4.2 Blending

1. After adding ingredients and liquid, securely attach the blending cup to the motor base.
2. Invert the blender so the base is at the top. This helps prevent ingredients from getting stuck.
3. Double-click the power button on the base to start blending. The indicator light will illuminate.
4. During blending, gently shake the blender to ensure all ingredients are evenly processed.
5. The blending cycle typically lasts for 30-60 seconds. The blender will automatically stop after a cycle or can be stopped by pressing the power button once.
6. Once blending is complete, turn the blender upright, detach the blending cup from the base, and replace the blade assembly with the travel lid if desired.



Image 4.1: The Deerma NU06 blender in operation, alongside a separate bottle with freshly blended juice, demonstrating its portable use.

Your browser does not support the video tag.

Video 4.2: An official product video demonstrating the Deerma NU06 blender's operation, including adding ingredients, starting the blending process with a double-click, and shaking the blender for optimal results. It also shows the versatility of making various juices, milkshakes, and sorbets.



Image 4.3: Lifestyle images showcasing the Deerma NU06 blender's portability, including its use by a pool, and a user drinking from the blending cup with the travel lid attached.



Image 4.4: Examples of different blended beverages, such as smoothies, juices, and sorbets, that can be prepared using the Deerma NU06 blender.

5. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your Deerma NU06 blender.

5.1 Cleaning the Blending Cup and Blade Assembly

1. After each use, detach the blending cup from the motor base.
2. Unscrew the blade assembly from the blending cup.
3. Rinse the blending cup and blade assembly under running water immediately after use to prevent food residue from drying.
4. Use a brush to carefully clean around the blades. **Exercise caution as blades are sharp.**
5. The blending cup and blade assembly are **NOT dishwasher safe**. Hand wash only.
6. Allow all parts to air dry completely before reassembling or storing.

5.2 Cleaning the Motor Base

1. The motor base contains electrical components and should **never be submerged in water or other liquids**.
2. Wipe the motor base with a damp cloth to remove any spills or residue.
3. Ensure the charging port is dry before charging.

6. TROUBLESHOOTING

If you encounter issues with your Deerma NU06 blender, refer to the following common problems and solutions:

- **Blender does not start:**
 - Ensure the blending cup is securely twisted and locked onto the motor base. The blender has a safety mechanism that prevents operation if not properly assembled.
 - Check if the battery is charged. Connect the blender to a USB power source and allow it to charge.
 - Ensure you are double-clicking the power button to start the blending cycle.
- **Blender stops during operation:**
 - The blender may have overheated. Allow it to cool down for 15-20 minutes before attempting to use it again.
 - Ingredients might be too large or the cup might be overfilled. Reduce the size of ingredients and ensure the liquid level is adequate.
 - The battery might be low. Recharge the blender.
- **Ingredients are not blending smoothly:**
 - Ensure ingredients are cut into small pieces.
 - Add more liquid to facilitate blending.
 - Gently shake the blender during operation to move ingredients towards the blades.
- **Leaking from the cup:**
 - Ensure the blade assembly is tightly screwed onto the blending cup.
 - Check the silicone gasket for proper placement and any damage.
 - Do not overfill the blending cup beyond the MAX line.

7. SPECIFICATIONS

Feature	Specification
Brand	Deerma
Model	NU06
Special Feature	Rechargeable Electric Juice Machine
Capacity	400 Milliliters
Product Dimensions (D x W x H)	11D x 11W x 10H Centimeters
Material	ABS PLASTIC
Included Components	1 x Juice blender
Power Source	Battery Powered

Wattage	150 Watts
Voltage	220 Volts
Item Weight	820 Grams
Dishwasher Safe	No

8. WARRANTY AND SUPPORT

The Deerma NU06 Electric Blender Juicer is designed for durability and performance. For specific warranty details, please refer to the warranty card included with your product or contact your retailer.

Importer Contact Information:

ALLIN IMPEX SERVICES PVT LTD
C-38, SECTOR-63, NOIDA, UP, 201301
Mobile: 9313132789
Email: sales@allinexporters.com

Manufacturer Contact Information:

Guangdong Deerma Technology Co., Ltd.
Foshan city, Guangdong Province, China

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question