

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Conair](#) /

> [Conair Hand-Held Turbo ExtremeSteam Garment Steamer Instruction Manual](#)

## Conair GS208GD

# Conair Hand-Held Turbo ExtremeSteam Garment Steamer Instruction Manual

MODEL: GS208GD

Brand: Conair

## INTRODUCTION

---

The Conair Hand-Held Turbo ExtremeSteam Garment Steamer (Model GS208GD) is a versatile 2-in-1 device designed for efficient and time-saving wrinkle removal. It combines the power of a garment steamer with the functionality of an iron, offering a portable solution for maintaining your clothing. This manual provides essential information for safe and effective operation, maintenance, and troubleshooting.

## IMPORTANT SAFETY INFORMATION

---

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Always plug the steamer into a grounded outlet. Do not operate with a damaged cord or plug.
- **Water Usage:** Use only distilled water in the water tank to prevent mineral buildup and ensure optimal performance.
- **Hot Surfaces & Steam:** The steamer head and steam will be extremely hot during operation. Always handle with care. Avoid direct contact with skin. **CAUTION: HIGH HEAT STEAM.**
- **Storage:** Always unplug the appliance and allow it to cool completely before storing. Empty the water tank after each use.
- **Children & Pets:** Keep the appliance out of reach of children and pets.

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your Conair Hand-Held Turbo ExtremeSteam Garment Steamer.



**Figure 1:** Front view of the Conair Hand-Held Turbo ExtremeSteam Garment Steamer, showcasing its sleek design and transparent water tank.

- **Steamer Head:** The heated plate and steam vents for wrinkle removal.
- **Water Tank:** Removable reservoir for distilled water.
- **Control Panel:** Buttons for power, mode selection (Low, Mid, High, Turbo), and steam activation.
- **Base:** Provides stable upright storage for the steamer.



**Figure 2:** Side view highlighting the control panel with mode and steam buttons.



**Figure 3:** Various attachments included for specialized steaming and ironing tasks.

## SETUP

1. **Fill Water Tank:** Remove the water tank from the main unit. Open the fill cap and fill the tank with distilled water. Do not overfill. Close the cap securely and reinsert the tank into the steamer until it clicks into place.
2. **Power Connection:** Plug the steamer into a standard 120V AC electrical outlet.
3. **Power On:** Press the "On/Off" button located on the handle. The indicator light will illuminate, and the steamer will begin to heat up.

## OPERATING INSTRUCTIONS

Your Conair steamer offers multiple modes for optimal garment care.

### Mode Selection

Use the "Mode" button to cycle through different steam intensity levels:

- **Low:** For delicate fabrics.
- **Mid:** For everyday garments.

- **High:** For heavier fabrics and stubborn wrinkles.
- **Turbo:** Provides an extra powerful burst of steam for quick wrinkle removal.

## Steaming Techniques

Once the steamer is heated and the desired mode is selected, press the "Steam" button to activate steam output.



**Figure 4:** Vertical steaming technique for hanging garments.

- **Vertical Steaming:** Hang the garment on a hanger. Hold the steamer head close to the fabric and move it in a downward motion, allowing the steam to relax the fibers.
- **Horizontal Ironing:** For a pressed finish, lay the garment flat on an ironing board or heat-resistant surface. Gently press the heated soleplate of the steamer onto the fabric while applying steam.



Figure 5: Horizontal ironing technique on an ironing board.

## Official Product Video: How to Use

Your browser does not support the video tag.

**Video 1:** This official video demonstrates the proper usage of the Conair 2-in-1 Steamer & Iron, including filling the water tank, selecting modes, and applying steam to garments.

## MAINTENANCE

- **Empty Water Tank:** After each use, unplug the steamer and allow it to cool. Remove the water tank and empty any remaining water. This prevents mineral buildup and prolongs the life of the appliance.
- **Cleaning:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners. For mineral buildup on the soleplate, gently wipe with a cloth dampened with distilled water and a small amount of white vinegar (ensure steamer is unplugged and cool).
- **Storage:** Store the steamer in a cool, dry place, preferably in its original packaging or a designated storage area. Ensure the cord is neatly wrapped and not kinked.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam output.	Water tank empty; not heated sufficiently; steam button not pressed.	Fill water tank; allow 10-15 seconds for heating; press and hold steam button.
Water leaking from steamer head.	Overfilled water tank; mineral buildup; not fully heated.	Do not overfill; use distilled water; allow full heat-up before use.
Steamer not turning on.	Not plugged in; power button not pressed firmly.	Ensure securely plugged into a working outlet; press On/Off button firmly.

## SPECIFICATIONS



Figure 6: Product dimensions for easy reference.

- **Model Number:** GS208GD
- **Wattage:** 1875 watts
- **Voltage:** 120 Volts
- **Water Tank Capacity:** 8.5 ounces
- **Item Weight:** Approximately 3.34 pounds (1.52 Kilograms)

- **Product Dimensions:** 8.5"L x 8.5"W x 6"H
- **UPC:** 074108450135

## WARRANTY AND SUPPORT

---

For warranty information, product registration, or customer support, please visit the official Conair website or refer to the warranty card included with your purchase.

**Online Support:** [www.conair.com](http://www.conair.com)