

[Manuals.plus](#) /

> [xasla](#) /

> Xasla 8-inch Portable Rechargeable Fan Instruction Manual

**xasla WH71**

# 8-inch Portable Rechargeable Fan Instruction Manual

Model: WH71 | Brand: xasla

## 1. INTRODUCTION

Thank you for purchasing the xasla 8-inch Portable Rechargeable Fan. This fan is designed for versatile use, offering adjustable height, oscillation, and multiple speed settings, powered by a long-lasting 10000mAh battery. Its compact and foldable design makes it ideal for various environments, including home, office, picnics, and camping. Please read this manual thoroughly before operation to ensure proper use and maintenance.



Image: The xasla 8-inch Portable Rechargeable Fan shown in its compact folded state, as a desk fan, and extended as a standing fan, demonstrating its versatility and portability.

## 2. SAFETY INSTRUCTIONS

---

- Do not insert fingers or any objects into the fan grille when the fan is operating.
- Keep the fan away from water or other liquids to prevent electric shock.
- Do not use the fan in extremely hot or humid environments.
- Ensure the fan is placed on a stable, flat surface to prevent tipping.

- Keep out of reach of children and pets.
- Use only the provided charging cable or a compatible Micro USB cable for charging.
- Do not attempt to disassemble or repair the fan yourself. Contact customer support if service is required.

### **3. PACKAGE CONTENTS**

---

- 1 x xasla 8-inch Portable Rechargeable Fan
- 1 x Micro USB Charging Cable
- 1 x User Manual

### **4. PRODUCT OVERVIEW**

---

The fan features a compact base that houses the controls and battery, an extendable aluminum rod for height adjustment, and an 8-inch fan head with a protective grille.

# Multiple Fans in One

Height adjustable and easy to move around



Image: The fan demonstrating its 'Multiple Fans in One' capability, easily transitioning between a compact desk fan and a tall standing fan.

## 5. SETUP

1. **Unfold the Fan:** Gently pull the fan head upwards from the base. The telescopic rod will extend.
2. **Adjust Height:** Continue pulling the fan head up until it reaches your desired height. The rod extends from 14.2 inches to 3.3 feet (43.7 inches).
3. **Position the Fan Head:** Tilt the fan head to direct airflow as needed. It offers 180° adjustable tilt.



Image: Visual representation of the fan's adjustable height, from a compact desk fan to a full-size standing fan.

## 6. OPERATING INSTRUCTIONS

The fan features intuitive controls located on its base.

- **Power On/Off & Speed Adjustment:** Press the 'POWER' button repeatedly to cycle through the 3 speed settings (Low, Medium, High) and to turn the fan off. Indicator lights (L, M, H) will illuminate to show the current speed.
- **Oscillation:** Press the '90°' button to activate or deactivate the 90-degree oscillation feature. This allows the fan to sweep air across a wider area.
- **Battery Indicator:** The base also features battery indicator lights (30%, 60%, 100%) to show the remaining battery level.

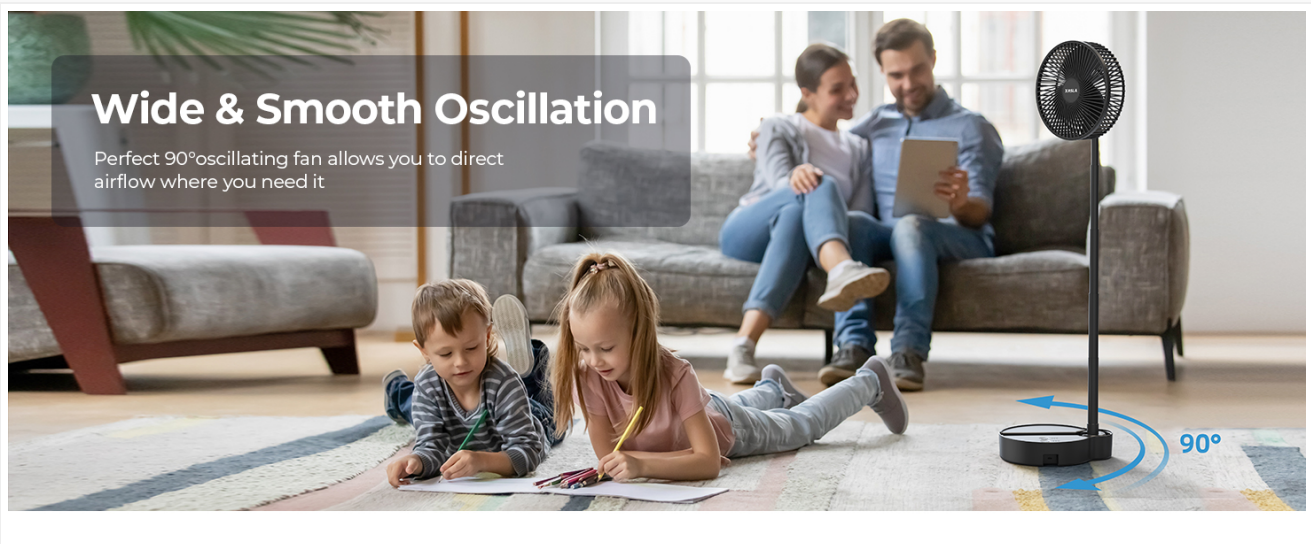


Image: The fan demonstrating its wide and smooth oscillation feature in a home environment.

Video: A demonstration of the fan's portability and battery operation, showcasing its use in various settings.

## 7. CHARGING

The fan is equipped with a 10000mAh battery, providing up to 20 hours of continuous operation on a full charge. It

supports fast charging via its Micro USB port.

- Connect the Micro USB charging cable to the fan's charging port on the base.
- Connect the other end of the cable to a USB power source (e.g., computer, power adapter, power bank).
- The battery indicator lights will show charging progress. A full charge typically takes about 6 hours.



Image: The fan connected to a power source via its Micro USB port for fast charging.

## 8. MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your fan.

- **Cleaning the Blades:** The fan grille and blades can be easily disassembled for cleaning. Gently twist and remove the front grille. Wipe the blades with a soft, damp cloth. Ensure all parts are completely dry before reassembling.
- **Cleaning the Exterior:** Use a soft, dry cloth to wipe the exterior of the fan. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, fold the fan into its compact form and store it in a cool, dry place away from direct sunlight.

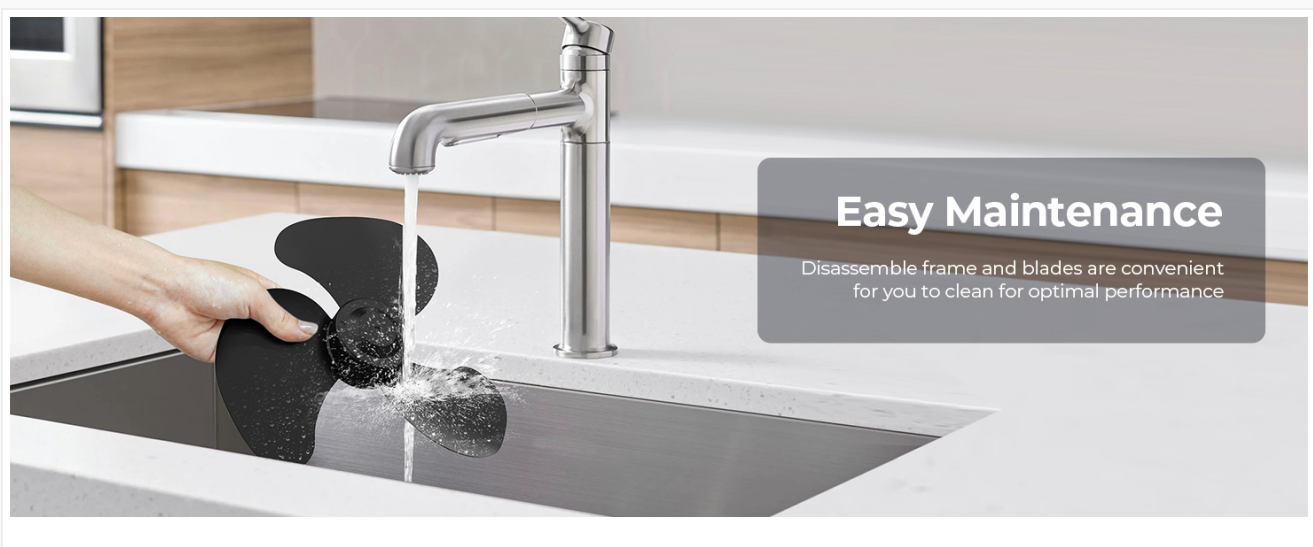


Image: Demonstration of easy maintenance, showing the fan blades being cleaned after disassembly.

## 9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Low battery.	Charge the fan fully.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Weak airflow.	Fan speed set to low.	Increase the fan speed.
	Fan blades are dirty.	Clean the fan blades and grille.
Fan is unstable.	Not on a flat surface.	Place the fan on a stable, flat surface.
	Telescopic rod not fully extended/locked.	Ensure the telescopic rod is fully extended and stable.

## 10. SPECIFICATIONS

Feature	Detail
Brand	xasla
Model Name	WH71
Product Dimensions	9.44"D x 8"W x 4.33"H (folded)
Adjustable Height	14.2 inches to 3.3 feet (43.7 inches)
Battery Capacity	10000mAh Lithium Polymer
Working Hours	Up to 20 hours (on low speed)
Charging Time	Approx. 6 hours (with 10W charging)
Charging Port	Micro USB
Speed Settings	3 (Low, Medium, High)
Oscillation	90°
Tilt Adjustment	180°
Noise Level	Less than 40dB (on high speed)
Weight	3.21 pounds (1.46 kg)
Material	Plastic

## 11. WARRANTY & SUPPORT

For warranty information or technical support, please refer to the product packaging or contact xasla customer service directly. Keep your purchase receipt for warranty claims.

