

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Laser](#) /
- › [Laser DVD CD Player HD012 User Manual](#)

Laser DVD-HD012

Laser DVD CD Player HD012 User Manual

Model: DVD-HD012

PRODUCT OVERVIEW

The Laser DVD CD Player HD012 is a versatile multi-region player designed to provide a comprehensive home entertainment experience. It supports a wide array of disc and digital media formats, ensuring compatibility with your existing media library. Equipped with HDMI and AV outputs, it offers flexible connectivity options for various television setups. Its compact design and user-friendly interface make it an ideal addition to any home cinema system.



Image: The Laser DVD CD Player HD012, a sleek black unit, is shown with its remote control resting on top. The player features a disc tray, USB port, and a digital display.

WHAT'S INCLUDED

Upon unboxing your Laser DVD CD Player HD012, please verify that all the following components are present:

- DVD Player (Model: DVD-HD012)
- Remote Control
- Wall Adapter (Power Supply)
- User Manual (this document)
- *Note: Batteries for the remote control are not included and must be purchased separately.*

What's Included

Everything you need to get started

- DVD Player
- Remote Control
- Batteries
- Wall Adapter
- User Manual



Image: A visual representation of the items included in the product package: the DVD player, its remote control, a wall power adapter, and the user manual, alongside the product packaging box.

SETUP GUIDE

1. Connecting the Player to Your Television

The Laser DVD CD Player HD012 offers multiple connectivity options to suit your television setup:

- **HDMI Connection (Recommended for High Definition):** For the best audio and video quality, connect an HDMI cable (not included) from the HDMI OUT port on the DVD player to an available HDMI IN port on your television. This single cable transmits both digital video and audio signals.
- **RCA Composite Connection (Standard Definition):** If your television does not have an HDMI port, or if you prefer an analog connection, use an RCA composite cable (not included). Connect the yellow video cable to the VIDEO OUT port on the DVD player and the yellow VIDEO IN port on your TV. Connect the red and white audio cables to the AUDIO OUT (R/L) ports on the DVD player and the corresponding red and white AUDIO IN (R/L) ports on your TV.

HDMI Output

High-Definition video from a single HDMI cable



Image: An illustration demonstrating the HDMI output capability of the DVD player, showing a television screen displaying content and the DVD player connected via an HDMI cable, emphasizing high-definition video from a single cable.

2. Powering On the Player

1. Connect the provided wall adapter to the DC IN port on the back of the DVD player.
2. Plug the wall adapter into a standard electrical outlet.
3. Press the **POWER** button on the front of the DVD player or on the remote control to turn the unit on. The display will illuminate.
4. Select the correct input source (HDMI or AV) on your television using your TV's remote control.

OPERATING INSTRUCTIONS

1. Disc Playback

1. Ensure the player is powered on and connected to your TV.
2. Press the **OPEN/CLOSE** button on the front panel or remote control to open the disc tray.
3. Carefully place a DVD or CD disc onto the tray with the label side facing up.
4. Press the **OPEN/CLOSE** button again to close the tray. The player will automatically begin reading the disc.
5. Use the remote control's **PLAY/PAUSE**, **STOP**, **REWIND**, and **FAST FORWARD** buttons to control playback.



Image: The DVD player and remote are shown with text indicating support for various video and additional media formats, including DVD-RW, VCD, CD-R, DivX, MP3, JPEG, AVI, MPEG, MPEG4, VOB, and FLV.

2. USB Media Playback

The player supports playback of digital media files from USB memory devices.

1. Insert your USB flash drive into the USB port on the front of the DVD player.
2. The player should automatically detect the USB device and display a menu for selecting media types (e.g., Photo, Music, Movie).
3. Navigate through the folders and files using the arrow keys on the remote control and press **ENTER** to select.

4. Press **PLAY** to start playback of the selected file.

3. Remote Control Functions

The included IR remote control provides full functionality for operating your DVD player. Key buttons include:

- **POWER:** Turns the player on or off.
- **OPEN/CLOSE:** Opens and closes the disc tray.
- **PLAY/PAUSE:** Starts or pauses playback.
- **STOP:** Stops playback.
- **PREV/NEXT:** Skips to the previous or next chapter/track.
- **REW/FF:** Rewinds or fast forwards through content.
- **VOL +/-:** Adjusts the volume (if connected directly to an audio system or TV via analog output).
- **SETUP:** Accesses the system settings menu.
- **TITLE/MENU:** Accesses the disc title or main menu.
- **USB:** Switches input to USB mode.

4. Region-Free Playback

This DVD player is designed to be multi-region (region-free), allowing you to play DVDs from any region worldwide (Region 0-6). This feature ensures broad compatibility with your international DVD collection.



Image: The DVD player and remote are depicted against a global map background, highlighting its "Region-Free Playback" capability, allowing users to enjoy DVDs from any part of the world, supporting both PAL and NTSC formats.

5. Supported Media Formats

The Laser DVD CD Player HD012 supports a wide range of disc and digital media formats:

Category	Supported Formats
Disc Formats	DVD-R/-RW, DVD-Video, DVD+R/+RW, CD, CD-R/RW, VCD, SVCD, HDCD
Video Formats (via USB)	AVI, DivX, MPEG, MPEG4, VOB, FLV
Audio Formats (via USB/Disc)	MP3, WMA, Dolby Digital, DTS
Image Formats (via USB)	JPEG

The player also features built-in Anti-Shock and Error-Correction technologies to ensure uninterrupted viewing and

listening pleasure.



Image: A living room setup showing the DVD player connected to a large television displaying a movie in Full HD 1080p, indicating an immersive audiovisual experience with Dolby 7.1 Surround Sound support.

MAINTENANCE

To ensure the longevity and optimal performance of your Laser DVD CD Player HD012, follow these maintenance guidelines:

- **Cleaning the Unit:** Use a soft, dry cloth to wipe the exterior of the player. Do not use liquid cleaners, abrasive cleaners, or chemical sprays, as these can damage the finish.
- **Disc Care:** Handle discs by their edges. Keep discs clean and free of dust, fingerprints, and scratches. Use a soft, lint-free cloth to wipe discs from the center outwards if cleaning is necessary.
- **Ventilation:** Ensure the player is placed in a well-ventilated area. Do not block any ventilation openings on the unit. Avoid placing it on soft surfaces like carpets or blankets that could obstruct airflow.
- **Storage:** When not in use for extended periods, disconnect the power adapter and store the player in a cool, dry

place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

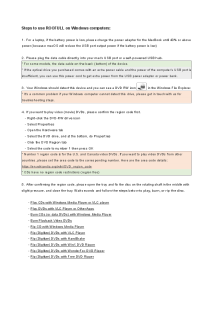


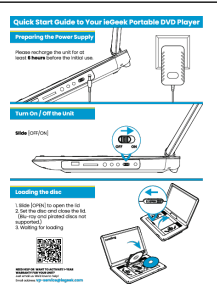
If you encounter issues with your DVD player, please refer to the following common problems and their solutions:

Problem	Possible Cause / Solution
No power	Ensure the power adapter is securely connected to the player and the electrical outlet. Check if the power outlet is functional by plugging in another device. Press the POWER button on the player or remote control.
No picture on TV	Verify that the HDMI or RCA cables are securely connected to both the player and the TV. Ensure your TV is set to the correct input source (e.g., HDMI 1, AV). Check if the disc is inserted correctly and is not damaged.
No sound	Check audio cable connections (HDMI or RCA). Increase the volume on your TV or audio receiver. Ensure the player's volume is not muted or set too low. Verify the audio settings in the player's setup menu.
Disc not playing / "No Disc" error	Ensure the disc is clean and free of scratches or smudges. Verify the disc is inserted correctly with the label side facing up. Check if the disc format is supported by the player (refer to Supported Media Formats section).
Remote control not working	Ensure fresh batteries are installed correctly (polarity). Point the remote directly at the player's IR sensor. Remove any obstacles between the remote and the player.

If the problem persists after trying these solutions, please contact customer support.

TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	Laser
Model	DVD-HD012
Compatible Devices	Television
Supported Media Types	CD, DVD, VCD (and various digital formats via USB as listed above)
Connector Types	HDMI, RCA (Composite), USB (1 port)
Supported Audio Formats	MP3, WMA, Dolby Digital, DTS
Audio Output Mode	Surround

	<p>ROOFULL External Drive: Guide to Using on Windows Computers</p> <p>Comprehensive guide on how to connect, play, burn, and rip CDs and DVDs using your ROOFULL external drive on Windows. Includes software recommendations like VLC, HandBrake, and detailed step-by-step instructions.</p>
	<p>KC-708 DVD Player User Guide</p> <p>User guide for the KC-708 DVD player, covering product specifications, troubleshooting, key functions, remote control operation, and TV connection methods via AV and HDMI.</p>
	<p>LONPOO LP-099 DVD Player User Manual and Setup Guide</p> <p>Explore the LONPOO LP-099 DVD Player user manual for comprehensive instructions on setup, operation, troubleshooting, and maintenance. Learn about its Full-HD 1080p up-conversion, USB 2.0 input, multi-format playback (DVD, CD, VCD, MP3, JPEG), and remote control functions. This guide covers system connections, player settings, safety warnings, and specifications for optimal performance.</p>
	<p>ieGeek Portable DVD Player Quick Start Guide</p> <p>Get started quickly with your ieGeek portable DVD player. This guide covers essential setup, power, operation, and disc loading instructions for a seamless user experience.</p>

Documents - Laser – DVD-HD012

Instruction Manual

Laser DVD Player
DVD-HD012

HDMI
HDMI (High Definition Multimedia Interface)

DOLBY DIGITAL

5.1 Channel

USB
UNIVERSAL SERIAL BUS

DIVX
LITE

DVD

MPEG-2

VCD

MP3

REMOTE CONTROL

LG

[\[pdf\]](#) User Manual Owner's Manual Guide

Instruction Manual DVD HD012 Laser Jun 7 2022 — Player QUICK USER GUIDE HD011 HDMI audio on the receiver see your s owners manual for more lasercos au data support |||

Instruction Manual QLaUsleCrKDVUDSPEIRayGerUIDE DVD-HD0 **DVD-HD012** 5.1
Channel InstructioQnUMICaKnUuaSIER GUIDEDVDDV-HDD-H0D12011 1 THE
FRONT PANEL THE REAR PANEL **DVD-HD012** 1: HDMI OUT 2: COMPONENT
OUT GREEN 3: COMPOSITE OUT RED 4: COMPONENT OUT BLUE 5:
COMPOSITE OUT WHITE 6: COMPONENT OUT ...

lang:en score:67 filesize: 2.58 M page count: 18 document date: 2021-12-13

Instruction Manual

Laser DVD Player
DVD-HD012



[\[pdf\]](#) User Manual

Instruction Manual DVD HD012 Laser 28 mag 2024 — HDMI can transmit both audio and video signals over a single cable If you have an capable receiver that support 18 pagine v1 01 web laserco au data ||| Instruction Manual QLaUsleCrKDVUDSPEIRayGerUIDE DVD-HD0 **DVD-HD012** 5.1 Channel InstructioQnUMICaKnUuaSIER GUIDEDVDDV-HDD-H0D12011 1 THE FRONT PANEL THE REAR PANEL **DVD-HD012** 1: HDMI OUT 2: COMPONENT OUT GREEN 3: COMPOSITE OUT RED 4: COMPONENT OUT BLUE 5: COMPOSITE OUT WHITE 6: COMPONENT OUT ...

lang:en **score:50** filesize: 1.97 M page_count: 18 document date: 2024-05-28