

Berlinger Haus BH/9157

Berlinger Haus Electric Coffee Maker BH/9157 User Manual

Model: BH/9157 | Capacity: 1.5 Liter

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Retain this manual for future reference.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Close supervision is necessary when the appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to 'off', then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- The carafe is designed for use with this appliance. It must never be used on a range top.
- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.
- This appliance has a grounded plug. Please ensure your wall outlet is properly grounded.

2. PRODUCT OVERVIEW

The Berlinger Haus Electric Coffee Maker BH/9157 is designed to brew delicious filter coffee with ease. It features a durable construction and user-friendly design.

Components

- Water Tank with Transparent Window
- Filter Basket Holder
- Reusable Filter
- Glass Carafe (1.5 Liter capacity) with Measuring Scale
- Non-stick Heating Plate
- Power Button with Blue LED Light
- Lid

Key Features

- **Non-stick heating plate:** Maintains coffee temperature after brewing for up to 40 minutes.
- **Overheating protection:** Equipped with a thermostat and thermal fuse for safety.
- **Anti-drip function:** Prevents dripping when the carafe is removed during brewing.
- **Transparent water window:** Clearly shows the water level in the machine.
- **High-temperature resistance:** Glass carafe withstands temperatures up to 120°C.



Figure 2.1: Front view of the Berlinger Haus Electric Coffee Maker BH/9157, showing the glass carafe, filter basket, and water level indicator.



Figure 2.2: The Berlinger Haus Electric Coffee Maker BH/9157 positioned on a kitchen counter, demonstrating its compact size and aesthetic appeal.

3. SETUP

Unpacking

1. Carefully remove all packaging materials from the coffee maker.
2. Inspect the appliance for any damage. Do not use if damaged.
3. Ensure all components listed in the 'Product Overview' section are present.



Figure 3.1: The Berlinger Haus Electric Coffee Maker BH/9157 in its original packaging, highlighting product features on the box.

Initial Cleaning

Before first use, it is recommended to clean the coffee maker to remove any manufacturing residues.

1. Wash the glass carafe, reusable filter, and filter basket holder in warm, soapy water. Rinse thoroughly and dry.
2. Fill the water tank with clean water up to the 1.5L mark.
3. Place the empty filter basket with the reusable filter into its holder.
4. Place the empty carafe on the heating plate.
5. Plug the coffee maker into a grounded electrical outlet.
6. Press the power button to start a brewing cycle with only water. Allow the cycle to complete.
7. Discard the water from the carafe. Repeat this process 2-3 times.
8. Your coffee maker is now ready for use.

4. OPERATING INSTRUCTIONS

Follow these steps to brew coffee:

1. **Fill Water Tank:** Open the lid and fill the water tank with fresh, cold water. Use the measuring scale on the carafe to determine the desired amount of coffee. Do not exceed the 'MAX' fill line (1.5L). The transparent window will show the water level.
2. **Add Coffee Grounds:** Place the reusable filter into the filter basket holder. Add the desired amount of ground coffee into the filter. A general guideline is one tablespoon of ground coffee per cup (150ml). Adjust to your taste.
3. **Position Carafe:** Ensure the glass carafe is correctly placed on the heating plate.
4. **Start Brewing:** Plug the coffee maker into a grounded electrical outlet. Press the power button. The blue LED light will illuminate, indicating that the brewing process has started.
5. **Brewing Cycle:** The coffee maker will automatically brew the coffee. The anti-drip function allows you to temporarily remove the carafe during brewing to pour a cup, but it is recommended to wait until the full cycle is complete for optimal flavor.
6. **Keep Warm:** Once brewing is complete, the coffee maker will automatically switch to the 'keep warm' function, maintaining the coffee's temperature for up to 40 minutes. The blue LED light will remain on.
7. **Serve:** Carefully remove the carafe from the heating plate and pour your coffee.
8. **Turn Off:** After serving or when the 'keep warm' cycle is finished, press the power button again to turn off the appliance. Unplug the coffee maker from the outlet.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

Daily Cleaning

1. Always unplug the coffee maker and allow it to cool completely before cleaning.
2. Remove the glass carafe, reusable filter, and filter basket holder. Discard used coffee grounds.
3. Wash the carafe, reusable filter, and filter basket holder in warm, soapy water. Rinse thoroughly and dry. These parts are generally dishwasher-safe on the top rack, but hand washing is recommended for longevity.
4. Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
5. Do not immerse the main unit in water or any other liquid.

Descaling (Every 2-4 Weeks, depending on water hardness)

Mineral deposits from water can build up in your coffee maker, affecting performance and coffee taste. Descaling helps remove these deposits.

1. Prepare a descaling solution: Mix white vinegar and water in a 1:2 ratio (e.g., 1 part vinegar to 2 parts water). For a 1.5L capacity, use approximately 500ml vinegar and 1000ml water.
2. Pour the solution into the water tank.
3. Place the empty carafe on the heating plate.
4. Press the power button to start a brewing cycle. Allow half of the solution to brew through, then turn off the coffee maker and let it sit for 15-20 minutes.
5. Turn the coffee maker back on and allow the remaining solution to brew through.
6. Discard the solution from the carafe.

- Rinse the coffee maker by running 2-3 full cycles with clean, fresh water to remove any vinegar residue.

6. TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the following table:

Problem	Possible Cause	Solution
Coffee maker does not turn on.	No power supply.	Check if the power cord is securely plugged into a working outlet.
Coffee is not brewing.	Water tank is empty.	Fill the water tank with water.
	Filter basket is not properly seated.	Ensure the filter basket is correctly in place.
Coffee tastes weak.	Not enough coffee grounds.	Increase the amount of coffee grounds.
	Coffee grounds are too coarse.	Use finer ground coffee.
Coffee overflows from filter basket.	Too many coffee grounds.	Reduce the amount of coffee grounds.
	Filter is clogged or dirty.	Clean the reusable filter or descale the machine.
Water leaks from the base.	Water tank overfilled.	Do not exceed the 'MAX' fill line.
	Carafe not properly placed.	Ensure the carafe is centered on the heating plate.

7. SPECIFICATIONS

Feature	Detail
Model Number	BH/9157
Brand	Berlinger Haus
Capacity	1.5 Liters
Color	Rose Gold
Material	Plastic, Stainless Steel
Product Dimensions (D x W x H)	24D x 20W x 1H centimetres
Coffee Maker Type	Filter Coffee Machine
Special Feature	Jug, Keep Warm Function, Anti-drip

Feature	Detail
Filter Type	Reusable
Human Interface Input	Buttons
Manufacturer	Home Impex Ltd

8. WARRANTY AND SUPPORT

Warranty Information

This Berlinger Haus Electric Coffee Maker BH/9157 comes with a **6-month warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty claims, or general inquiries, please contact your retailer or the manufacturer's customer service department.

Manufacturer: Home Impex Ltd

Please refer to the contact information provided with your purchase documentation or visit the official Berlinger Haus website for support details.