

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AQUAPHOR](#) /

› [AQUAPHOR City Filtered Water Bottle User Manual - Model 507880](#)

AQUAPHOR 507880

AQUAPHOR City Filtered Water Bottle User Manual

Model: 507880

This manual provides essential instructions for the safe and effective use, maintenance, and care of your AQUAPHOR City Filtered Water Bottle.

1. PRODUCT OVERVIEW

The AQUAPHOR City Filtered Water Bottle is a portable hydration solution designed for daily use. It features an integrated activated carbon filter to improve water quality by reducing chlorine and other impurities. Constructed from durable Tritan material, the bottle is BPA-free, lightweight, and designed to be leak-proof.



Image 1.1: Overview of the AQUAPHOR City Filtered Water Bottle, emphasizing its filtration, leak-proof design, durable Tritan material, and BPA-free composition.

The integrated filter is designed to provide fresh-tasting water by reducing substances that affect taste and odor. Each filter has a capacity of approximately 150 liters.



Image 1.2: Illustration detailing the filtration benefits, including chlorine reduction and improved water taste.

2. COMPONENTS

Your AQUAPHOR City Filtered Water Bottle package includes the following components:

- Water Bottle (Tritan, 500 ml / 16.9 oz capacity)
- Integrated Filter Cartridge
- Lid with drinking spout and carrying strap



Image 2.1: Disassembled view of the bottle components, including the filter and lid.

3. SETUP AND FIRST USE

3.1 Initial Cleaning

1. Before first use, disassemble all components: bottle, filter, and lid.
2. Wash the bottle and lid thoroughly with warm water and mild soap. Rinse completely.
3. *Do not wash the filter with soap.* Rinse the filter under cold running water for 1-2 minutes to remove any loose carbon particles.
4. Allow all parts to air dry completely before assembly.

3.2 Filter Installation

1. Ensure the filter is rinsed as described in Section 3.1.
2. Insert the filter cartridge firmly into the designated slot within the lid assembly. Ensure it is securely seated to prevent dislodging during use.

3. Screw the lid onto the bottle, ensuring a tight seal.



Image 3.1: Detail of the activated carbon filter within the lid.

4. OPERATION

4.1 Filling the Bottle

- Unscrew the lid from the bottle.
- Fill the bottle with tap water up to the maximum fill line (500 ml / 16.9 oz).
- Securely screw the lid back onto the bottle.

4.2 Drinking with the Filter

- To open the drinking spout, press the release button on the lid. The lid will flip open.
- Sip water through the spout. The water will pass through the activated carbon filter as you drink.
- After drinking, close the lid firmly until it clicks to ensure a leak-proof seal.



Image 4.1: The leak-proof lid mechanism.

5. MAINTENANCE AND CARE

5.1 Cleaning the Bottle and Lid

- The bottle and lid are **hand wash only**. Do not place them in a dishwasher.
- Wash with warm, soapy water and rinse thoroughly.
- Ensure all parts are completely dry before reassembling or storing to prevent odor or mold growth.

5.2 Filter Replacement

- The filter should be replaced after approximately 150 liters of water or every 1-2 months, whichever comes first, to maintain optimal filtration performance.
- To replace, unscrew the lid and carefully remove the old filter cartridge.
- Prepare the new filter by rinsing it under cold running water for 1-2 minutes.
- Insert the new filter firmly into the lid assembly until it is securely seated.
- Dispose of the old filter responsibly according to local regulations.

5.3 Storage

- When not in use for an extended period, ensure the bottle and filter are clean and completely dry.
- Store the bottle with the lid slightly ajar to allow air circulation.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Water is difficult to sip through the filter.	Filter may be clogged or nearing the end of its lifespan.	Rinse the filter thoroughly. If the issue persists, replace the filter cartridge.
Filter falls out of the lid.	Filter not securely installed in the lid.	Ensure the filter is pressed firmly into its designated slot in the lid until it clicks into place.
Bottle leaks.	Lid not properly closed or sealed.	Ensure the lid is screwed on tightly and the drinking spout is fully closed until it clicks. Check that the silicone seal is correctly positioned.
Unpleasant taste or odor in water.	Filter needs replacement or bottle needs cleaning.	Replace the filter cartridge. Thoroughly clean the bottle and lid as per Section 5.1.

7. SPECIFICATIONS

- **Model Name:** AQUAPHOR CITY BOTTLE
- **Model Number:** 507880
- **Capacity:** 500 ml (16.9 Ounces)
- **Material:** Tritan (BPA-free Plastic)
- **Product Dimensions:** 2.6"W x 9.1"H
- **Item Weight:** 7 ounces
- **Filter Type:** Activated Carbon
- **Filter Lifespan:** Approximately 150 liters or 1-2 months
- **Care Instructions:** Hand Wash Only

8. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your AQUAPHOR City Filtered Water Bottle, please refer to the product packaging for warranty details or contact AQUAPHOR customer service directly. Contact information can typically be found on the manufacturer's official website or on the product's retail page.

Always ensure you are using genuine AQUAPHOR replacement filters to maintain product performance and validity of any applicable warranty.