

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [Amtone](#) /

> Amtone AKB76037601 Replacement Remote Control for LG Smart TVs User Manual

Amtone AKB76037601

Amtone AKB76037601 Replacement Remote Control for LG Smart TVs User Manual

Model: AKB76037601

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Amtone AKB76037601 replacement remote control. Designed as a direct replacement for original LG Smart TV remotes, this unit offers full functionality without the need for complex programming. Please read this manual thoroughly to ensure optimal performance and longevity of your remote control.



This image displays the front and back of the Amtone AKB76037601 remote control, highlighting its ergonomic design and button layout.

COMPATIBILITY

The Amtone AKB76037601 remote control is compatible with a wide range of LG Smart TVs, including LED, OLED, LCD, WebOS, 4K UHD, 8K UHD, HDTV, and HDR models. It is designed to function with the following LG Smart TV series and models:

- **Compatible LG Smart TV Models:** 43UP7100ZUF, 43UP7560AUD, 50UP7100ZUF, 50UP7560AUD, 55UP7100ZUF, 55UP7560AUD, 65UP7100ZUF, 65UP7560AUD, 70UP7070PUE, 70UP7170ZUC, 70UP7570AUD, 75UP7070PUD, 75UP7170ZUC, 75UP7570AUE, 43UP7700PUB, 50UP7700PUB, 55UP7700PUB, 60UP7700PUB, 65UP7700PUA, 65UP7700PUB, 70UP7770PUB, 75UP7770PUB, 43UP8000PUA, 50UP8000PUA, 55UP8000PUA, 60UP8000PUA, 65UP8000PUA, 70UP8070PUA, 75UP8070PUA, 82UP8770PUA, 86UP8770PUA, and others.

Universal Remote Control for All LG Smart TVs

LED TV, OLED TV, LCD TV, Webos TV, QNED TV, NanoCell TV, 4K UHD TV, 8K UHD TV, HDR TV, HDTV, 3D TV



This image demonstrates the remote's broad compatibility with different LG Smart TV types, including LED, OLED, LCD, WebOS, 4K UHD, 8K UHD, HDR, HDTV, and 3D models.

KEY FEATURES

- **No Programming Required:** Functions immediately upon battery installation.
- **Dedicated App Buttons:** Quick access to Netflix, Prime Video, Disney+, and LG Channels.
- **Wide Compatibility:** Supports various LG Smart TV models (LED, OLED, LCD, WebOS, 4K/8K UHD, HDR).
- **Durable Construction:** Made from high-quality ABS material for extended lifespan.
- **Ergonomic Design:** Comfortable to hold and easy to operate.
- **Extended Range:** Effective transmission distance up to 33 feet (10 meters).



Farther Distance Transmission

Work at a distance up to 33 feet.

The image illustrates the remote control's effective operating range, capable of transmitting signals up to 33 feet (10 meters) for convenient use from various positions in a room.



This image shows the remote control held in a hand, emphasizing its comfortable size (6.69 inches long, 1.81 inches wide), easy grip, soft-touch buttons, and robust ABS material construction.

INSTALLATION AND SETUP

Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Important: Ensure correct battery polarity. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period.

No Programming or Pairing Needed

Please install 2x AAA batteries to play

(Package not included batteries)



A visual guide demonstrating how to open the battery compartment cover and correctly insert two AAA batteries, ensuring proper polarity for the remote control to function.

OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for immediate use with your compatible LG Smart TV. Point the remote directly at your television's infrared receiver.

Button Functions Overview



A detailed view of the remote control, emphasizing the dedicated quick-access buttons for popular streaming services like Netflix, Prime Video, Disney+, and LG Channels, along with navigation controls.

- **Power Button ():** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down ():** Adjusts the TV volume.
- **Channel Up/Down (▲/▼):** Changes TV channels.
- **Mute Button ():** Mutes or unmutes the TV audio.

- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and selects options.
- **Back Button (↶):** Returns to the previous screen or menu.
- **Home Button (⌂):** Accesses the TV's Smart Home interface.
- **Input/Source Button (□):** Changes the input source (HDMI, AV, etc.).
- **Dedicated App Buttons (Netflix, Prime Video, Disney+, LG Channels):** Launches the respective streaming applications directly.
- **Guide Button:** Displays the electronic program guide.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as this can damage internal components.

TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common problems and solutions:

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none"> ◦ Check if the batteries are inserted correctly with the correct polarity. ◦ Replace old batteries with new AAA alkaline batteries. ◦ Ensure there are no obstructions between the remote and the TV's infrared sensor. ◦ Confirm the remote is pointed directly at the TV.
Some buttons are not working.	<ul style="list-style-type: none"> ◦ This remote is a direct replacement and does not require programming. If specific buttons are unresponsive, ensure your TV model is listed in the compatibility section. ◦ Clean the remote's surface, especially around the unresponsive buttons, to remove any debris. ◦ Replace batteries, as low power can sometimes affect button responsiveness.
Remote works intermittently.	<ul style="list-style-type: none"> ◦ This often indicates low battery power. Replace both AAA batteries. ◦ Ensure you are within the effective operating range (up to 33 feet). ◦ Check for strong light sources (like direct sunlight or fluorescent lights) that might interfere with the infrared signal.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	AKB76037601 (also compatible with AKB76040302)
Brand	Amtone
Compatible Brand	LG Smart TVs
Power Source	2 x 1.5V AAA Alkaline Batteries (not included)

Feature	Detail
Material	ABS Material
Color	Black
Product Dimensions	7 x 2 x 1 inches (approximately 17.8 x 5.1 x 2.5 cm)
Item Weight	2.39 ounces (approximately 67.7 grams)
Special Feature	No Programming Required
Max Number of Supported Devices	1 (LG Smart TV)

WARRANTY AND CUSTOMER SUPPORT

For specific warranty information or if you require further assistance, please refer to the product packaging or contact the seller directly. Amtone is committed to providing high-quality replacement products and customer satisfaction.

If you are unsure whether this remote is suitable for your specific LG TV model, please contact customer service for professional guidance.