

PANTUM P3018DW

PANTUM P3018DW Wireless Duplex Laser Printer User Manual

Model: P3018DW

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your PANTUM P3018DW Wireless Duplex Laser Printer. Please read this manual thoroughly before using the printer to ensure proper and safe operation. Keep this manual for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury to persons.

- Do not place the printer on an unstable cart, stand, or table.
- Do not block or cover the slots and openings in the printer.
- Use only the type of power source indicated on the printer's label.
- Unplug the printer from the wall outlet before cleaning.
- Do not attempt to service the printer yourself. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are included in the package:

- PANTUM P3018DW Laser Printer
- Starter Toner Cartridge (1000 pages yield)
- Starter Drum Unit (9000 pages yield)
- USB Cable
- Power Cord
- User Manual (this document)

4. PRODUCT OVERVIEW

The PANTUM P3018DW is a monochrome laser printer designed for efficient printing with automatic duplex capability and wireless connectivity.



Front view of the PANTUM P3018DW Laser Printer, showing the paper tray, output tray, and control panel.

Design compact et élégant



The PANTUM P3018DW printer in a compact office setting, illustrating its dimensions: 40.8 cm (depth) x 43.3 cm (width) x 29.5 cm (height).

5. SETUP

5.1 Unpacking

1. Remove the printer from its packaging.
2. Remove all protective tapes and packing materials from the exterior and interior of the printer.

5.2 Toner Cartridge and Drum Unit Installation

The PANTUM P3018DW uses a separate toner cartridge and drum unit system.

Cartouche de toner à haut rendement

Unité tambour et cartouche de toner séparées

Cartouche de départ 1000pages

Démarrage de l'unité tambour 9000pages

(Pre-installé dans l'imprimante)

Cartouche de toner originale Pantum

1500 pages	3000 pages	6000 pages	12000 pages
TL-410	TL-410H	TL-410X	DL-410



Image illustrating the separate high-yield toner cartridge and drum unit for the PANTUM P3018DW printer. The starter toner provides 1000 pages, and the drum unit provides 9000 pages. Compatible original toner cartridges include TL-410 (1500 pages), TL-410H (3000 pages), and TL-410X (6000 pages).

1. Open the front cover of the printer.
2. Carefully insert the drum unit into the printer until it clicks into place.
3. Unpack the toner cartridge and gently shake it horizontally several times.
4. Insert the toner cartridge into the drum unit until it locks securely.
5. Close the front cover.

5.3 Power Connection

1. Connect the power cord to the printer and then to a grounded electrical outlet.
2. Press the power button to turn on the printer.

5.4 Driver Installation

The PANTUM P3018DW features a one-step driver installation process.

1. Connect the printer to your computer using the provided USB cable.
2. The operating system should automatically detect the printer and initiate driver installation. Follow the on-screen prompts.
3. Alternatively, download the latest drivers from the official PANTUM website.

5.5 Wi-Fi Setup

The printer supports easy Wi-Fi configuration for convenient wireless printing.

Impression sans fil pratique

Impression directe de documents de bureau à partir d'un appareil mobile

Routeur sans fil (la 5G n'est pas prise en charge)

Hotspot Wi-Fi



Hotspot Wi-Fi : DIRECT-***** Mot de passe initial : 12345678

Connectez-vous d'abord au Hotspot Wi-Fi de l'imprimante avant d'imprimer.

Illustration of the PANTUM P3018DW printer connected wirelessly to a network via a router, enabling printing from a laptop, smartphone, or tablet. The image also shows the printer's Wi-Fi Direct details: Wi-Fi Hotspot: DIRECT_*****, Initial Password: 12345678. Connect to the printer's Wi-Fi Hotspot before printing.

1. Ensure your printer is powered on.
2. Access the printer's control panel or use the PANTUM mobile application for Wi-Fi setup.
3. Follow the instructions to connect the printer to your wireless network.
4. For Wi-Fi Direct printing, connect your device directly to the printer's Wi-Fi hotspot (SSID and password typically found on a label or the printer's display).

6. OPERATING INSTRUCTIONS

6.1 Loading Paper

1. Open the paper tray.
2. Adjust the paper guides to the size of the paper you are loading.
3. Load paper into the tray, ensuring it is flat and not exceeding the maximum fill line. The maximum sheet capacity is 250 sheets.
4. Close the paper tray.

6.2 Printing

The PANTUM P3018DW offers fast monochrome printing at up to 30 pages per minute (A4) or 32 pages per minute (Letter), with a first print out time of less than 7.8 seconds.

Vitesse élevée



≤ **7.8** s

Temps de sortie de la première impression

30PPM_(A4) / 32PPM_(Letter)



The image shows a Pantum P3018DW printer in a dark setting, illuminated by glowing blue arcs. The printer is shown from a three-quarter front view, with a document being printed and another document resting on the output tray. The documents feature various test patterns, including text and bar charts. The printer's brand name 'PANTUM' is visible on the front panel.

The PANTUM P3018DW printer demonstrating its high-speed printing capability, with a first page out time of less than 7.8 seconds and print speeds of 30 PPM (A4) / 32 PPM (Letter).

Standard Printing

1. From your computer or mobile device, open the document you wish to print.
2. Select 'Print' from the application's menu.
3. Choose the PANTUM P3018DW from the list of available printers.
4. Adjust print settings as needed (e.g., number of copies, paper size).
5. Click 'Print'.

Automatic Duplex Printing

The printer supports automatic two-sided printing.

Impression recto-verso automatique



The PANTUM P3018DW printer performing automatic duplex (two-sided) printing, showing paper being fed and outputted.

1. When printing, select the 'Print on both sides' or 'Duplex Printing' option in your printer settings.
2. The printer will automatically flip the paper to print on both sides.

Mobile Printing (PANTUM APP)

Print directly from your smartphone or tablet using the PANTUM APP.

● Kabelloses Drucken mit Pantum APP



The PANTUM P3018DW printer with a smartphone displaying the PANTUM APP interface, indicating wireless printing capabilities.

PANTUM APP


Verwalten Sie Ihre Druckvorgänge
effizient Aufgaben zur Pantum-Anwendung



Works with
Apple AirPrint

mopria

Haftungsausschluss: Alle Warenzeichen und Warenzeichen sind die Eigentum ihrer jeweiligen Eigentümer und dienen nur zu beschreibenden Zwecken.

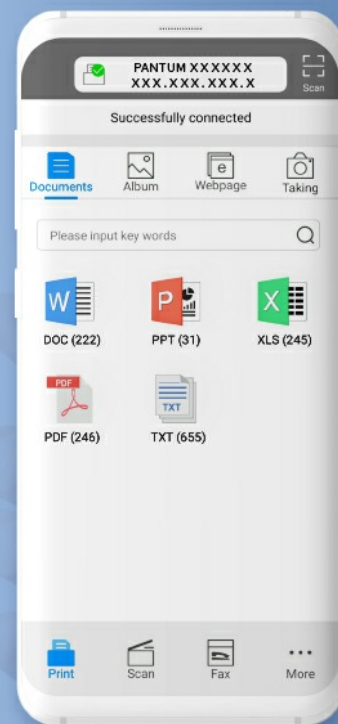

A smartphone screen showing the PANTUM APP interface, which allows users to efficiently manage print jobs and print various document types (DOC, PPT, XLS, PDF, TXT) directly from their mobile device. The app also supports Apple AirPrint and Mopria.

1. Download and install the PANTUM APP from your device's app store.
2. Ensure your mobile device is connected to the same Wi-Fi network as the printer, or directly to the printer's Wi-Fi hotspot.
3. Open the PANTUM APP and select the document or image you wish to print.
4. Follow the app's instructions to send the print job to the printer.

7. MAINTENANCE

7.1 Replacing Toner Cartridge and Drum Unit

When the toner is low or the drum unit reaches its end of life, the printer will indicate a replacement is needed. Refer to section 5.2 for installation steps.

Compatible Toner Cartridges:

- TL-410 (1,500 pages)
- TL-410H (3,000 pages)
- TL-410X (6,000 pages)

Compatible Drum Unit:

- DL-410 (12,000 pages)

7.2 Cleaning the Printer

Regular cleaning helps maintain print quality and extends the printer's lifespan.

1. Turn off the printer and unplug it from the power outlet.
2. Use a soft, lint-free cloth dampened with water to wipe the exterior of the printer.
3. Do not use abrasive cleaners or solvents.
4. For internal cleaning, consult the detailed cleaning instructions on the PANTUM website or contact support.

8. TROUBLESHOOTING

This section provides solutions to common printer issues.

8.1 Printer Not Responding

- Ensure the printer is powered on and properly connected to the power outlet.
- Check the USB cable connection to the computer or verify Wi-Fi connectivity.
- Restart the printer and your computer/mobile device.
- Check the printer's control panel for any error messages.

8.2 Poor Print Quality

- Check the toner cartridge level and replace if low.
- Ensure the drum unit is properly installed and not damaged.
- Clean the printer's internal components as per maintenance guidelines.
- Use recommended paper types and ensure they are not damp or curled.

8.3 Paper Jams

- Turn off the printer and unplug it.
- Carefully open all covers and remove any jammed paper, pulling in the direction of the paper path.
- Ensure paper is loaded correctly in the tray and not overfilled.
- Use paper that meets the printer's specifications.

9. SPECIFICATIONS

Feature	Specification
Model Name	P3018DW
Print Technology	Laser
Print Output	Monochrome
Max Print Speed (Monochrome)	30 PPM (A4) / 32 PPM (Letter)
First Print Out Time	< 7.8 seconds
Max Print Resolution	1200 dpi
Duplex Printing	Automatic
Connectivity	USB, Wi-Fi
Compatible Devices	Laptop, PC, Smartphone, Tablet
Compatible Operating Systems	Android, Chrome OS (and others via driver)
Max Media Size	8.5 x 11 inches (A4)
Sheet Size	A4
Max Sheet Capacity	250 sheets
Dimensions (D x W x H)	40.8 cm x 43.3 cm x 29.5 cm
Item Weight	6.8 Kilograms
Special Features	Automatic Duplexing, Automatic Sleep Mode, Two-line LCD Control Panel, NFC Touch Print, Silent Printing, Ethernet Network, Optional High-Capacity Cartridges, Low Paper Jam Design

10. WARRANTY AND SUPPORT

10.1 Warranty Information




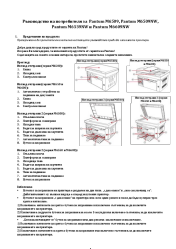
The PANTUM P3018DW printer comes with a standard one-year warranty against manufacturing defects from the date of purchase. Please retain your proof of purchase for warranty claims.

10.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please visit the official PANTUM website or contact PANTUM Online Customer Service. Support resources, including driver downloads and FAQs, are available online.

© 2025 PANTUM. All rights reserved.

Related Documents - P3018DW

	<p>Pantum P2200/P2500/P2600 Series Monochrome Laser Printer User Guide</p> <p>Comprehensive user guide for Pantum P2200, P2500, and P2600 series monochrome laser printers. Covers setup, operation, maintenance, safety, and troubleshooting. Visit Pantum at www.pantum.com.</p>
	<p>Pantum P3010/P3060/P3300 Series Monochrome Laser Printer User Guide</p> <p>User guide for Pantum P3010, P3060, P3300, L2300, L2350, M118, M15 series monochrome laser printers. Covers setup, operation, maintenance, and troubleshooting for optimal performance.</p>
	<p>Pantum M6200/M6500/M6550 & M6600 Series Monochrome Laser MFP User Guide</p> <p>Comprehensive user guide for Pantum M6200, M6500, M6550, and M6600 series monochrome laser MFPs. Covers setup, operation, maintenance, safety precautions, and troubleshooting.</p>
	<p>Ръководство за потребителя на Pantum M6509 Series: Настройка, Работа и Поддръжка</p> <p>Изчерпателно ръководство за потребителя за многофункционални принтери Pantum M6509, M6509NW, M6559NW и M6609NW. Обхваща настройка, работа, поддръжка, отстраняване на неизправности и регулаторна информация.</p>

	<p>Руководство пользователя Pantum M6200/M6500/M6550/M6600 Series</p> <p>Полное руководство пользователя для монохромных лазерных многофункциональных устройств (МФУ) Pantum серий M6200, M6500, M6550 и M6600. Содержит инструкции по установке, эксплуатации, обслуживанию и устранению неисправностей.</p>
	<p>Pantum M6500/M6550/M6600 Series Printers FAQ and Troubleshooting Guide</p> <p>Find answers to common questions about Pantum M6500, M6550, and M6600 series printers, covering setup, wireless, cartridges, paper jams, compatibility, mobile printing, and troubleshooting. Get quick solutions for your Pantum printer.</p>

Documents - PANTUM – P3018DW



[Pantum P3010/P3060/P3300 Series Monochrome Laser Printer User Guide](#)

User guide for Pantum P3010, P3060, P3300, L2300, L2350, M118, M15 series monochrome laser printers. Covers setup, operation, maintenance, and troubleshooting for optimal performance.

lang:en score:30 filesize: 4.64 M page_count: 119 document date: 2023-08-23



[\[pdf\] Test Report](#)

User Test Report Zhuhai Pantum Electronics Co Ltd 5103SX1 Monochrome Laser Printer 2AEGO5103SX1 5103sx1

Zhuhai Pantum Electronics Co., Ltd. TEST REPORT SCOPE OF WORK FCC TestingP3300DW, P3010D, P3011D, P ... 8DN, P3069DN, PT5S-00S3-51, P3010DW, P3011DW, P3012DW, P3013DW, P3014DW, P3016DW, P3015DW, P3017DW, **P3018DW**, P3019DW, P3060DW, P3061DW, P3062DW, P3063DW, P3064DW, P3065DW, P3066DW, P3067DW, P3068DW, P...

lang:de score:26 filesize: 758.36 K page_count: 28 document date: 2022-04-09

Zhuhai Pantum Electronics Co., Ltd. Add: Area A, 3rd floor, Building No.1, No3883, Zhuhai, Avenue Zh ... , P3307DN, P3308D, P3308DN Model with WIFI function : P3010DW, P3012DW, P3016DW, P3015DW, P3017DW, **P3018DW**, P3300DW, P3302DW, P3306DW, P3305DW, P3307DW, P3308DW Has been designed and manufactured in...

lang:en score:26 filesize: 143.75 K page_count: 1 document date: 2021-12-21

P3018DN P3018DW P3300D P3300DN P3300DW 28808cdn vseinstrumenti ru img certificate compliance
2088781 28808 |||

lang:en score:12 filesize: 1.1 M page count: 1 document date: 2022-02-11