



Manuals.plus /

› USARMT /

› USARMT Universal Remote Control for Hisense Android Smart TVs Instruction Manual

## USARMT Universal Remote Control

# USARMT Universal Remote Control for Hisense Android Smart TVs

Instruction Manual

## 1. INTRODUCTION

---

This manual provides instructions for the USARMT Universal Remote Control, designed for use with various Hisense Android Smart TV models. This remote is pre-programmed and requires no setup beyond battery installation.

## 2. SAFETY INFORMATION

---

- Do not expose the remote control to direct sunlight, high humidity, or extreme temperatures.
- Avoid dropping or subjecting the remote control to strong impacts.
- Do not attempt to disassemble or modify the remote control.
- Keep batteries out of reach of children.
- Dispose of used batteries according to local regulations.

## 3. PACKAGE CONTENTS

---

The package should contain:

- 1 x USARMT Universal Remote Control

*Note: Batteries (AAA) and a user manual are not included in the package.*

## 4. PRODUCT OVERVIEW

---

The USARMT Universal Remote Control is designed to replace various Hisense Android Smart TV remotes. It features dedicated buttons for popular streaming services and standard TV controls.



Image 1: Front and side view of the USARMT Universal Remote Control. The remote is black with various buttons for power, numbers, navigation, volume, channel, and dedicated app buttons for Netflix, Prime Video, YouTube, and Google Play.

Button Functions:

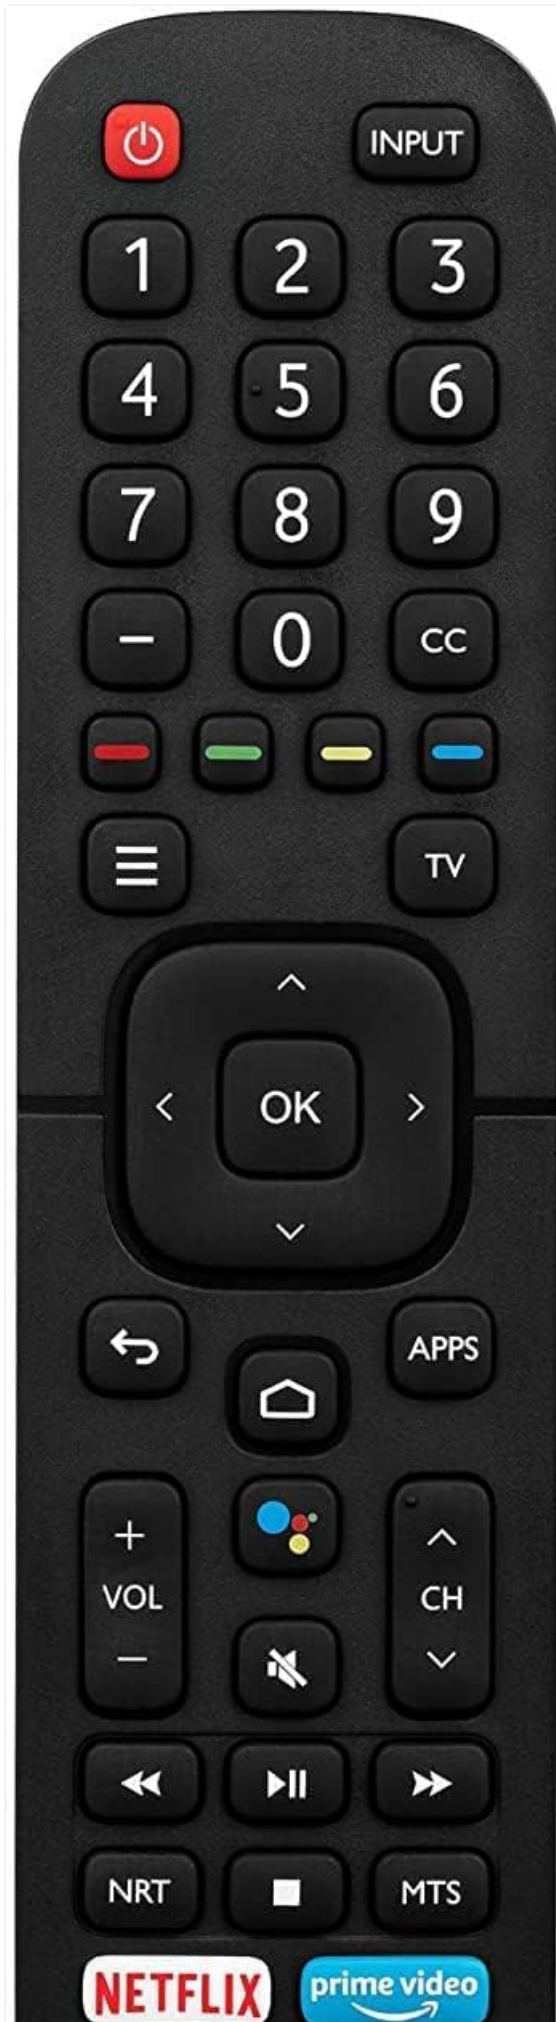




Image 2: Front view of the USARMT Universal Remote Control, highlighting the button layout. Key buttons include Power (red), Input, Number Pad (0-9), Navigation (Up, Down, Left, Right, OK), Volume Up/Down, Channel Up/Down, and quick access buttons for Netflix, Prime Video, YouTube, and Google Play.

- **Power Button:** Turns the TV on or off.
- **Input Button:** Selects the input source.
- **Number Pad (0-9):** Direct channel selection.
- **Navigation Buttons (Up/Down/Left/Right/OK):** Navigates menus and confirms selections.
- **Volume Up/Down:** Adjusts the TV volume.
- **Channel Up/Down:** Changes TV channels.
- **Netflix, Prime Video, YouTube, Google Play:** Direct access to these streaming applications.
- *Note: This remote does not support voice search functions.*

## 5. SETUP

---

### 5.1 Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

### 5.2 Initial Use

This remote control is pre-programmed for compatible Hisense Android Smart TVs. No additional setup or programming is required. Simply insert the batteries, and the remote is ready for use.

## 6. OPERATING INSTRUCTIONS

---

Point the remote control directly at your Hisense Android Smart TV's infrared receiver.

- **Power On/Off:** Press the **Power** button.
- **Channel Selection:** Use the number pad for direct channel input or the **CH Up/Down** buttons to cycle through channels.
- **Volume Adjustment:** Use the **VOL Up/Down** buttons.
- **Menu Navigation:** Use the **Up, Down, Left, Right** arrow buttons to navigate menus and the **OK** button to confirm selections.
- **App Access:** Press the dedicated **Netflix, Prime Video, YouTube, or Google Play** buttons to launch these applications directly.

## 7. COMPATIBLE HISENSE TV MODELS

---

This remote control is compatible with a wide range of Hisense Android Smart TV models, including but not limited to:

- H6570G/H8G/H9G series
- 32H5540F, 40H5609, 40H5500F, 40H5520F, 40H5530F, 40H5540F
- 32H5550F, 32H5560F, 32H5570F, 32H5580F, 32H5590F
- 40H5550F, 40H5560F, 40H5570F, 40H5580F, 40H5590F
- 32H56G, 40H56G
- 50Q7G, 55Q7G, 65Q7G, 75Q7G
- 50Q8G, 55Q8G, 65Q8G, 75Q8G
- 50H8G, 55H8G, 65H8G, 75H8G
- 32E5600EU, 40E5600EU
- HU43E5600FFWA, HU32E5600FHWA
- Replaces remotes: ERF2G60H, ERF2K60H, ERF2A60, EN2A27, EN2A127H, EN2A27HT, EN2AN27H, EN2AS27H, EN2B27, EN2C27, EN2D27, EN2G27, EN33922A, EN33924HS, EN33925A, EN33926A, EN33927A, EN2BN27H

## 8. TROUBLESHOOTING

---

Problem	Solution
Remote is not working.	<ul style="list-style-type: none"><li>• Ensure batteries are inserted correctly with the correct polarity.</li><li>• Replace old batteries with new AAA batteries.</li><li>• Make sure there are no obstructions between the remote and the TV's infrared receiver.</li><li>• Point the remote directly at the TV.</li></ul>
Specific buttons are not responding.	<ul style="list-style-type: none"><li>• Check if the remote is clean and free from debris that might obstruct button presses.</li><li>• Ensure the TV is powered on and functioning correctly.</li></ul>
No voice search function.	This remote model does not support voice search capabilities.

## 9. SPECIFICATIONS

---

- **Brand:** USARMT
- **Special Feature:** Universal
- **Color:** Black
- **Max Number of Supported Devices:** 1 (Television)
- **Connectivity Technology:** Infrared
- **Button Quantity:** 20
- **Controller Type:** Button Control
- **Battery Type:** AAA (2 required, not included)

## 10. MAINTENANCE

---

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance degrades. Always replace both batteries at the same time.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage.

## 11. WARRANTY AND SUPPORT

---

This product comes with a 30-Day Hassle-Free Return Policy. For any issues or support inquiries, please refer to your purchase platform or contact the seller directly.