

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Cuifati](#) /
- › [Cuifati 6.8-Inch Portable DVD Player User Manual](#)

Cuifati 6.8-Inch Portable DVD Player

Cuifati 6.8-Inch Portable DVD Player User Manual

Model: 6.8-Inch Portable DVD Player (ASIN: B09RZRK8KX)

1. PRODUCT OVERVIEW

The Cuifati 6.8-inch Portable DVD Player is a versatile high-definition playback device designed for various environments, including home, office, and car use. It combines a DVD player, TV player, FM radio receiver, card reader, and game console into one compact unit. Featuring a rechargeable lithium battery, it offers extended playback time for portable convenience.



Image: The Cuifati 6.8-inch Portable DVD Player in its open position, showcasing the screen and control panel. The

device features a blue base and a black frame around the screen, presented against a stylized blue background.

Package Contents:

- Cuifati 6.8-Inch Portable DVD Player
- Remote Control (with 1 AAA battery included)
- AC Power Adapter (110-240V)
- Car Power Adapter
- Audio/Video (AV) Cable
- Game Controller
- External Antenna
- User Manual (this document)



Image: A comprehensive view of the Cuifati 6.8-inch Portable DVD Player along with all its included accessories, such as the remote control, AC power adapter, car charger, AV cable, game controller, and external antenna.

2. SETUP

2.1 Charging the Device

Before initial use, fully charge the built-in lithium battery. Connect the provided AC power adapter to the player's power input and then to a standard wall outlet (110-240V). The device can also be charged using

the car power adapter for in-vehicle use. A full charge provides approximately 30-60 minutes of continuous playback.



Image: Illustration of the Cuifati Portable DVD Player's power options, highlighting its compatibility with car chargers, AC power, and its integrated 1500mAh lithium battery.

2.2 Remote Control Battery Installation

The remote control requires one AAA battery, which is included. Open the battery compartment on the back of the remote and insert the AAA battery, ensuring correct polarity.



Image: A detailed view of the remote control for the Cuiyadi Portable DVD Player, displaying its array of buttons for power, menu navigation, volume control, and media playback.

2.3 Connecting the External Antenna (for TV Function)

To use the TV function, connect the external antenna to the designated antenna input port on the side of

the DVD player. Extend the antenna for optimal signal reception.



Image: The external antenna provided with the Cuifati Portable DVD Player, consisting of a black telescopic rod and a magnetic base for stable placement, connected by a cable.

3. OPERATING INSTRUCTIONS

3.1 Powering On/Off

Press the **POWER** button on the device or the remote control to turn the player on or off.

3.2 Loading a Disc

1. Open the disc tray cover.
2. **Important:** Ensure to remove any protective card or sticker from the disc tray before inserting a disc.
3. Place the DVD or CD onto the spindle with the label side facing up.
4. Gently press the disc down until it clicks into place.
5. Close the disc tray cover. The player will automatically begin reading the disc.



Image: A close-up view of the disc tray on the Cuifati Portable DVD Player, highlighting a yellow warning label that advises users to remove the protective card before attempting to play a disc.

3.3 Basic Playback Functions

- **Play/Pause:** Press the **PLAY/PAUSE** button.
- **Stop:** Press the **STOP** button.
- **Fast Forward/Rewind:** Use the **FF/REW** buttons.
- **Next/Previous Track:** Use the **NEXT/PREV** buttons.
- **Volume Control:** Use the **VOL+** and **VOL-** buttons.

The player supports DVD, DVD±R, DVD±RW, CD-R, and VCD formats.

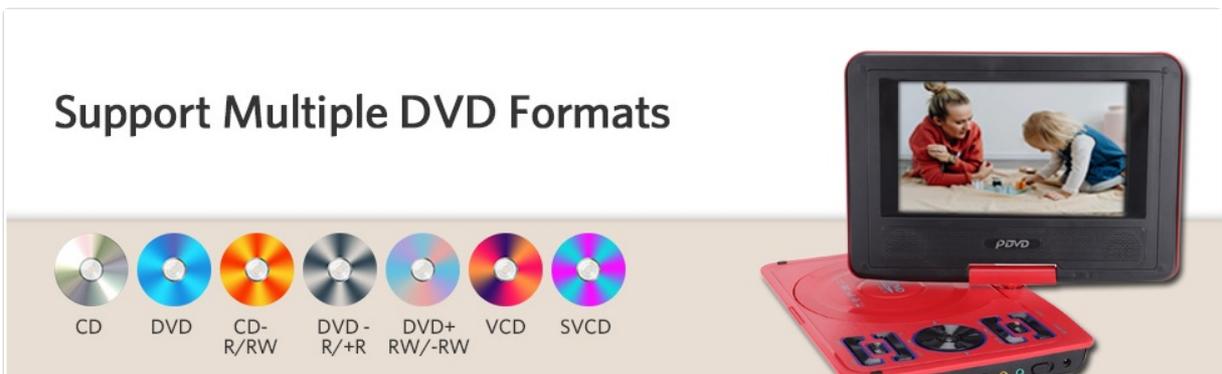


Image: An illustration demonstrating the wide range of DVD formats supported by the Cuifati Portable DVD Player, including CD, DVD, CD-R/RW, DVD+R/RW, VCD, and SVCD.

3.4 Using the TV Function

After connecting the external antenna, switch the player to TV mode. Use the **MENU** button to access TV settings and perform an auto-scan for available channels. The player supports PAL/NTSC/SECAM full system TV standards.

3.5 Media Playback from USB/SD/MMC Cards

Insert a USB drive into the USB port or an SD/MMC card into the card reader slot. The player will automatically detect the media. Use the **SOURCE** or **MODE** button to select the appropriate input (USB/SD/MMC) and navigate through your movies, music, or photos.

3.6 Game Function

Connect the included game controller to the player. Switch to game mode (refer to the on-screen menu if available) to access the built-in selection of 300 games.



Image: Two children are shown enjoying video games on the Cuifati Portable DVD Player, utilizing the provided game controller for interaction.

3.7 Screen Rotation

The HD LCD widescreen display can rotate up to 270 degrees, allowing for various viewing angles and environments. Gently adjust the screen to your desired position.



Image: A visual representation of the Cuifati Portable DVD Player's screen, demonstrating its ability to rotate 180 and 270 degrees for versatile viewing angles.

3.8 Connecting to an External Display

Use the included Audio/Video (AV) cable to connect the portable DVD player to a larger screen, such as a television. Connect one end of the AV cable to the player's AV output and the other end to the AV input ports on your external display. Select the correct input source on your television to view the content.



Image: The Cuifati Portable DVD Player displayed with text explaining how to use the included Audio/Video cable and remote control to connect and synchronize movies with a larger external screen.

3.9 Power Off Memory Function

The player features an intelligent power-off memory function. If the device is turned off during disc playback, it will automatically resume from the last played position when powered on again, eliminating the need to manually search for your previous spot.

4. MAINTENANCE

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the LCD screen. Do not use abrasive cleaners or solvents.
- **Cleaning the Player:** Wipe the exterior of the player with a soft, dry cloth. Avoid getting liquids into any openings.
- **Disc Care:** Handle discs by their edges. Keep them clean and free from scratches to ensure optimal playback. Store discs in their cases when not in use.
- **Battery Care:** For prolonged storage, charge the battery periodically to maintain its health. Avoid exposing the device to extreme temperatures.

5. TROUBLESHOOTING

- **No Power:**
 - Ensure the power adapter is securely connected to both the player and a working power outlet.
 - Check if the built-in battery is charged.
 - Verify the remote control battery is correctly installed and not depleted.
- **No Disc Playback:**
 - Ensure the disc is inserted correctly with the label side up.
 - Check if the disc is clean and free from scratches or smudges.
 - Verify the disc format is supported (DVD, DVD±R, DVD±RW, CD-R, VCD).
 - Make sure any protective card or sticker has been removed from the disc tray.
- **No TV Signal:**
 - Ensure the external antenna is securely connected and fully extended.
 - Perform an auto-scan for channels in the TV settings menu.
 - Adjust the antenna position for better reception.
- **No Sound:**
 - Increase the volume using the **VOL+** button.
 - Check if headphones are connected, which may mute the internal speakers.
 - If connected to an external display, ensure the TV's volume is up and the correct input is selected.
- **Picture Distorted/No Picture:**
 - If using an external display, ensure the AV cable is correctly connected and the TV's input source is set to AV.
 - For TV function, adjust the antenna or try rescanning channels.

6. SPECIFICATIONS

Brand	Cuifati
Model	6.8-Inch Portable DVD Player (ASIN: B09RZRK8KX)
Screen Size	6.8 Inches
Display Type	LCD
Screen Rotation	Up to 270°
Supported Media Types	DVD, DVD±R, DVD±RW, CD-R, VCD
TV System	PAL/NTSC/SECAM
Card Reader	Supports SD/MMC cards
USB Port	Yes
Built-in Battery	Rechargeable Lithium Battery (approx. 30-60 min playback)
Power Input	AC 110-240V, Car 12V

Remote Control Battery	1 x AAA (included)
Item Weight	2.53 pounds
Package Dimensions	13.98 x 8.11 x 2.91 inches

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact the seller directly. Specific warranty terms and conditions may vary.
