

Karlsson PTG-KA5723

Karlsson Bamboo Mini Cube Alarm Clock User Manual

Model: PTG-KA5723



1. INTRODUCTION

Thank you for purchasing the Karlsson Bamboo Mini Cube Alarm Clock. This compact and stylish alarm clock features a digital display, time and temperature functions, and an adjustable alarm volume. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- Use only the specified power source (3 AAA batteries or compatible power cable).
- Keep out of reach of children.

3. PACKAGE CONTENTS

- Karlsson Bamboo Mini Cube Alarm Clock
- User Manual

Note: 3 AAA batteries and a power cable are not included and must be purchased separately.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your alarm clock.



Figure 4.1: Front view of the Karlsson Bamboo Mini Cube Alarm Clock displaying the time.



Figure 4.2: Rear view of the alarm clock, showing the power input port.

The clock features a light brown bamboo casing with a black digital display. Control buttons are typically located on the back or bottom of the unit for setting time, alarm, and other functions.

5. SETUP

5.1. Powering the Device

The alarm clock can be powered by 3 AAA batteries or via a compatible power cable (not included).

5.1.1. Battery Installation

1. Locate the battery compartment cover on the back or bottom of the clock.
2. Remove the cover.
3. Insert 3 new AAA batteries, ensuring correct polarity (+ and -).
4. Replace the battery compartment cover securely.

5.1.2. Power Cable Connection (Optional)

1. Locate the power input port on the back of the clock (refer to Figure 4.2).
2. Connect a compatible power cable (e.g., USB cable with appropriate adapter) to the port.
3. Plug the other end of the cable into a power source.

Note: Using the power cable may provide a continuous display, while battery power might activate the display only when sound is detected or a button is pressed to conserve energy.

6. OPERATING INSTRUCTIONS

The clock typically has buttons for SET, UP, and DOWN, or similar controls.

6.1. Setting the Time

1. Press the **SET** button (or equivalent) to enter time setting mode. The hour digits will typically flash.
2. Use the **UP** and **DOWN** buttons to adjust the hour.
3. Press **SET** again to move to the minute setting. The minute digits will flash.
4. Use the **UP** and **DOWN** buttons to adjust the minutes.
5. Press **SET** one more time to confirm and exit time setting mode.

6.2. Setting the Alarm

1. Press the **ALARM** button (or press **SET** multiple times until alarm icon flashes). The alarm hour digits will flash.
2. Use the **UP** and **DOWN** buttons to set the desired alarm hour.
3. Press **ALARM** (or **SET**) again to move to the alarm minute setting.
4. Use the **UP** and **DOWN** buttons to set the desired alarm minutes.
5. Press **ALARM** (or **SET**) to confirm.
6. To activate/deactivate the alarm, look for a dedicated alarm ON/OFF switch or a specific button press sequence (e.g., short press of **ALARM** button). An alarm icon will typically appear on the display when active.

6.3. Temperature Display

The clock automatically displays the ambient temperature. This display may alternate with the time display or be shown simultaneously, depending on the model. No user input is typically required for this function.

6.4. Adjusting Alarm Volume

Some models allow adjustment of the alarm volume. Look for dedicated volume buttons **VOL+ / VOL-** or a setting within the alarm setup menu. Consult the specific button labels on your device.

7. MAINTENANCE

- Clean the clock's surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If using batteries, replace them promptly when the display dims or functions become erratic. Remove batteries if the clock will not be used for an extended period to prevent leakage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low batteries or no power connection.	Replace batteries or connect to a power source.
Alarm does not sound.	Alarm not activated or set incorrectly.	Ensure alarm is ON and set to the correct time. Check alarm volume.
Time is incorrect.	Time not set or power interruption.	Reset the time according to Section 6.1.
Temperature reading seems inaccurate.	Device placed near heat source/vent or in direct sunlight.	Move the clock to a location with stable ambient temperature.

9. SPECIFICATIONS

Brand: Karlsson

Model Number: PTG-KA5723

Color: White (Note: Product description states Light Brown, but specifications list White. User should refer to product packaging for exact color.)

Product Dimensions (L x W x H): 16 x 3.81 x 12.19 cm (6.3 x 1.5 x 4.8 inches)

Material: Wood (Bamboo)

Features: Calendar display, Alarm

Item Weight: 420 grams (0.93 lbs)

Display Type: Digital

Power Source: Battery Powered (3 AAA batteries, not included), optional power cable

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer where the product was acquired. You may also visit the official Karlsson website for further assistance.

