

[Manuals.plus](#) /

› [Nikko](#) /

› Nikko Pro Trucks 10062 RC Car Instruction Manual

Nikko 10062

Nikko Pro Trucks 10062 RC Car Instruction Manual

Model: 10062/10060

INTRODUCTION

This manual provides essential information for the safe and optimal operation, setup, and maintenance of your Nikko Pro Trucks 10062 RC Car. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

WARNING:

- Not suitable for children under 36 months due to small parts. Choking hazard.
- Long cord present. Strangulation hazard.
- Packaging components (adhesive tape, plastic film, metal fasteners, stickers, labels) are not part of the product. Dispose of them safely.
- Keep packaging for important information.
- Product appearance and color may vary from images.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Nikko Pro Trucks RC Car (Green/White)
- Remote Control
- USB Charging Cable
- 3 x AAA Batteries (for remote control)
- User Manual



Image: Nikko Pro Trucks RC car and remote control.



Image: Nikko Pro Trucks RC car in its retail packaging, showing the product and controller.

SETUP

1. Remote Control Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert 3 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

2. Vehicle Battery Charging

The Nikko Pro Trucks RC car is equipped with an integrated 6.4V LiFePo4 battery for fast charging.

1. Locate the USB charging port on the vehicle.
2. Connect the provided USB charging cable to the vehicle's port.
3. Connect the other end of the USB cable to a USB power source (e.g., computer, USB wall adapter - not included).
4. The battery typically charges in approximately 60 minutes. Refer to the vehicle's indicator light for charging status (if applicable).
5. Disconnect the USB cable once charging is complete.

3. Pairing the Controller

The 2.4 GHz transmission technology allows for interference-free operation.

1. Ensure both the vehicle and the remote control are powered off.
2. Turn on the vehicle.
3. Turn on the remote control.
4. The vehicle and remote control should automatically pair. An indicator light on both devices may confirm successful pairing.

OPERATING INSTRUCTIONS

Basic Controls

- **Forward/Backward:** Use the throttle trigger/stick on the remote control to move the vehicle forward or backward.
- **Steering:** Use the steering wheel/lever on the remote control to turn the vehicle left or right.

Driving Tips

- The Nikko Pro Trucks RC car is designed for off-road action and performs well on rough surfaces such as dirt, sand, grass, and gravel.
- Its full suspension and rubber tires with studs provide additional grip and allow it to handle uneven terrain.
- The vehicle can reach speeds of up to 14 km/h, depending on the surface.
- The 2.4 GHz remote control allows for a range of up to 30 meters and supports up to 10 players simultaneously without interference.





Image: A child operating the Nikko Pro Trucks RC car in an outdoor setting.

MAINTENANCE

- **Cleaning:** After each use, especially off-road, gently clean the vehicle to remove dirt, dust, and debris. Use a soft, dry cloth. Avoid using water or harsh chemicals directly on electronic components.
- **Storage:** Store the RC car and remote control in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries from the remote control if storing for extended periods.
- **Battery Care:** Fully charge the vehicle's LiFePo4 battery before storage if it will not be used for a long time. Do not overcharge or completely drain the battery.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vehicle does not respond to remote control.	Low batteries in remote control or vehicle; not paired; power switch off.	Check and replace remote control batteries. Charge vehicle battery. Ensure both power switches are ON. Re-pair the devices.
Short operating range or interference.	Obstacles blocking signal; other 2.4 GHz devices nearby; low batteries.	Operate in an open area. Move away from other electronic devices. Ensure batteries are fully charged.
Vehicle moves slowly or inconsistently.	Low vehicle battery; debris in wheels/axles.	Fully charge the vehicle battery. Inspect and clean wheels/axles for obstructions.

SPECIFICATIONS

Feature	Detail
Brand	Nikko
Model Name	Pro Trucks
Model Number	10062/10060
Color	Green / White
Material	Plastic
Dimensions (L x W x H)	33 x 20 x 13 cm
Item Weight	1.42 kg
Max Speed	Up to 14 km/h
Control Frequency	2.4 GHz
Control Range	Up to 30 meters
Vehicle Battery	Integrated 6.4V LiFePo4 (USB Fast Charging)
Controller Batteries	3 x AAA (included)
Charging Time	Approx. 60 minutes
Recommended Age	6 years and up
Special Features	Full suspension, rubber studded tires, waterproof chassis, multi-player support.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official Nikko website. Keep your purchase receipt as proof of purchase.

© 2023 Nikko Toys Ltd. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question