

[manuals.plus](#) /› [MODDEDZONE](#) /› [MODDEDZONE Carbon Custom Controller for Nintendo PRO Switch User Manual](#)

MODDEDZONE PRO Switch Controller

MODDEDZONE Carbon Custom Controller for Nintendo PRO Switch User Manual

Model: Carbon Custom Controller (ASIN: B09S2KL84Z)

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your MODDEDZONE Carbon Custom Controller for Nintendo PRO Switch. This controller is an authentic Nintendo PRO Switch controller, professionally customized with a unique carbon design shell. Each unit undergoes quality testing before shipment.

Important Note: This package includes the custom original controller only. Cables or other accessories are not included and must be acquired separately if needed.

SETUP INSTRUCTIONS

1. Unpacking

Carefully remove the controller from its packaging. Inspect the controller for any visible damage.

2. Charging the Controller

The controller requires 1 Lithium Ion battery (included and pre-installed). To charge the controller, connect a compatible USB-C cable (not included) to the USB-C port on the top of the controller and the other end to a Nintendo Switch dock or a USB power source.



Image: Top view of the controller, highlighting the USB-C charging port.

3. Pairing with Nintendo Switch

1. From the Nintendo Switch HOME Menu, select "Controllers".
2. Select "Change Grip/Order".
3. While the screen displays "Press L + R on the controller", press and hold the SYNC Button on the top of the MODDEDZONE controller for a few seconds. The player indicator lights will begin to flash.
4. Once paired, the player indicator light(s) corresponding to the controller number will remain lit.



Image: Front view of the controller, showing buttons and joysticks.

OPERATING THE CONTROLLER

The MODDEDZONE Carbon Custom Controller functions identically to a standard Nintendo Switch PRO Controller. It features all standard buttons, joysticks, and triggers for gameplay.

- **Left Joystick:** Movement and camera control.
- **Right Joystick:** Camera control and aiming.
- **Directional Pad (D-Pad):** Menu navigation and specific in-game actions.
- **A/B/X/Y Buttons:** Action buttons for various in-game commands.
- **L/R Buttons:** Shoulder buttons.
- **ZL/ZR Buttons:** Trigger buttons.
- **Minus (-) Button:** Access in-game menus or specific functions.
- **Plus (+) Button:** Access in-game menus or specific functions.
- **Home Button:** Return to the Nintendo Switch HOME Menu.
- **Capture Button:** Take screenshots or record video clips.



Image: Left angled view of the controller, showing the left joystick, D-pad, and shoulder buttons.



Image: Right angled view of the controller, showing the right joystick, A/B/X/Y buttons, and shoulder buttons.

CARE AND MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid harsh chemicals or abrasive cleaners.

- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the controller or subjecting it to strong impacts. Do not attempt to disassemble the controller, as this may void any applicable warranty.
- **Battery Care:** If the controller will not be used for an extended period, ensure it is fully charged before storage and periodically recharged to maintain battery health.



Image: Back view of the controller, showing the textured grips.

TROUBLESHOOTING

| Issue | Possible Solution |
|--|---|
| Controller does not turn on. | Ensure the controller is charged. Connect it to a power source using a USB-C cable. |
| Controller does not pair with Nintendo Switch. | <ul style="list-style-type: none">• Ensure the Switch is in "Change Grip/Order" mode.• Press and hold the SYNC button on the controller firmly.• Move closer to the Nintendo Switch console.• Restart the Nintendo Switch console. |
| Buttons or joysticks are unresponsive. | <ul style="list-style-type: none">• Ensure the controller is fully charged and properly paired.• Clean around the buttons and joysticks to remove any debris.• Perform a system update on your Nintendo Switch. |

| Issue | Possible Solution |
|------------------------------------|--|
| Controller disconnects frequently. | <ul style="list-style-type: none">• Ensure there are no obstructions between the controller and the Switch.• Avoid strong electromagnetic interference.• Ensure the controller is fully charged. |

PRODUCT SPECIFICATIONS

Brand: MODDEDZONE

Model: Carbon Custom Controller

ASIN: B09S2KL84Z

Compatibility: Nintendo Switch

Power Source: 1 Lithium Ion battery (required, included)

Connectivity: Wireless (Bluetooth)

Item Weight: 12.8 ounces (approx. 362 grams)

Package Dimensions: 8 x 6 x 3 inches (approx. 20.3 x 15.2 x 7.6 cm)

Manufacturer: ModdedZone

Date First Available: February 2, 2022

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact MODDEDZONE directly through their official channels. Unauthorized modification or disassembly of the controller may void the product warranty.

For further assistance, you may visit the [MODDEDZONE Store on Amazon](#).