

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DOMO](#) /

› [DOMO DO235SW Pro Wet Cleaning Floor Cleaner - 14.4V User Manual](#)

DOMO DO235SW

DOMO DO235SW Pro Wet Cleaning Floor Cleaner - 14.4V User Manual

Model: DO235SW

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the DOMO DO235SW Pro Wet Cleaning Floor Cleaner. Retain this manual for future reference.

- This appliance is intended for household use only.
- Do not immerse the appliance in water or other liquids.
- Keep the appliance away from children.
- Use only the provided charging adapter.
- Do not use the appliance to clean flammable or combustible liquids.
- Ensure the power cord is not damaged. If damaged, contact customer service.
- Always unplug the charger before cleaning or performing maintenance.

PRODUCT OVERVIEW

The DOMO DO235SW is a cordless electric floor cleaner designed for efficient wet cleaning of various hard floor types. It features rotating rollers that are automatically moistened with clean water, effectively removing dirt and grime.





Figure 1: DOMO DO235SW Pro Wet Cleaning Floor Cleaner. This image shows the complete assembled unit, highlighting its sleek design and the cleaning head with rollers.

Key Features:

- Cordless electric mop with 14.4V battery.
- Operating time: approximately 30 minutes on a full charge (sufficient for up to 60 m²).
- Suitable for all types of hard floors, including delicate surfaces like parquet and laminate.
- 90% water saving compared to traditional cleaning methods.
- Separate clean water tank (350 ml) and dirty water tank (180 ml) ensure cleaning with fresh water.
- Self-cleaning function for easy roller maintenance.
- Highly maneuverable design for reaching difficult corners.

SETUP

1. Unpacking and Assembly

Carefully remove all components from the packaging. Ensure all parts are present:

1. Main unit (handle and motor housing)
2. Cleaning head with rollers
3. Charging base
4. Power adapter
5. User manual

To assemble, align the main unit with the cleaning head and push firmly until it clicks into place. Ensure a secure connection.





Figure 2: DOMO DO235SW with its charging base and power adapter. This image illustrates the complete package, including accessories for charging and storage.

2. Initial Charging

1. Place the assembled cleaner onto the charging base.
2. Connect the power adapter to the charging base and then plug it into a wall outlet.
3. The charging indicator light will illuminate.
4. Allow 4-5 hours for a full charge before first use.

3. Filling the Clean Water Tank

1. Locate the clean water tank on the main unit.
2. Remove the tank and open its cap.
3. Fill the tank with clean tap water. You may add a small amount of non-foaming floor cleaning solution if desired (refer to solution manufacturer's instructions). Do not exceed the MAX fill line.
4. Close the cap securely and reinsert the tank into the unit until it clicks.

OPERATING INSTRUCTIONS

1. Starting the Cleaning Process

1. Ensure the clean water tank is filled and the unit is charged.
2. Press the power button located on the handle to turn on the appliance. The rollers will begin to rotate

and moisten.

3. Gently push the cleaner forward and backward over the floor surface. The rotating rollers will scrub and clean the floor.
4. The dirty water and debris will be collected into the dirty water tank.





Figure 3: Top-down view of the DOMO DO235SW cleaning head, showing the rotating rollers. This perspective highlights the active cleaning mechanism.

2. Emptying the Dirty Water Tank

It is recommended to empty the dirty water tank after each use or when it reaches its MAX fill line.

1. Turn off the appliance and remove the dirty water tank.
2. Carefully open the tank and dispose of the dirty water.
3. Rinse the tank thoroughly with clean water.
4. Reinsert the empty and clean dirty water tank into the unit.

MAINTENANCE

1. Self-Cleaning Function

The DOMO DO235SW features a self-cleaning function to maintain the rollers.

1. After cleaning, ensure the clean water tank has some water.
2. Place the cleaner back on its charging base.
3. Press and hold the self-clean button (refer to appliance diagram for exact location).
4. The rollers will activate and clean themselves using the water from the clean tank, collecting dirty water in the dirty tank.
5. Once the cycle is complete, empty and rinse the dirty water tank.

2. Cleaning the Rollers Manually

For thorough cleaning or if the self-cleaning function is insufficient:

1. Turn off and unplug the appliance.
2. Remove the dirty water tank.
3. Carefully detach the rollers from the cleaning head (consult the product diagram for release mechanism).
4. Rinse the rollers under running water. Use a mild detergent if necessary.
5. Allow the rollers to air dry completely before reattaching them to the unit.

3. Storage

Store the appliance in a dry, cool place. Ensure both water tanks are empty and clean before storage. Keep the unit on its charging base to ensure it's ready for the next use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Battery is not charged.	Charge the appliance for 4-5 hours.
Rollers are not rotating.	Obstruction in the cleaning head.	Turn off the unit, remove any debris from the rollers.
No water dispensed.	Clean water tank is empty or not properly installed.	Fill the clean water tank and ensure it is securely in place.
Poor cleaning performance.	Rollers are dirty or worn out.	Clean the rollers or replace them if necessary.
Dirty water tank overflows.	Dirty water tank is full.	Empty and rinse the dirty water tank.

SPECIFICATIONS

- Model Number:** DO235SW
- Battery:** 14.4V Lithium-ion (included)
- Charging Time:** 4-5 hours
- Operating Time:** Approximately 30 minutes
- Clean Water Tank Capacity:** 350 ml
- Dirty Water Tank Capacity:** 180 ml
- Product Dimensions (L x W x H):** 28.4 x 17.4 x 113 cm
- Weight:** 3.76 kg

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product packaging or contact your local retailer. Keep your proof of purchase for any warranty claims.

For technical support or spare parts, please contact DOMO customer service. Contact details can typically be found on the manufacturer's official website or on the product packaging.

Manufacturer: DOMO

Website: www.domo-elektro.be (Example, actual website may vary by region)