

[Manuals.plus](#) /

› [VCJ](#) /

› VCJ Portable Twin Tub Washing Machine (Model VCJ-25) User Manual

VCJ VCJ-25

VCJ Portable Twin Tub Washing Machine User Manual

Model: VCJ-25

INTRODUCTION

Thank you for choosing the VCJ Portable Twin Tub Washing Machine. This compact and efficient appliance is designed for small living spaces such as apartments, RVs, and dormitories. It features a twin tub design, allowing for simultaneous washing and spinning, and offers a total capacity of 28 lbs (18 lbs for washing and 10 lbs for spinning). This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance and longevity of your washing machine.

SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Ensure the power supply matches the voltage specified on the rating label.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the machine during operation.
- Do not immerse the electrical parts in water or other liquids.
- Unplug the machine from the power outlet when not in use or before cleaning.
- Place the machine on a stable, level surface to prevent vibration and noise.
- Do not wash waterproof clothing or materials that float easily, as this may cause imbalance during spinning.
- Avoid overloading the washer or spinner tubs beyond their specified capacities.
- Ensure the drain hose is properly positioned to allow water to drain freely.

WHAT'S IN THE BOX

Upon unpacking, please verify that all the following components are included:

- 1 x VCJ Twin Tub Washing Machine
- 1 x Water Inlet Hose
- 1 x Drain Hose
- 1 x Hose Clamp
- 1 x Instruction Manual (this document)

PRODUCT OVERVIEW

The VCJ Portable Twin Tub Washing Machine is designed for convenience and efficiency. Its dual-functionality allows you to wash and spin dry clothes simultaneously, saving time and effort.



VCJ Portable Washing Machine with 18 lbs wash and 10 lbs spin capacity.

Key Features:

- **Twin Tub Design:** Separate tubs for washing (18 lbs capacity) and spinning (10 lbs capacity) allow for efficient processing of laundry.
- **Powerful Performance:** Equipped with a 1300 RPM motor for effective washing and spinning.
- **Built-in Drain Pump:** Facilitates drainage to higher outlets, offering flexibility in placement.
- **Extended Drain Hose:** A 4.3 ft long drain hose is included for easier water disposal.
- **User-Friendly Controls:** Simple knob controls for wash timer (up to 15 minutes), wash selector (3 modes), and spin timer (up to 5 minutes).

- **Transparent Top Cover:** Allows monitoring of the washing and spinning process.
- **Removable Lint Filter:** Easy to clean, ensuring efficient operation and preventing lint buildup.
- **Compact and Portable:** Lightweight design (31 lbs) and dimensions (27"W x 15"D x 32"H) make it ideal for small spaces and easy transport.



Control panel of the VCJ Portable Washing Machine, showing wash timer, selector, and spin timer.

Upgrade Strong Motor

Transparent
top cover

Stable Base

1300 rpm
powerful motor



**Powerful
Washing
Agitator**



**Upgrade
Spin
Tub**



**Removable
Lint
filter**

Internal view of the VCJ Portable Washing Machine, highlighting the 1300 RPM motor, agitator, spin tub, and lint filter.

SETUP

1. Placement

Place the washing machine on a firm, level surface. Ensure there is enough space around the machine for ventilation and operation. The machine is suitable for use in various locations including apartments, homes, RVs, and dorms.

Extra Long Drain Hose for Easy Use



Suitable for more places



Apartment



Home



RV



Dorm

Dimensions of the VCJ Portable Washing Machine (27"x15"x32") suitable for apartments, homes, RVs, and dorms.

2. Water Inlet Connection

Connect the provided water inlet hose to the water inlet port on the machine and to a suitable water faucet. Ensure connections are secure to prevent leaks.

3. Drain Hose Setup

Position the drain hose to direct water into a sink, bucket, or drain. The machine is equipped with a drain pump and an extended 4.3 ft hose, allowing for drainage to higher positions (up to 3.3 ft) if needed. Ensure the hose is not kinked or blocked.



LONGER DRAIN HOSE

EQUIPPED WITH A DRAIN PUMP

(NOTICE: DRAIN HEIGHTS ARE BEST LOWER THAN **3.3 FT**)

VCJ Portable Washing Machine with extended drain hose and built-in drain pump.

Large Capacity Portable Washing Machine

Built-In Drain Pump



VCJ Portable Washing Machine with built-in drain pump and upgrade filter box for efficient drainage.

4. Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the outlet meets the machine's power requirements.

OPERATING INSTRUCTIONS

Washing Cycle:

1. **Load Clothes:** Open the wash tub lid and place clothes loosely into the wash tub. Do not exceed the 18 lbs capacity.
2. **Add Water and Detergent:** Fill the wash tub with water to the desired level and add appropriate laundry detergent.
3. **Set Wash Timer:** Turn the 'Wash Timer' knob to select the desired wash time (up to 15 minutes).
4. **Select Wash Mode:** Use the 'Wash Selector' knob to choose between Soft, Normal, or Drain modes. For washing, select Soft or Normal.

- 5. **Start Washing:** The machine will begin agitating. You can monitor the process through the transparent lid.
- 6. **Drain Water:** Once the wash cycle is complete, turn the 'Wash Selector' knob to 'Drain' to empty the water from the wash tub.
- 7. **Rinse (Optional):** For rinsing, refill the wash tub with clean water and run a short wash cycle (e.g., 3-5 minutes) before draining again.

Spin Cycle:

- 1. **Transfer Clothes:** Move the washed clothes from the wash tub to the spin tub. Ensure clothes are evenly distributed and do not exceed the 10 lbs capacity.
- 2. **Secure Spin Cap:** Place the spin cap firmly on top of the clothes in the spin tub.
- 3. **Close Lid:** Close the spin tub lid.
- 4. **Set Spin Timer:** Turn the 'Spin Timer' knob to select the desired spin time (up to 5 minutes).
- 5. **Start Spinning:** The spin tub will begin rotating at 1300 RPM to remove excess water.
- 6. **Remove Clothes:** Once the spin cycle is complete, carefully remove the clothes. They will be significantly drier than after a wash cycle.

Your browser does not support the video tag.

Official seller video demonstrating the operation of a twin tub washer and spin dryer combo, highlighting its large capacity and high efficiency.

MAINTENANCE

Cleaning the Lint Filter:

Regularly clean the lint filter located inside the wash tub. Remove the filter, rinse it under running water to remove accumulated lint, and then reinsert it. This prevents lint buildup and ensures efficient washing.

Cleaning the Exterior:

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents that could damage the finish.

Draining After Use:

After each use, ensure all water is completely drained from both tubs to prevent odors and mildew. Tilt the machine slightly if necessary to ensure full drainage.

Storage:

When storing the machine, especially for extended periods, ensure it is clean and dry. Store in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Power outage; Timer not set.	Check power connection; Verify power supply; Set wash/spin timer.
Water does not drain	Drain hose kinked or blocked; Drain selector not set to 'Drain'.	Straighten drain hose, clear blockages; Set wash selector to 'Drain'.

Problem	Possible Cause	Solution
Excessive vibration or noise during spin	Clothes unevenly distributed in spin tub; Machine not on a level surface; Spin cap not properly placed.	Rearrange clothes evenly; Place machine on a level surface; Ensure spin cap is secure.
Water leaks	Inlet/drain hose connections loose; Hose damaged; Overfilling the tub.	Tighten hose connections; Inspect hoses for damage; Do not exceed maximum water level.
Clothes not clean	Too many clothes; Insufficient detergent; Wash time too short.	Reduce load size; Use appropriate amount of detergent; Increase wash time.

SPECIFICATIONS

Feature	Detail
Model Number	VCJ-25
Product Dimensions (D x W x H)	15" x 27" x 32"
Wash Capacity	18 lbs
Spin Capacity	10 lbs
Item Weight	31 lbs
Max Rotational Speed	1300 RPM
Voltage	120 Volts (AC)
Operation Mode	Semi-Automatic
Access Location	Top Load
Material	Polypropylene, Stainless Steel (agitator/motor components)
Included Components	Clamps, Drain Hose, Water Inlet Hose

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official VCJ website. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09S37JJ4X>

More documents and user manuals: <https://manuals.plus/>