Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- XIAOMI /
- > Xiaomi Buds 3 True Wireless Earbuds User Manual

XIAOMI BHR5526GL

Xiaomi Buds 3 True Wireless Earbuds User Manual

Model: BHR5526GL

1. Introduction

Thank you for choosing the Xiaomi Buds 3 True Wireless Earbuds. This manual provides detailed instructions on how to set up, operate, and maintain your earbuds to ensure optimal performance and longevity. Please read this manual thoroughly before using the product and retain it for future reference.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- Xiaomi Buds 3 Earbuds (Left and Right)
- · Wireless Charging Case
- USB-C Charging Cable
- Eartips (various sizes)
- · User Manual (this document)

3. PRODUCT OVERVIEW

3.1 Earbuds and Charging Case

Familiarize yourself with the components of your Xiaomi Buds 3.

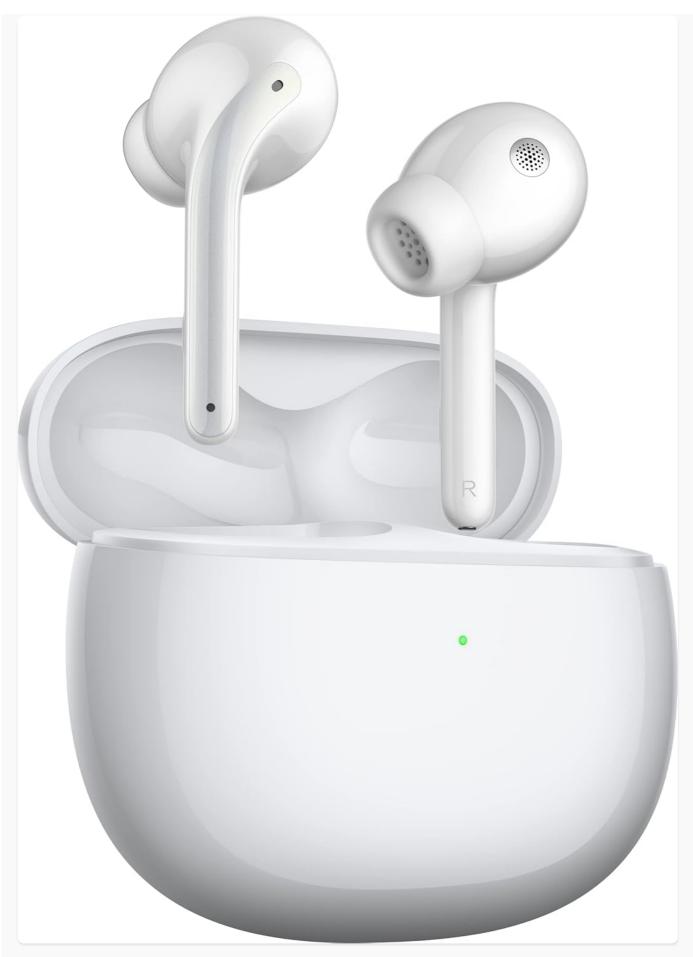


Image: Xiaomi Buds 3 earbuds resting in their open white charging case, displaying the left and right earbuds clearly.



Image: The open white charging case for Xiaomi Buds 3, showing the internal compartments for the earbuds and the charging indicator light.

3.2 Earbud Components

- Eartip: Provides a secure fit and sound isolation.
- Microphone: For calls and voice commands.
- Touch Control Area: For managing playback, calls, and modes.
- Charging Contacts: Connects with the charging case.

3.3 Charging Case Components

- Charging Indicator Light: Shows battery status and pairing mode.
- USB-C Charging Port: For wired charging.
- Function Button: For pairing and resetting.

4. SETUP

4.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and charging case.

- 1. Place the earbuds into the charging case, ensuring they are correctly seated.
- 2. Connect the USB-C charging cable to the charging port on the case and to a power source. The indicator light will show charging status.
- 3. Alternatively, place the charging case on a compatible wireless charging pad for wireless charging.
- 4. The indicator light will turn off when charging is complete.

4.2 Initial Pairing

Pair your Xiaomi Buds 3 with a Bluetooth-enabled device.

- 1. Ensure the earbuds are in the charging case and the case lid is open.
- 2. Press and hold the function button on the charging case for 2 seconds until the indicator light blinks white, indicating pairing mode.
- 3. On your device, enable Bluetooth and search for available devices.
- 4. Select "Xiaomi Buds 3" from the list of found devices to connect.
- 5. Once connected, the indicator light on the case will turn off.

4.3 Wearing the Earbuds

Choose the eartips that provide the best seal and comfort for optimal sound quality and ANC performance. Gently insert the earbuds into your ear canals and rotate them slightly to secure them.

5. OPERATING

5.1 Touch Controls

The Xiaomi Buds 3 feature intuitive touch controls on the earbud stems.

Action	Function	
Press and hold (either earbud)	Switch between ANC modes (Active Noise Cancellation, Transparency, Off)	
Single press (either earbud)	Play/Pause music, Answer/End call	
Double press (either earbud)	press (either earbud) Next track, Reject call	
Triple press (either earbud)	Previous track, Activate voice assistant	

5.2 Active Noise Cancellation (ANC) and Transparency Modes

The earbuds offer up to 40dB Active Noise Cancellation and dual transparency modes.

- Active Noise Cancellation: Reduces ambient noise for an immersive audio experience.
- Transparency Mode: Allows you to hear your surroundings without removing the earbuds.
- Switching Modes: Press and hold the touch control area on either earbud to cycle through ANC, Transparency, and Off modes.

5.3 Automatic Play/Pause

The earbuds feature in-ear detection. Music will automatically pause when an earbud is removed and resume when

6. MAINTENANCE

6.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove eartips and clean them with water and mild soap if necessary, ensuring they are completely dry before reattaching.
- Use a cotton swab to gently clean the charging contacts on both the earbuds and the case.
- · Avoid using harsh chemicals or abrasive materials.

6.2 Storage

When not in use, always store the earbuds in their charging case to protect them and ensure they remain charged.

7. TROUBLESHOOTING

If you encounter issues, refer to the following table for common problems and solutions.

Problem	Possible Solution
Earbuds not pairing	Ensure earbuds are charged. Place them in the case, open the lid, and press the function button for 2 seconds until the indicator blinks white. Re-search on your device.
Only one earbud working	Ensure both earbuds are charged. Try placing both back in the case, closing the lid, and then reopening to re-establish connection. If issue persists, reset the earbuds.
Poor sound quality	Check eartip fit and try different sizes. Clean eartips and earbud grilles. Ensure no obstructions. Move closer to your connected device.
Earbuds not charging	Ensure charging cable is securely connected or wireless charger is properly aligned. Clean charging contacts on earbuds and case.
Touch controls unresponsive	Ensure your fingers are clean and dry. Try restarting the earbuds by placing them in the case and closing the lid for a few seconds.

7.1 Factory Reset

If troubleshooting steps do not resolve the issue, you may need to perform a factory reset:

- 1. Place both earbuds into the charging case.
- 2. Press and hold the function button on the case for approximately 10-15 seconds until the indicator light blinks rapidly, then turns solid.
- 3. Remove the earbuds from your device's Bluetooth list and re-pair them as described in Section 4.2.

8. SPECIFICATIONS

Feature	Detail				
---------	--------	--	--	--	--

Feature	Detail
Model Name	Buds 3
Model Number	BHR5526GL
Connectivity	Bluetooth 5.2
Noise Control	Active Noise Cancellation (up to 40dB), Dual Transparency Modes
Audio Driver	Dual-Magnetic Dynamic Driver
Battery Life	Up to 32 hours (with charging case)
Charging	USB-C, Wireless Charging
Water Resistance	IP55 (Dust and Water Resistant)
Control Type	Touch
Frequency Range	20 Hz - 20,000 Hz
Item Weight	52 Grams (earbuds + case)
Dimensions	1.1 x 9.7 x 6.5 inches


9. SAFETY INFORMATION

- Do not disassemble, repair, or modify the product.
- Keep the product dry and avoid exposure to extreme temperatures or humidity.
- Avoid prolonged listening at high volume levels to prevent hearing damage.
- Use only approved chargers and cables.
- Dispose of the product responsibly according to local regulations.

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Xiaomi website or contact your local authorized dealer. Keep your proof of purchase for warranty claims.

© 2025 Xiaomi. All rights reserved.

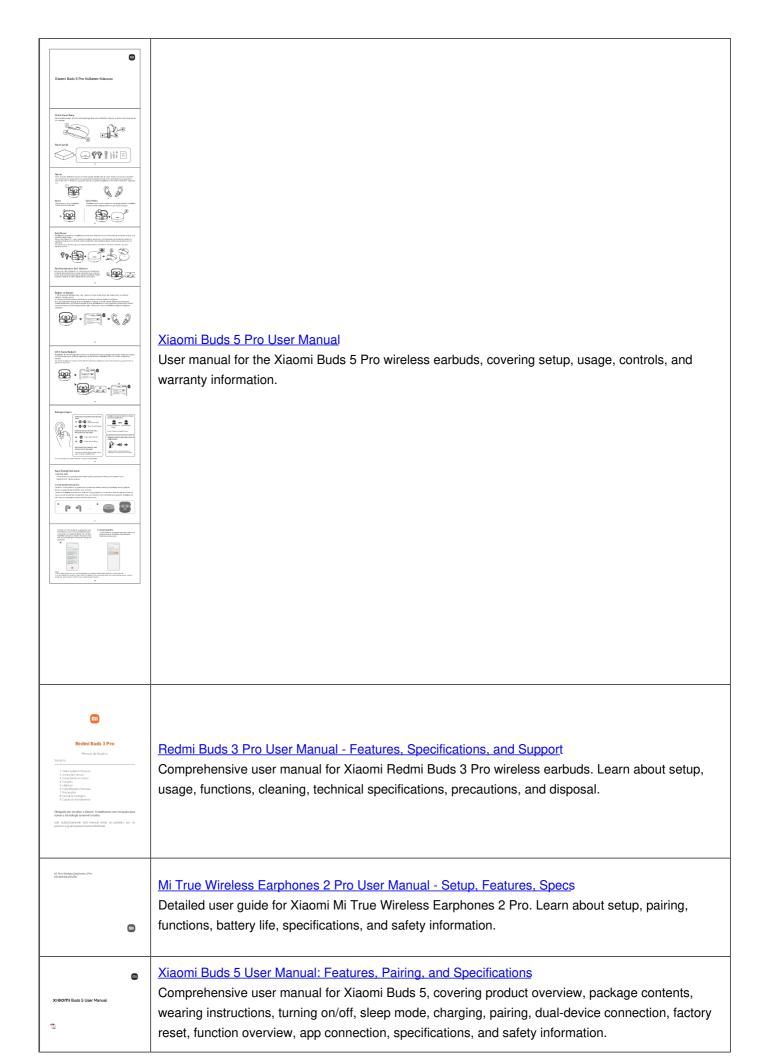



Redmi Buds 4 Pro: Hi-Resolution Audio Wireless Earbuds with ANC

Discover the Redmi Buds 4 Pro, featuring Hi-Resolution Audio, up to 43dB ANC, dual-device connectivity, and 36-hour battery life. This product overview details specifications, features, and package contents for Xiaomi's advanced wireless earbuds.



Redmi Buds 5 User Manual: Features, Specifications, and Safety Information

Comprehensive user manual for Redmi Buds 5 wireless earphones, covering setup, features, technical specifications, safety guidelines, and warranty information. Learn how to connect, use, and care for your Redmi Buds 5.