

RemotesReplaced C6

RemotesReplaced C6 Remote Control User Manual

Model: C6 | Brand: RemotesReplaced

INTRODUCTION

This document serves as the official user manual for the RemotesReplaced C6 replacement remote control. This remote is specifically designed to be electronically identical and fully compatible with the original CHEERLUX C6 remote control, providing all the same functionalities without requiring any complex setup codes. Simply insert the batteries, and the remote is ready for immediate use.

SETUP

1. Battery Installation

The RemotesReplaced C6 remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back view of the remote control with the battery compartment. Ensure correct battery polarity during installation.

2. Initial Use

No programming or setup codes are required for this replacement remote. Once the batteries are correctly installed, the remote control is ready to operate your CHEERLUX C6 device immediately.

OPERATING INSTRUCTIONS

The RemotesReplaced C6 remote control provides full functionality for your CHEERLUX C6 device. Below is a general overview of common buttons and their functions:



Image: Front view of the remote control, displaying all operational buttons.

- **POWER (Red Button)**: Turns the device On or Off.
- **MUTE**: Mutes or unmutes the audio.
- **TV / SAT / DVD / AUX** Selects the input source or device mode.
- **MENU**: Accesses the device's main menu.
- **EXIT**: Exits the current menu or screen.
- **SHIFT**: Used for accessing secondary functions of certain buttons (if applicable).
- **Number Buttons (0-9)**: For direct channel selection or numerical input.
- **SOURCE**: Cycles through available input sources.
- **-/-**: Toggles between single and double-digit channel input.
- **GUIDE**: Displays the electronic program guide.
- **VOL +/-**: Adjusts the volume level.
- **CH +/-**: Changes the channel up or down.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Navigates through menus and confirms selections.
- **BACK**: Returns to the previous screen or menu.
- **INFO**: Displays information about the current program or content.
- **EPG**: Electronic Program Guide.
- **FAV**: Accesses favorite channels list.
- **SLEEP**: Sets a sleep timer for the device.
- **TV/DTV**: Switches between TV and Digital TV modes.
- **NET TV / SMART**: Accesses smart TV features or internet applications.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward)**: Controls media playback.
- **Color Buttons (Red, Green, Yellow, Blue)**: Specific functions depending on the device or on-screen prompts.

Point the remote control directly at the infrared receiver of your CHEERLUX C6 device for optimal performance. Ensure there are no obstructions between the remote and the device.

MAINTENANCE

Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Storage

If the remote control will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage to the remote.

TROUBLESHOOTING

If you encounter issues with your RemotesReplaced C6 remote control, please refer to the following common troubleshooting steps:

- **Remote not responding:**
 - Check if the batteries are correctly installed with the proper polarity.
 - Replace the batteries with fresh AAA batteries.
 - Ensure there is a clear line of sight between the remote control and the CHEERLUX C6 device's infrared receiver. Remove any obstructions.
 - Make sure you are within the effective operating range (up to 10 meters).
- **Specific buttons not working:**
 - Verify that the remote is pointed directly at the device.
 - If the issue persists after checking batteries and line of sight, the button might be stuck or damaged.
- **Device not turning on/off:**
 - Confirm the device itself is powered and not in a deep sleep mode that requires a manual power-on.
 - Ensure the remote is sending a signal (some smartphone cameras can detect IR light, but this is not a definitive test).

If these steps do not resolve the issue, please refer to the Support section for further assistance.

SPECIFICATIONS

Brand	RemotesReplaced
-------	-----------------

Model Number	C6
Connectivity Technology	Infrared
Controller Type	Button Control
Maximum Range	10 Meters
Batteries Required	2 x AAA (not included)
Item Weight	120 Grams
Part Number	4173-CHEERLUX-C6
Manufacturer	Linkwebb
ASIN	B09S3RBJ7S

WARRANTY INFORMATION

This RemotesReplaced C6 remote control comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the remote performs as described. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear, including battery leakage.

SUPPORT

For further assistance, troubleshooting beyond the scope of this manual, or warranty inquiries, please contact RemotesReplaced customer support. Refer to the retailer's website or your purchase documentation for specific contact details.

When contacting support, please be prepared to provide the following information:

- Product Model: C6
- Date of Purchase
- Description of the issue

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question