

Satisfyer 4018386

Satisfyer Sniper Instruction Manual

Brand: Satisfyer | Model: 4018386

INTRODUCTION

This manual provides essential information for the safe and effective use of your Satisfyer Sniper. Please read these instructions carefully before first use and retain them for future reference. The Satisfyer Sniper is designed to enhance pleasure through dual loops for blood retention and a clitoral stimulator, featuring 12 vibration programs.

SAFETY INFORMATION

- For adult use only.
- Do not use if the device appears damaged.
- Discontinue use immediately if you experience any discomfort or pain.
- Consult a physician before use if you have any medical conditions or concerns.
- Keep out of reach of children.
- This product is not a contraceptive and does not protect against sexually transmitted infections.

PRODUCT FEATURES

The Satisfyer Sniper is crafted from skin-friendly silicone and offers a range of features for an enhanced experience:

- **Dual Loops:** Designed to enhance blood retention for lasting erections.
- **Clitoral Stimulator:** An adjustable component for intensified pleasure.
- **12 Vibration Programs:** Easily controlled with a single button.
- **Adjustable Design:** Tailored to fit various sizes comfortably.
- **Waterproof (IPX7):** Suitable for use in wet environments and easy cleaning.
- **Rechargeable Battery:** Convenient and eco-friendly power source.
- **Skin-Friendly Silicone:** Ensures a soft and comfortable experience.

PRODUCT FEATURES



Image: Diagram illustrating the key features of the Satisfyer Sniper, including magnetic charging, control buttons, clitoral stimulator, blood flow restriction design, and flexible silicone material.

SETUP

1. **Unpack:** Carefully remove the Satisfyer Sniper from its packaging.
2. **Inspect:** Check the device for any visible damage. If damaged, do not use and contact customer support.
3. **Clean:** Before first use, clean the device thoroughly as described in the "Cleaning and Maintenance" section.
4. **Charge:** Ensure the device is fully charged before initial use. Refer to the "Charging" section for instructions.



Image: The Satisfyer Sniper device shown alongside its retail packaging, indicating the product as it appears when first unboxed.

CHARGING

The Satisfyer Sniper features a magnetic USB charging cable.

1. Locate the magnetic charging contacts on the device.
2. Connect the magnetic end of the USB charging cable to these contacts. The magnets will ensure correct alignment.
3. Plug the USB end of the cable into a standard USB power adapter (not included) or a computer USB port.

4. The indicator light on the device will illuminate during charging. Refer to the device's specific light patterns for charging status (e.g., blinking for charging, solid for fully charged).
5. A full charge typically takes approximately 2-3 hours.
6. **Resetting the device:** If the device does not turn on after charging, try holding the power button for 10 seconds while plugged in. If this does not work, unplug the device and hold the power button for 10 seconds until it vibrates, indicating a successful reset.

OPERATING INSTRUCTIONS

1. **Power On:** Press and hold the power button (usually marked with a circle and vertical line) for approximately 2 seconds until the device vibrates or the indicator light turns on.
2. **Adjust Vibration Programs:** Press the power button briefly to cycle through the 12 different vibration programs.
3. **Power Off:** Press and hold the power button for approximately 2 seconds until the device turns off.
4. **Application:** The device features dual loops. Position the larger loop around the base of the penis and the smaller loop around the testicles for enhanced blood retention. The clitoral stimulator should be positioned to provide direct stimulation.



Image: Front view of the Satisfyer Sniper, highlighting its ergonomic shape and control button placement.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance ensure hygiene and prolong the lifespan of your device.

- **After Each Use:** Clean the device with warm water and a mild, toy-friendly soap or a specialized toy cleaner.
- **Rinse Thoroughly:** Ensure all soap residue is rinsed off.
- **Dry:** Pat dry with a lint-free cloth or allow to air dry completely before storing.
- **Avoid:** Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone material.
- **Lubricants:** Always use water-based lubricants with this device to prevent material degradation.



Image: Angled view of the Satisfyer Sniper, showcasing its smooth, waterproof silicone surface for easy cleaning.

STORAGE

Store the Satisfyer Sniper in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it separate from other silicone toys to prevent material reactions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or software glitch.	Ensure the device is fully charged. Perform a soft reset: While plugged in, hold the power button for 10 seconds. If still unresponsive, unplug and hold the power button for 10 seconds until it vibrates.
Vibrations are weak or inconsistent.	Low battery.	Recharge the device fully.
Magnetic charger does not connect.	Incorrect orientation of the magnetic cable.	Flip the magnetic end of the cable; it will snap into place when correctly oriented.

SPECIFICATIONS

- **Model Number:** 4018386
- **Material:** Skin-Friendly Silicone
- **Water Resistance:** Waterproof (IPX7)
- **Battery:** 1 Lithium Ion battery (included)
- **Vibration Programs:** 12
- **Manufacturer:** Satisfyer

WARRANTY AND SUPPORT

Satisfyer products come with a 15-year warranty, ensuring long-lasting satisfaction and product protection. For warranty claims, technical support, or any questions regarding your Satisfyer Sniper, please visit the official Satisfyer website or contact their customer service directly.
For more information, visit the [Satisfyer Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question