

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Satisfyer](#) /
- › [Satisfyer Double Flex Rabbit Vibrator User Manual](#)

Satisfyer Double Flex

Satisfyer Double Flex Rabbit Vibrator User Manual

Model: Double Flex

INTRODUCTION

The Satisfyer Double Flex is designed for comprehensive pleasure, offering triple stimulation of the G-spot, clitoris, and labia. Crafted from body-safe silicone, this flexible vibrator features three powerful motors and is fully waterproof (IPX7). It can be controlled intuitively via its integrated panel or through the free Satisfyer Connect app, providing a wide range of customizable vibration programs. This manual provides essential information for the safe and effective use of your device.



Image: The Satisfyer Double Flex vibrator, showcasing its flexible design and app compatibility.

SAFETY INFORMATION

- Material Safety:** The device is made from body-safe silicone. Clean thoroughly before and after each use.
- Water Resistance:** The device is IPX7 waterproof, meaning it can be submerged in water up to 1 meter for up to 30 minutes. Ensure the charging port is dry before charging.
- Lubricant Compatibility:** Only use water-based lubricants with this device. Oil-based or silicone-based lubricants can damage the silicone material.
- Charging:** Use only the provided USB charging cable. Do not use the device while it is charging. Keep away from water during charging.
- Storage:** Store in a clean, dry place, away from direct sunlight and extreme temperatures.
- Disposal:** Do not dispose of the device with household waste. Follow local regulations for electronic waste disposal.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Satisfyer Double Flex Rabbit Vibrator
- USB Magnetic Charging Cable
- User Manual (this document)

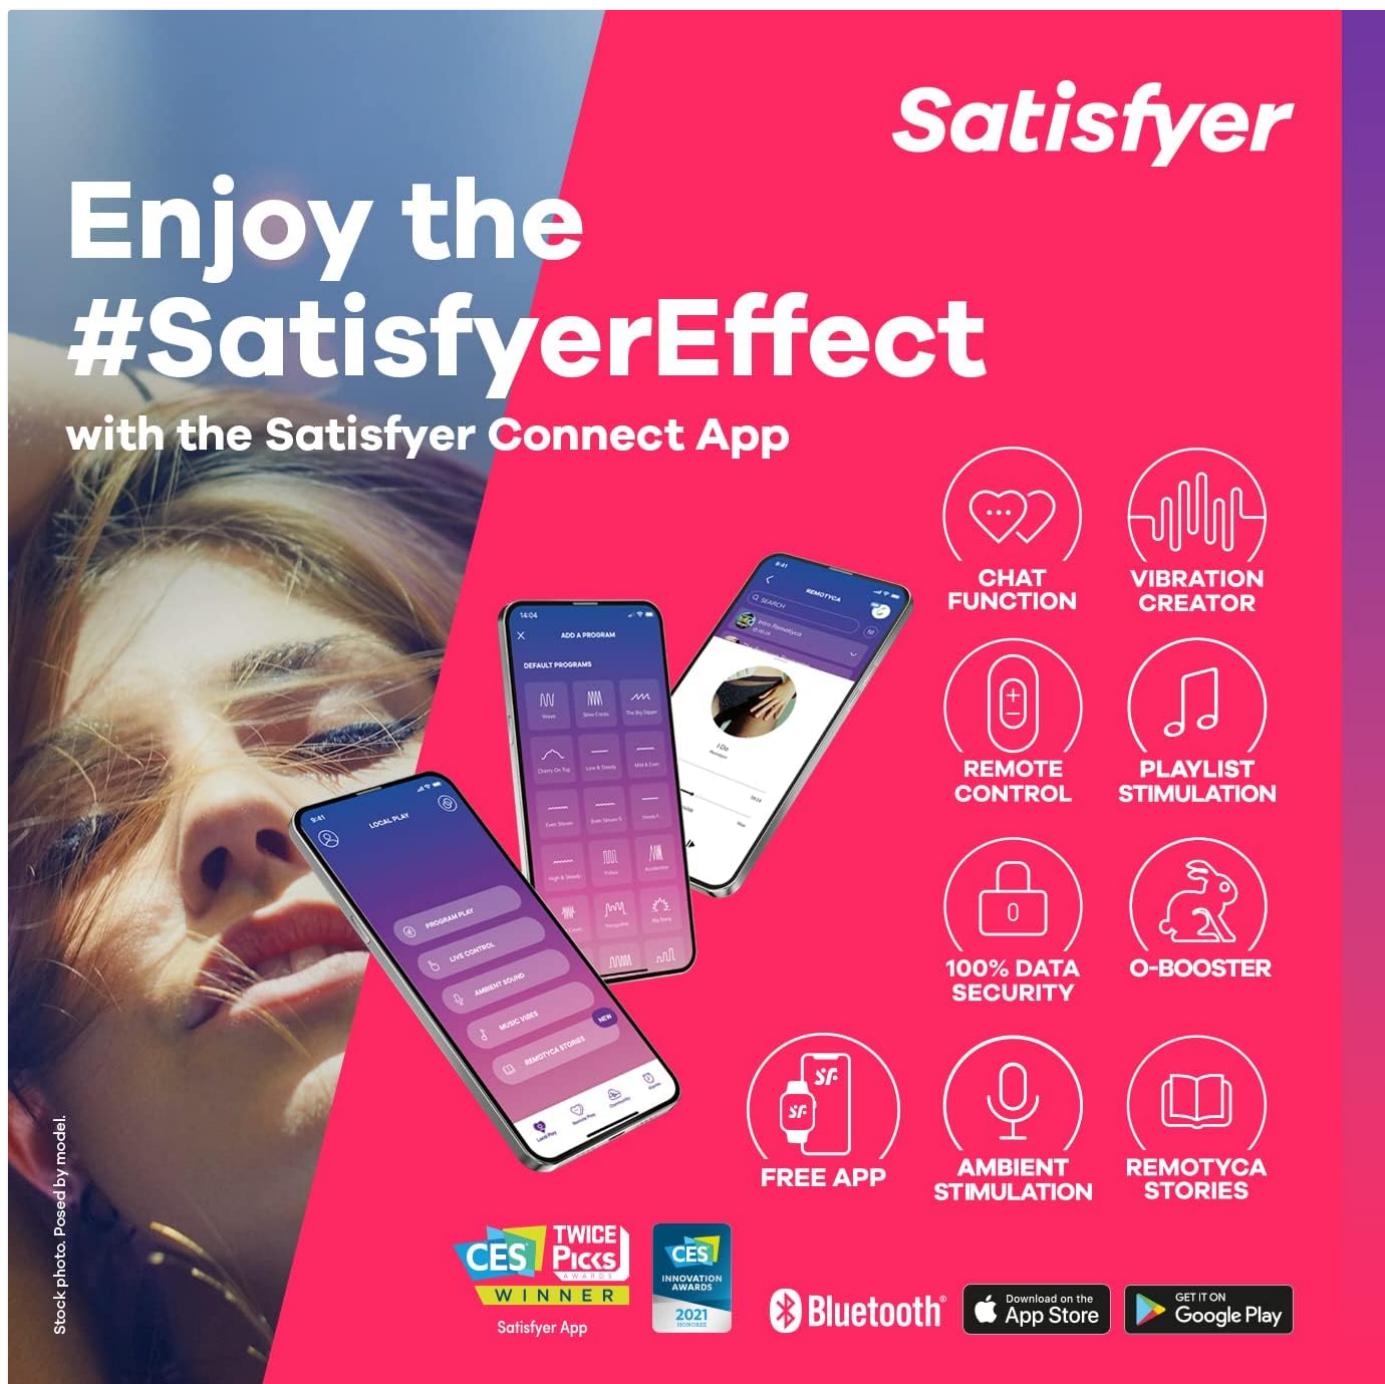


Image: The Satisfyer Double Flex product box, showing the device and branding.

SETUP

1. Charging the Device

1. Before first use, fully charge the device.
2. Connect the magnetic charging cable to the charging points on the device.
3. Plug the USB end of the cable into a standard USB power adapter (not included) or a computer USB port.

4. The indicator lights on the device will show charging status. Refer to the device for specific light patterns.
5. Once fully charged, disconnect the cable.



Image: The underside of the Satisfyer Double Flex, highlighting the magnetic charging contacts.

2. Connecting to the Satisfyer Connect App

1. Download the free "Satisfyer Connect" app from the App Store (iOS) or Google Play Store (Android).
2. Ensure your device's Bluetooth is enabled.
3. Turn on your Satisfyer Double Flex by pressing and holding the power button.
4. Open the Satisfyer Connect app and follow the on-screen instructions to pair your device via Bluetooth.
5. Once connected, you can control the vibrator through the app.

PRODUCT FEATURES

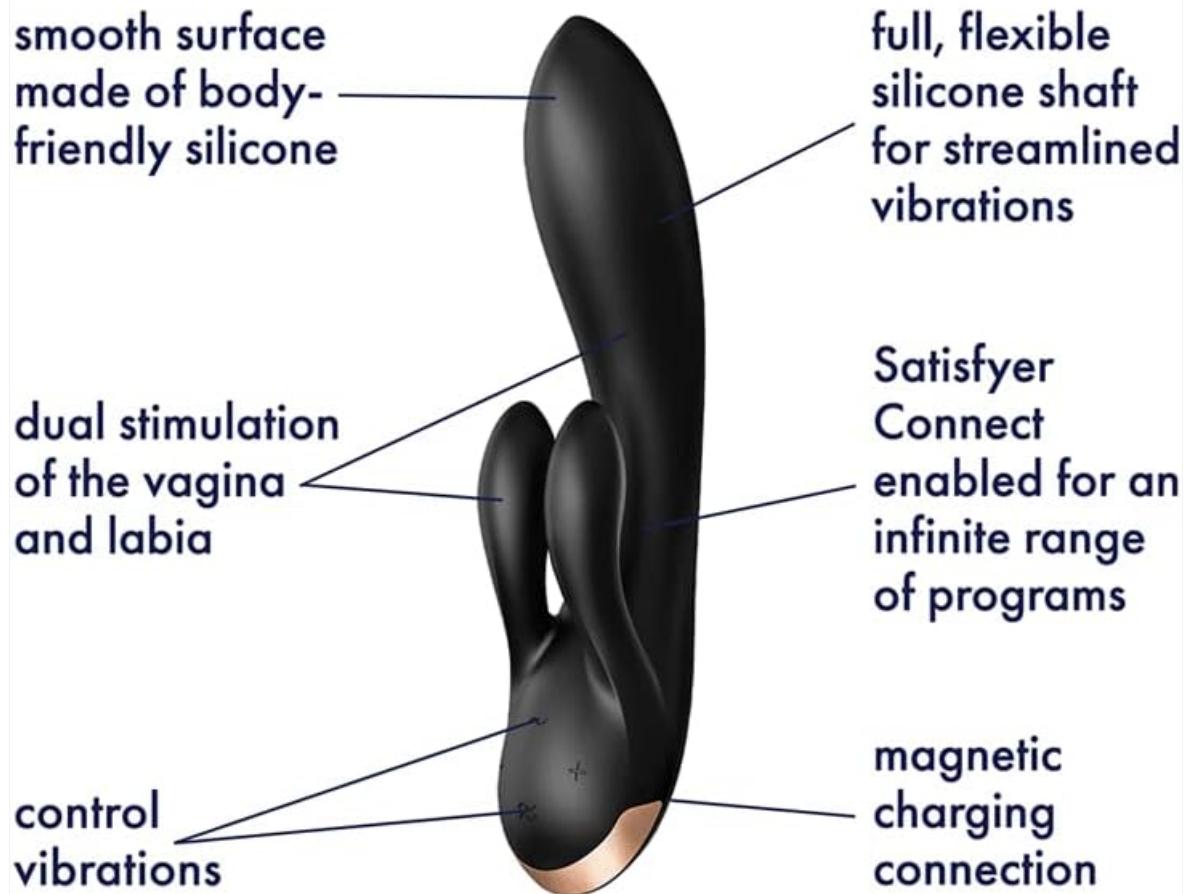


Image: The Satisfyer Connect App interface, demonstrating its features for device control.

OPERATING INSTRUCTIONS

Basic Device Control


- **Power On/Off:** Press and hold the power button for a few seconds to turn the device on or off.
- **Adjusting Vibrations:** Use the '+' and '-' buttons on the device to cycle through different vibration patterns and intensities.

App Control

Once connected to the Satisfyer Connect app, you gain access to advanced control features:

- **Custom Programs:** Create and save your own unique vibration patterns.
- **Remote Control:** Control the device from a distance.
- **Playlist Stimulation:** Sync vibrations to your favorite music.
- **Chat Function:** Interact with other users (optional feature).
- **Data Security:** The app emphasizes 100% data security.

**ALSO
USABLE
WITH FREE
APP**

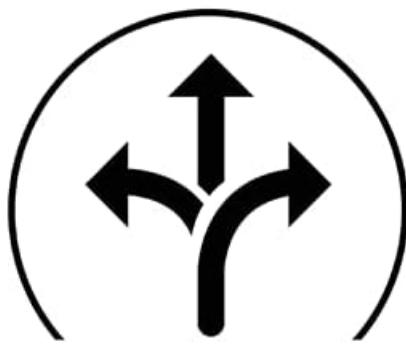

FLEXIBLE

Image: Product features diagram, detailing components and functions.

MAINTENANCE

Cleaning

- Clean the device thoroughly before and after each use.
- Wash with warm water and a mild, antibacterial soap or a specialized toy cleaner.
- Rinse thoroughly to remove all soap residue.
- Dry completely with a lint-free cloth or air dry before storing.

Storage

- Store the device in a clean, dry, and dust-free environment.
- Keep it away from direct sunlight, extreme temperatures, and other silicone products to prevent material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB magnetic charging cable.
Short battery life.	Frequent use or aging battery.	Ensure the device is fully charged before each use. Battery life naturally decreases over time.
Cannot connect to Satisfyer Connect app.	Bluetooth is off, device is off, or app issue.	Ensure Bluetooth is enabled on your phone, the device is turned on, and the app is updated to the latest version. Try restarting both the device and the app.
Material feels sticky or degraded.	Exposure to incompatible lubricants or improper storage.	Only use water-based lubricants. Store away from other silicone products and extreme conditions. If degradation is significant, discontinue use.

SPECIFICATIONS

- Model:** Satisfyer Double Flex
- Material:** Body-safe Silicone
- Color:** Black
- Dimensions (L x W x H):** Approximately 23 x 11 x 7 cm
- Motors:** 3 independent motors
- Water Resistance:** IPX7 (Waterproof up to 1 meter for 30 minutes)
- Charging:** USB Magnetic Charging Cable
- App Compatibility:** Satisfyer Connect App (iOS & Android) via Bluetooth
- Stimulation:** G-spot, Clitoral, and Labial

WARRANTY AND SUPPORT

Satisfyer offers a **15-year warranty** on the Double Flex, ensuring long-lasting satisfaction and product quality. For warranty claims, technical support, or any inquiries regarding your Satisfyer Double Flex, please contact Satisfyer customer service through their official website or the contact information provided in your product packaging.



Image: Satisfyer's 15-year warranty statement.

