

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Sencor](#) /

> [Sencor SHB 5608BK 4-in-1 Hand Blender Instruction Manual](#)

Sencor SHB 5608BK

Sencor SHB 5608BK 4-in-1 Hand Blender Instruction Manual

Model: SHB 5608BK

1. INTRODUCTION

Thank you for choosing the Sencor SHB 5608BK 4-in-1 Hand Blender. This versatile kitchen appliance is designed to simplify your food preparation tasks, offering blending, whisking, and chopping functionalities with its powerful 1200W motor and Titanium QuadBlade technology. Please read this instruction manual carefully before first use to ensure safe and efficient operation, and keep it for future reference.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before operating the appliance.
- Do not immerse the motor unit in water or any other liquid. Clean only with a damp cloth.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from moving blades during operation to prevent injury.
- Blades are sharp. Handle with extreme care during assembly, disassembly, and cleaning.
- Unplug the appliance from the power outlet before assembling or disassembling parts, and before cleaning.
- This appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities unless supervised or instructed.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any way.
- Avoid processing extremely hot liquids to prevent splashing and burns.
- Do not operate the hand blender continuously for more than 1 minute. Allow the motor to cool down for at least 3 minutes between cycles to prevent overheating.

3. PRODUCT OVERVIEW

The Sencor SHB 5608BK hand blender comes with several components to perform various kitchen tasks.

Main Unit and Controls



Figure 3.1: Main motor unit with blending attachment.

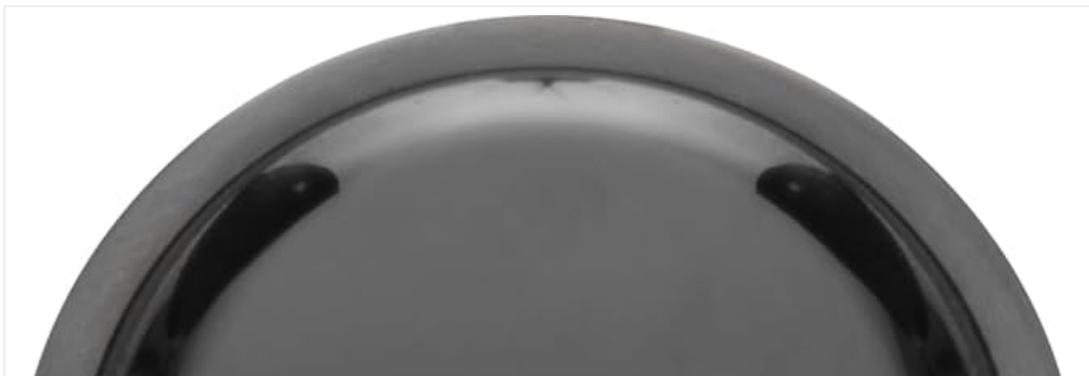




Figure 3.2: Close-up of the motor unit's speed dial and 'ON' button.

- **Motor Unit:** The core of the appliance, housing the 1200W motor and speed controls.
- **Speed Dial:** Located at the top, allows continuous adjustment of 20 speeds.
- **'ON' Button:** Activates the blender.

Attachments



Figure 3.3: Blending attachment with titanium blades.

- **Blending Attachment:** Equipped with Titanium QuadBlades for efficient blending of soups, sauces, and smoothies.





Figure 3.4: Whisk attachment for whipping cream and egg whites.

- **Whisk Attachment:** Ideal for whipping cream, beating egg whites, and preparing light batters.



Figure 3.5: Chopper bowl filled with ingredients.



Figure 3.6: Chopper attachment blades.

- **Chopper Attachment:** For chopping herbs, nuts, cheese, and small quantities of meat.
- **Measuring Cup:** An 800ml capacity cup for blending and measuring ingredients.

4. SETUP

Before using your Sencor hand blender for the first time, follow these steps:

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or disposal.
2. **Initial Cleaning:** Wash all detachable parts (blending shaft, whisk, chopper bowl, chopper blades, measuring cup) in warm soapy water, rinse thoroughly, and dry. Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water.
3. **Assembly:**
 - **Blending Attachment:** Align the blending shaft with the motor unit and twist until it locks securely into place.
 - **Whisk Attachment:** Insert the whisk into the whisk gear box, then attach the gear box to the motor unit by aligning and twisting.
 - **Chopper Attachment:** Place the chopper blade onto the central pin in the chopper bowl. Add ingredients, then place the chopper lid on the bowl. Finally, attach the motor unit to the chopper lid by aligning and twisting.

5. OPERATING INSTRUCTIONS

Ensure the appliance is correctly assembled and plugged into a 220V power outlet before operation.

General Operation

1. **Prepare Ingredients:** Cut larger ingredients into smaller pieces for easier processing.
2. **Select Speed:** Rotate the speed dial on top of the motor unit to select one of the 20 continuous speed settings. Start with lower speeds for delicate tasks and increase as needed.
3. **Activate:** Press and hold the 'ON' button to start the motor. Release the button to stop.
4. **Processing Time:** Do not operate the blender continuously for more than 1 minute. For optimal performance and motor longevity, use in short bursts or allow the motor to rest for 3 minutes after each minute of operation.

Using the Blending Attachment

Ideal for making smoothies, purees, soups, and sauces directly in pots or the included measuring cup.

- Immerse the blending shaft into the ingredients before pressing the 'ON' button.
- Move the blender gently up and down to ensure even blending.
- Do not fill containers too full to prevent splashing.

Using the Whisk Attachment

Perfect for whipping cream, beating egg whites, and mixing light batters.

- Use in a deep bowl to prevent splashing.
- Start at a low speed and gradually increase as the mixture thickens.

Using the Chopper Attachment

Suitable for chopping small quantities of ingredients like herbs, onions, nuts, and cheese.

- Ensure the chopper blade is correctly seated on the central pin.
- Do not overfill the chopper bowl.
- Use short pulse actions for coarse chopping, or hold for longer for finer results.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your appliance.



Figure 6.1: Detachable parts are dishwasher safe for easy cleaning.

1. **Always Unplug:** Before cleaning, always unplug the appliance from the power outlet.
2. **Motor Unit:** Wipe the motor unit with a soft, damp cloth. Never immerse it in water or other liquids.
3. **Blending Shaft, Whisk, Chopper Bowl, Blades, Measuring Cup:** These detachable parts can be washed in warm soapy water or placed in the dishwasher (top rack recommended). Handle blades with extreme care due to their sharpness.
4. **Drying:** Ensure all parts are completely dry before reassembling or storing.
5. **Storage:** Store the appliance and its accessories in a dry, safe place, out of reach of children.

7. TROUBLESHOOTING

If you encounter issues with your Sencor hand blender, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet faulty; motor unit not correctly attached.	Check power connection; try another outlet; ensure motor unit is securely locked onto the attachment.
Poor blending/chopping results.	Too many ingredients; ingredients too large; incorrect speed setting.	Reduce quantity of ingredients; cut ingredients into smaller pieces; increase speed or use pulse function.
Motor overheats or emits burning smell.	Continuous operation for too long; processing very hard ingredients.	Immediately turn off and unplug the appliance. Allow it to cool down for at least 30 minutes. Avoid continuous operation for more than 1 minute.

Problem	Possible Cause	Solution
Attachments are difficult to assemble/disassemble.	Incorrect alignment; residue buildup.	Ensure parts are aligned correctly before twisting. Clean connection points thoroughly.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Technical details for the Sencor SHB 5608BK Hand Blender:

Feature	Specification
Brand	Sencor
Model Number	SHB 5608BK-EUE3
Color	Black
Product Dimensions	14 x 21 x 43 cm
Weight	2.48 Kilograms
Capacity	800 Milliliters (measuring cup)
Power / Wattage	1200 Watts
Voltage	220 Volts
Material	Stainless Steel Titanium
Number of Speeds	20 (Continuous Control)
Special Feature	Portable
Included Components	1 x SHB 5608BK 1200W 4-in-1 Hand Blender
Recommended Uses	Fruit, Smoothies, Cream
Power Source	Corded Electric

9. WARRANTY AND SUPPORT

Sencor products are manufactured to high-quality standards. This product is covered by a manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, service, or warranty inquiries, please refer to the contact information provided with your purchase documentation or visit the official Sencor website for your region.

