

[Manuals.plus](#) /

› [Tommy Hilfiger](#) /

› Tommy Hilfiger Men's Stainless Steel Quartz Watch Model 1791968 Instruction Manual

## Tommy Hilfiger 1791968

# Tommy Hilfiger Men's Stainless Steel Quartz Watch Model 1791968 Instruction Manual

## 1. INTRODUCTION

This manual provides essential information for the proper use and care of your Tommy Hilfiger Men's Stainless Steel Quartz Watch, Model 1791968. This timepiece features a precision multi-function quartz movement, a durable mineral crystal, and a stainless steel case and bracelet.

The watch is designed for everyday wear and includes several useful functions to assist you in keeping track of time and dates.





Figure 1: Front view of the Tommy Hilfiger Men's Stainless Steel Quartz Watch.

## 2. SETUP

### 2.1 Band Adjustment

The stainless steel bracelet is designed for a secure and comfortable fit. If the watch band is too large, links can be removed to achieve a snugger fit. It is recommended to have a professional watchmaker perform any band adjustments to prevent damage to the bracelet.

### 2.2 Setting Time and Date

To set the time and date, locate the crown on the right side of the watch case. Gently pull out the crown to the appropriate position. Rotate the crown to adjust the hour, minute, and date as needed. Once set, push the crown back into its original position to secure the settings and ensure water resistance.



Figure 2: Side view illustrating the watch crown and pushers.

### 3. OPERATING THE MULTI-FUNCTION FEATURES

Your Tommy Hilfiger watch features a multi-function quartz movement with three sub-dials on the main display:

- **Day of the Week Indicator:** Displays the current day of the week.
- **24-Hour Time Indicator:** Shows the time in a 24-hour format.
- **Date of the Month Indicator:** Displays the current date.

#### 3.1 Stopwatch Function

The watch includes a stopwatch function. To operate the stopwatch:

1. Press the **top pusher button** (located above the crown) to start the stopwatch.

2. Press the **top pusher button** again to stop the stopwatch.
3. To reset the stopwatch, press and hold the **bottom pusher button** (located below the crown).



Figure 3: Detailed view of the watch dial showing the multi-function sub-dials.

## 4. MAINTENANCE

### 4.1 Water Resistance

This watch is water resistant up to 5 ATM (50 meters / 165 feet). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers while the watch is wet to maintain its water resistance.

### 4.2 Crystal Durability

The watch features a durable mineral crystal, designed to protect the watch face from scratches and impacts during normal use.

### 4.3 General Care

To ensure the longevity and optimal performance of your Tommy Hilfiger watch, follow these care guidelines:

- Clean the watch regularly with a soft, dry cloth.

- Avoid exposing the watch to extreme temperatures or sudden temperature changes.
- Do not expose the watch to strong magnetic fields.
- A maintenance interval of 3 to 5 years is recommended, in addition to any required battery replacement.
- **Never attempt to open the watch yourself.** Any repairs or battery replacements should be performed by an authorized service center.



Figure 4: Rear view of the watch, displaying the stainless steel case back.

## 5. TROUBLESHOOTING

---

If you experience any issues with your watch, consider the following:

- **Watch not running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Incorrect time/date:** Refer to Section 2.2 for instructions on setting the time and date.
- **Water ingress:** If water appears inside the watch, immediately take it to an authorized service center. Do not attempt to dry it yourself.

For complex issues or repairs, please contact Tommy Hilfiger customer support or an authorized service center.

## 6. SPECIFICATIONS

---

Feature	Specification
Model Number	1791968
Brand Name	Tommy Hilfiger
Display Type	Analog
Watch Movement Type	Quartz
Power Source	Battery Powered
Case Material Type	Stainless Steel
Case Diameter	46 Millimeters
Case Thickness	10.5 Millimeters
Band Material Type	Stainless Steel
Band Width	22 Millimeters
Clasp Type	Push Button Deployment Clasp
Crystal	Mineral
Water Resistance Depth	50 Meters (5 ATM / 165 Feet)
Dial Color	Blue
Band Color	Silver

## 7. WARRANTY AND SUPPORT

---

Your Tommy Hilfiger watch comes with a Limited Warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For warranty claims, service, or additional support, please contact Tommy Hilfiger customer service.

**Contact Information:** Refer to the official Tommy Hilfiger website or your product packaging for the most current customer support details.

## 8. PRODUCT OVERVIEW VIDEO

---

Your browser does not support the video tag.

Video 1: A brief product overview of the Tommy Hilfiger Men's Watch Model 1791968, showcasing its design and features.