

## Casio CDP-S360

# Casio CDP-S360 Slim 88-Key Weighted Digital Piano User Manual

Model: CDP-S360

## 1. INTRODUCTION

This manual provides essential information for the proper use and care of your Casio CDP-S360 Slim 88-Key Weighted Digital Piano. Please read it thoroughly before using the instrument to ensure safe and optimal performance. Keep this manual for future reference.



Image 1.1: Top-down view of the Casio CDP-S360 Digital Piano, showcasing its full 88-key layout and control panel.

## 2. SAFETY PRECAUTIONS

- **Power Supply:** Use only the specified AC adapter or six AA-size alkaline batteries. Do not use other power sources.
- **Moisture:** Keep the instrument away from water or excessive humidity. Do not place liquid containers on the piano.
- **Heat:** Avoid exposing the instrument to direct sunlight, heat sources, or extreme temperatures.
- **Placement:** Place the instrument on a stable, level surface to prevent accidental falls.
- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth. Avoid abrasive cleaners or solvents.
- **Disassembly:** Do not attempt to disassemble or modify the instrument. Refer all servicing to qualified personnel.

## 3. SETUP

### 3.1 Unpacking

Carefully remove the digital piano and all accessories from the packaging. Verify that all components are present:

- Casio CDP-S360 Digital Piano
- AC Adapter

- Sustain Pedal (SP-3)
- Music Rest
- User Manual (this document)

## 3.2 Power Connection

The CDP-S360 can be powered by the included AC adapter or by batteries.

### Using the AC Adapter:

1. Connect the AC adapter to the DC 12V jack on the rear panel of the digital piano.
2. Plug the AC adapter into a standard wall outlet.

### Using Batteries:

1. Ensure the power is off.
2. Open the battery compartment cover on the bottom of the piano.
3. Insert six AA-size alkaline batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

## 3.3 Connecting Accessories

### Sustain Pedal:

Connect the included sustain pedal (SP-3) to the PEDAL jack on the rear panel. This pedal functions as a sustain pedal, allowing notes to ring out after keys are released.

### Headphones:

For private practice, connect standard stereo headphones to the PHONES/OUTPUT jack. Connecting headphones will mute the internal speakers.

### Music Rest:

Insert the music rest into the slots on the top panel of the piano.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Power On/Off and Volume

- **Power On:** Press the **[POWER]** button. The display will illuminate.
- **Power Off:** Press and hold the **[POWER]** button until the display turns off.
- **Volume Adjustment:** Use the **[VOLUME]** knob to adjust the overall sound level.

### 4.2 Key Action and Touch Response

The CDP-S360 features 88 full-size, scaled hammer-action keys with simulated ivory and ebony textures, providing a realistic grand piano feel. The touch response can be adjusted to match your playing style.



Image 4.1: A hand demonstrating the feel of the weighted keys, highlighting the realistic piano experience.

### 4.3 Tones and Rhythms

The instrument includes 700 different tones and 200 rhythms with auto-accompaniment features.

- **Selecting Tones:** Use the **[TONE]** button and the data entry dial or number buttons to select from the available tones.
- **Selecting Rhythms:** Use the **[RHYTHM]** button and the data entry dial or number buttons to select from the available rhythms.
- **Auto-Accompaniment:** Press the **[START/STOP]** button in the rhythm section to begin or end auto-accompaniment.



Image 4.2: Detailed view of the control panel, illustrating the buttons for tone and rhythm selection, along with the data entry dial.

## 4.4 Duet Mode

Duet Mode splits the keyboard into two equal ranges, allowing two players to play simultaneously in the same octave range. This is ideal for lessons or collaborative playing.

- **Activating Duet Mode:** Refer to the detailed instructions in the full manual for specific button combinations to activate and deactivate Duet Mode.

## 4.5 6-Track MIDI Recorder

The built-in 6-track MIDI recorder allows you to record your performances and layer multiple parts. This is a valuable tool for songwriting and practice.

- **Recording:** Press the **[REC]** button to start recording.
- **Playback:** Press the **[PLAY]** button to listen to your recorded performance.

## 4.6 Connectivity

The CDP-S360 offers various connectivity options for enhanced functionality.

- **USB-MIDI:** Connect the piano to a computer or smart device using a USB cable for MIDI data transfer. This allows interaction with music software and the Casio Music Space app. No special drivers are required.
- **Casio Music Space App:** Download the free Casio Music Space app for iOS and Android devices to access learning tools, customize settings, and expand your musical experience.
- **Bluetooth:** The piano supports an optional WU-BT10 Bluetooth MIDI & audio adapter for wireless connectivity to smart devices.



Image 4.3: A tablet placed on the music rest, showing the Casio Music Space app interface, demonstrating app integration.

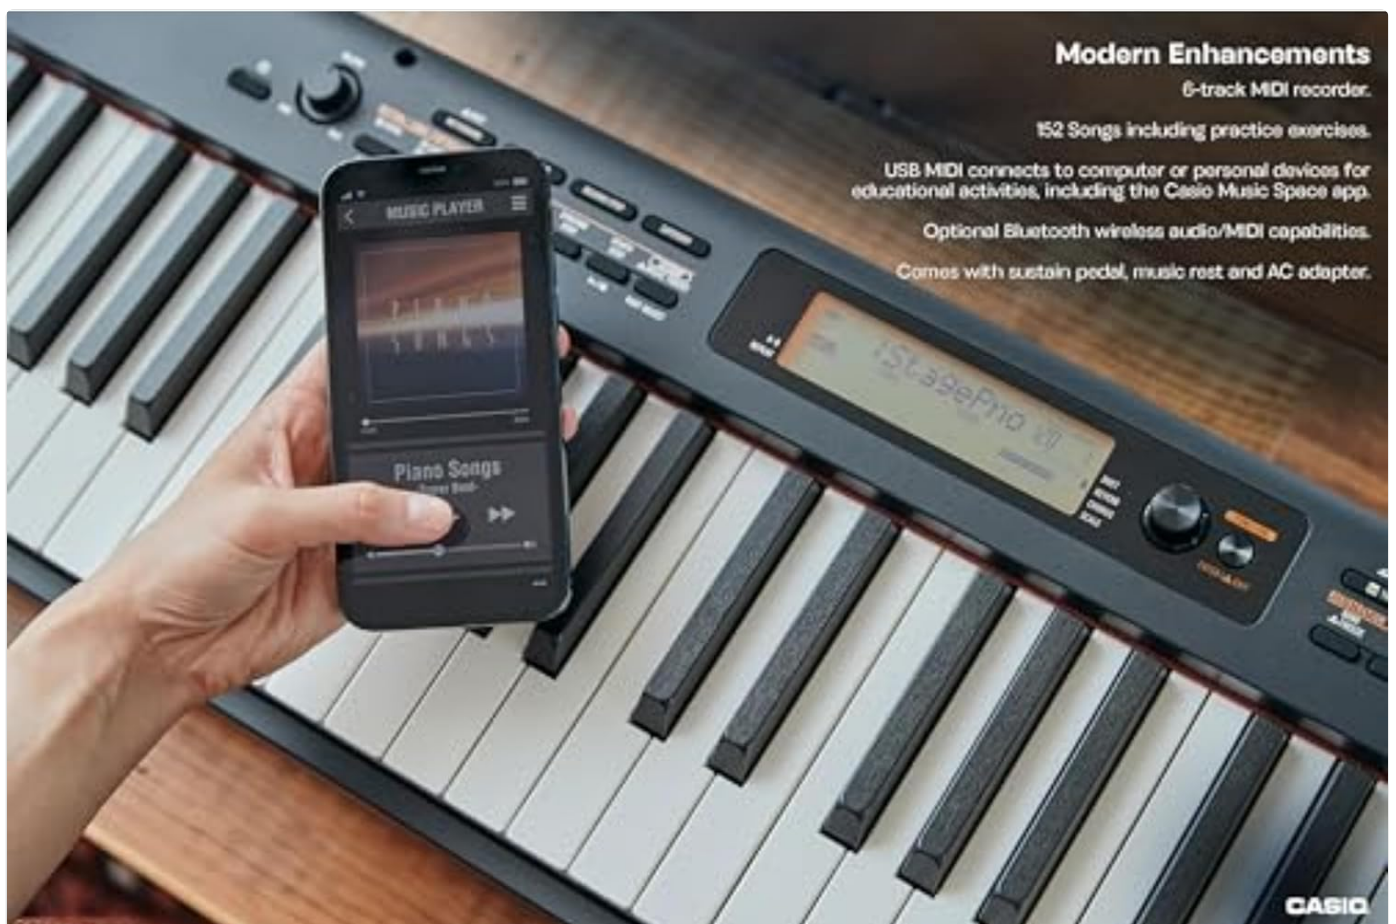


Image 4.4: A smartphone connected to the digital piano, illustrating USB-MIDI connectivity for external devices.



Image 4.5: A close-up view of the USB-MIDI ports on the rear panel of the digital piano.

## 4.7 Pitch Bend Wheel

The pitch bend wheel allows for real-time pitch modulation, adding expressive capabilities to your performance, especially with non-piano tones.

# 5. MAINTENANCE

---

## 5.1 Cleaning

To maintain the appearance and functionality of your digital piano:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water and a mild, neutral detergent, then wipe dry immediately.
- Avoid using benzene, alcohol, paint thinner, or other chemical agents, as they can damage the finish.

## 5.2 Storage

When not in use for extended periods:

- Store the instrument in a cool, dry place, away from direct sunlight and extreme temperature fluctuations.
- If using batteries, remove them to prevent leakage and damage.
- Cover the piano with a dust cover to protect it from dust and debris.

# 6. TROUBLESHOOTING

---

If you encounter issues with your CDP-S360, refer to the table below for common problems and solutions.

| Problem                   | Possible Cause                                                                 | Solution                                                                         |
|---------------------------|--------------------------------------------------------------------------------|----------------------------------------------------------------------------------|
| No sound                  | Volume is too low or muted. Headphones are connected. Power is off.            | Increase the VOLUME knob. Disconnect headphones. Ensure the piano is powered on. |
| Keys do not produce sound | Local control is off (MIDI setting).                                           | Check MIDI settings to ensure local control is enabled.                          |
| Power does not turn on    | AC adapter not connected properly. Batteries are dead or incorrectly inserted. | Check AC adapter connection. Replace batteries or verify polarity.               |

| Problem                          | Possible Cause                                                              | Solution                                                                                                   |
|----------------------------------|-----------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| USB-MIDI connection issues       | USB cable is faulty or disconnected.<br>Software settings are incorrect.    | Ensure USB cable is securely connected. Check MIDI input/output settings in your software.                 |
| Bluetooth adapter not connecting | Adapter not inserted correctly. Bluetooth on device is off. Pairing failed. | Ensure WU-BT10 adapter is fully inserted. Enable Bluetooth on your smart device and attempt pairing again. |



## 7. SPECIFICATIONS


Key technical specifications for the Casio CDP-S360 Digital Piano:

| Feature                | Detail                                                                         |
|------------------------|--------------------------------------------------------------------------------|
| Model Name             | CDP-S360                                                                       |
| Number of Keys         | 88                                                                             |
| Key Action             | Scaled Hammer Action Keyboard II (with simulated ivory and ebony key textures) |
| Tones                  | 700                                                                            |
| Rhythms                | 200                                                                            |
| Polyphony              | 128-note                                                                       |
| Recorder               | 6-track MIDI Recorder                                                          |
| Connectivity           | USB-MIDI, Bluetooth (via optional WU-BT10 adapter)                             |
| Speakers               | Built-in 16-watt stereo speakers                                               |
| Power Source           | AC Adapter (included) or 6 AA batteries                                        |
| Dimensions (W x D x H) | 52.05 x 9.13 x 3.9 inches (132.2 x 23.2 x 9.9 cm)                              |
| Weight                 | 24.03 lbs (10.9 kg)                                                            |

## 8. WARRANTY AND SUPPORT

For information regarding warranty coverage, service, and technical support, please refer to the warranty card included with your product or visit the official Casio website.  
You can also visit the [Casio Store on Amazon](#) for additional product information and resources.
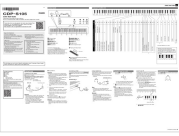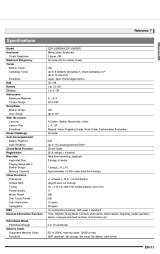
|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                              |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <p><a href="#">Casio CDP-S105 Digital Piano Quick Start Guide</a></p> <p>A concise guide to setting up and operating the Casio CDP-S105 digital piano, covering power, sound selection, metronome, and connectivity. Learn how to connect accessories, use basic functions, and access advanced features.</p>                                                                |
|    | <p><a href="#">CASIO CDP-S360 Guida dell'Utilizzatore</a></p> <p>Questa guida dell'utilizzatore per il pianoforte digitale CASIO CDP-S360 fornisce informazioni dettagliate su configurazione, funzioni, operazioni e risoluzione dei problemi, aiutando gli utenti a sfruttare al meglio il loro strumento.</p>                                                             |
|    | <p><a href="#">Casio CDP-S100 Digital Piano: User's Guide</a></p> <p>Learn to operate and configure your Casio CDP-S100 digital piano with this comprehensive user's guide. Covers setup, tones, effects, metronome, connectivity, and troubleshooting.</p>                                                                                                                  |
|  | <p><a href="#">Casio CDP-130 Digital Piano User Guide</a></p> <p>Comprehensive user guide for the Casio CDP-130 Digital Piano, covering setup, playing features, connectivity, and troubleshooting.</p>                                                                                                                                                                      |
|  | <p><a href="#">Casio CDP-S100 Digital Piano Quick Start Guide</a></p> <p>A quick start guide for the Casio CDP-S100 digital piano, covering setup, basic operations, features like tones, metronome, and connectivity, along with specifications and safety precautions.</p>                                                                                                 |
|  | <p><a href="#">Casio CDP-230RBK/CDP-230RSR Digital Piano Specifications and Operating Precautions</a></p> <p>Detailed specifications for the Casio CDP-230RBK and CDP-230RSR digital pianos, including keyboard features, tones, functions, metronome, lessons, accompaniment, and connectivity. Also includes important operating precautions for safe and optimal use.</p> |

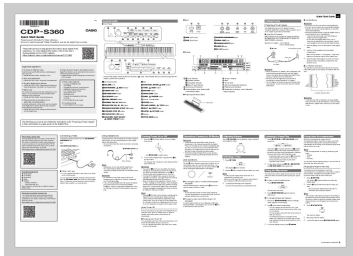

[\[pdf\]](#) Quick Start Guide Instructions Guide

CDPS360 EN CASIO COMPUTER CO LTD CDP S360 Quick Start Guide v 6730943760337643821

casioau cdn shop files |||

EN **CDP-S360** Quick Start Guide Please keep all information for future reference. Be sure to read the separate Safety Precautions and use the Digital Piano correctly.

These instructions provide general information about Digital Piano operations. For more detailed information, refer to the User s Gui...

lang:en **score:48** filesize: 527.23 K page\_count: 2 document date: 2023-05-30



[\[pdf\]](#) Guide Accessories Catalog

CDPS360 EN CASIO COMPUTER CO LTD CDP S360 User Guide v 6149543032382331947 casioau

cdn shop files |||

Cover **CDP-S360** EN USER S GUIDE Preparing a Power Supply Turning Power On or Off Using a Pedal Using Headphones Playing on the Keyboard Splitting the Keyboard for Duet Play Changing the Pitch in Semitone Steps Transpose Fine Tuning a Pitch Tuning Changing the Pitch in Octave Units Oc...

lang:en **score:44** filesize: 1.52 M page\_count: 73 document date: 2023-05-30




[\[pdf\]](#) Datasheet

CASIO CDP S360 Usato Strumenti Musicali||| è compatibile con il supporto fisso a tre pedali CS 470P e I unità SP 34 entrambi venduti separatamente adatti sia per I docstrumentimusicali net datasheet products id 176909 |||

Pianoforti Pianoforti Digitali CASIO **CDP-S360** Usato sabato 06 settembre, 2025 trumentiMusicali.n No image Cod.Art. : 176909 La tecnologia di montaggio ad alta densit proprietaria di Casio, con componenti miniaturizzati e una struttura interna salvaspazio, la chiave del corpo sottile di questo ...

 lang:it **score:33** filesize: 21.63 K page\_count: 4 document date: 2025-09-06

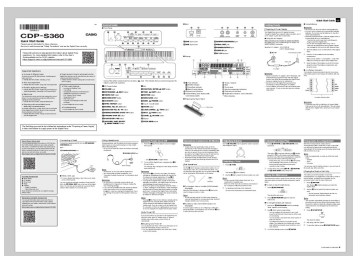

[\[pdf\]](#) Quick Start Guide Guide

CDPS360 EN CASIO COMPUTER CO LTD CDP S360 Quick Start Guide 1 2 Please keep all information

for future reference Be sure to read the separate Safety Precautions and use Digital Piano correctly

quickstartguide casio content dam global support manuals electronic musical instruments 008 en c |||

...

lang:it **score:28** filesize: 2.89 M page\_count: 2 document date: 2021-08-05



CASIO launches new models of its successful CDP-S digital piano series

Welcome the new family members CDP-S110, CDP-S160SET and CDP-S360 with improved piano tones and features



CDP-S110 in black and white

The CDP-S110 comes with an improved decay for the piano tone, now available in beautiful white as additional color.



The CDP-S160SET is delivered with a stand including an in-built 3-pedal unit and has additional features such as Duet Mode, Midi recorder and scale function, available in stylish black or red body color including a black stand.

The new CDP-S flagship model CDP-S360 now features the Bluetooth Audio & MIDI capabilities known from the Privia and CasioTone ranges, thanks to the compatibility with the optional Bluetooth® Adapter WU-BT10. In addition the sound source of CDP-S360 has been enhanced by increasing the polyphony from 64 to 128 notes.

CDP-5110  
Take Your First Step on a Satisfying Musical Journey

The CDP-S110 is the entry-level model in the CDP-S digital piano series and offers an impressive range of features: authentic keyboard, sound generation and an impressive speaker system. Ten essential tones, including grand pianos and electric pianos, are waiting to be discovered and played.

CDP-S 110 is available in black and white color

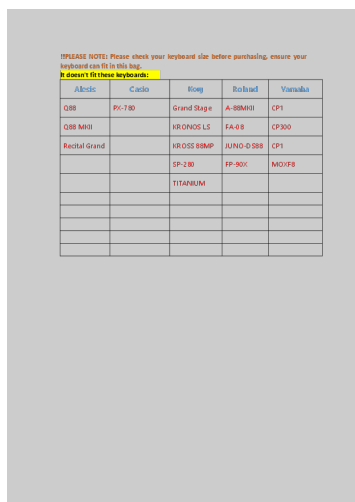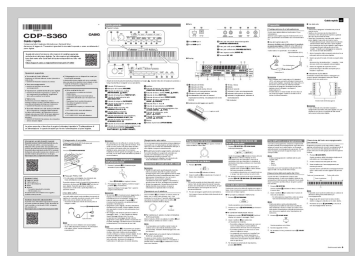

[\[pdf\]](#)

1998 7

WCQ3omGShivD5OcXDmN4eRo1zKYB8FRUMh1sFSE8 press

casio europe storage |||

NEWS RELEASE CASIO launches new models of its successful CDP-S digital piano series Welcome the new family members CDP-S110, CDP-S160SET and **CDP-S360** with improved piano tones and features PX-S1100BK CDP-S110 in black and white  
Norderstedt, January 18, 2022 - Casio announces the release of three new...

lang:en score:26 filesize: 357.56 K page\_count: 10 document date: 2022-01-18

[\[pdf\]](#) Catalog

CDP S Series il y a 14 heures — This catalog is current as of October 2024 WU BT10 S360 Wireless MIDI Audio Adaptor Pedal Bench Headphones Stand Slim Body Design with cdp s casio content dam global emi |||

CASIO DIGITAL PIANO CDP-S Series Discover Your Style from a Compact Piano  
Designed for Everyone **CDP-S360** CDP-S160 CDP-S110 BK BK BK Express Yourself  
with Tones and Rhythms Suitable for Music of All Styles 88 Keys Touch Response  
128 max Polyphony 700 Built-in Tones 200 built-in rhythms Digita...

lang:en score:25 filesize: 2.02 M page\_count: 2 document date: 2024-11-08

[\[pdf\]](#) User Manual Guide

CDPS360 IT CASIO COMPUTER CO LTD support casio storage it manual 008 quickstartguide Casio  
CDP S360 Pianoforte Digitale musicarteconegliano GUIDA RAPIDA |||

...

lang:en score:25 filesize: 2.88 M page count: 2 document date: 2021-08-05

[\[pdf\]](#) User Manual

88 Key Keyboard Case Soft Interior 53 5 x13 8 x6 Padded Piano with Handles and Adjustable

Shoulder Straps Gig Bag 3 Pocket for Music Sheet Stands Sustain Pedals Cables Red Stripe User

Manual SNIGJAT B0B51QN5R9 B09F96QJ8V B09N98T135 61vUhrj20OL m media amazon images I |||

PLEASE NOTE: Please check your keyboard size before purchasing, ensure your keyboard can fit in th ... io Concert CDP-130 Prestige CDP-S150 Prestige Artist CDP-S160 Recital CDP-S350 Recital Pro **CDP-S360** PX-360 PX-560 PX-5S PX-S1000 PX-S1100 Korg B2N B2SP D1 XE20 Roland Yamaha FP-10 C...

lang:tl score:24 filesize: 99.21 K page count: 2 document date: 2022-05-24




[pdf] User Manual

CDPS360 EN CASIO COMPUTER CO LTD Casio CDP S360 User Manual 88 Scaled Weighted Hammer Action Keys 700 Tones 801202 bhphotovideo lit files |||

...

 lang:tl score:23 filesize: 6.62 M page\_count: 73 document date: 2021-09-13

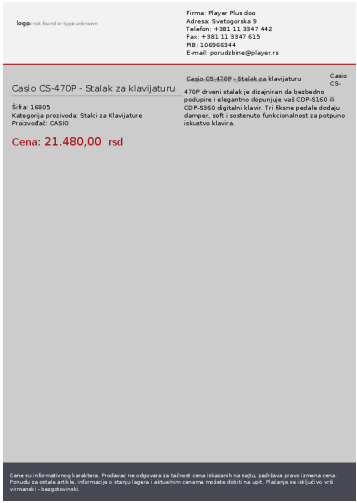

[pdf]

Casio CS 470P Stalak za klavijaturuCasio drveni stalak je dizajniran da bezbedno podupire i elegantno dopunjuje vaš CDP S160 ili S360 digitalni klavirdocumentplayer rs stampanje 25528 |||

Ilmogagoe not found or type unknown Firma: Player Plus doo Adresa: Svetogorska 9 Telefon: 381 11 3 ... CS- 470P drveni stalak je dizajniran da bezbedno podupire i elegantno dopunjuje vas CDP-S160 ili **CDP-S360** digitalni klavir. Tri fiksne pedale dodaju damper, soft i sostenuto funkcionalnost za potp...

lang:hr score:22 filesize: 14.39 K page\_count: 1 document date: 2025-09-05




[pdf] Datasheet Declaration of Conformity Accessories

CASIO AD A12150LW Strumenti Musicali PX S3100 S5000 560 770 5S AP 270 Prezzo €25 00 IVA inclusa €20 49 esclusa StrumentiMusicali net strumentimusicali doc strumentimusicali datasheet products id 58110 |||

 Accessori per Tastiera Alimentatori per Tastiera CASIO AD-A12150LW venerd 20 giugno, 2025 Cod.Ar ... e compatibili: PX-130, PX-330, CTK-6000/WK6500, tiM CTK-7000/WK-7500, CT-X3000, CDP-S100, CDP-S110, **CDP-S360**, PX-S1100, PX-S3100, PX-S5000, PX-560, PX-770, PX-5S, AP-270 trumenPrezzo : 25,00 IVA inclu... lang:it score:21 filesize: 19.07 K page\_count: 1 document date: 2025-06-20



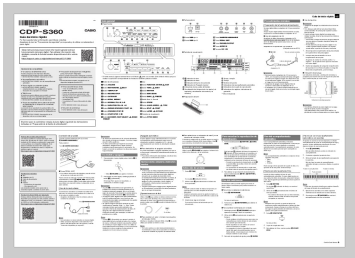

[pdf] User Manual Guide

CDPS360 ES CASIO COMPUTER CO LTD CDP S360 Support 5 ott 2022 — Toque acompañado de los datos sonido procedentes un dispositivo conectado externamente La conexión reproductor audio portátil u otro quickstartguide support casio es manual 008 |||

...

lang:it score:19 filesize: 2.88 M page\_count: 2 document date: 2021-08-05



[pdf] Guide

CDPS360 SV CASIO COMPUTER CO LTD CDP S360 CASIOSV 9 Användning av hörlurar 10 Anslutning den trådlösa adapter för MIDI audio CDPS360 usersguide SVcasio content dam casio global support manuals electronic musical instruments 008 sv c |||

...

lang:it score:19 filesize: 6.32 M page\_count: 73 document date: 2024-12-11



[pdf] User Manual Guide

CDPS360 ES CASIO COMPUTER CO LTD CDP S360 Support 5 ott 2022 — Cuando el piano digital funciona solo con energía de las pilas notas podrían sonar distorsionadas al interpretar o reproducir una canción a un volumen usersguide support casio es manual 008 |||

...

lang:it score:18 filesize: 6.64 M page\_count: 73 document date: 2021-09-15



[pdf] Guide

CDPS360 TR CASIO COMPUTER CO LTD CDP S360 CASIO5 RECORD STOP düğmesi 6 CATEGORY 7 INTRO REPEAT 8 NORMAL düğmesine bastığımda çalışmıyor 1P Güç iyice ve tamamen CDPS360 usersguide TRcasio content dam casio global support manuals electronic musical instruments 008 tr c |||

...

lang:it score:17 filesize: 7.52 M page\_count: 73 document date: 2024-12-11




[pdf] Guide

CDPS360 FR CASIO COMPUTER CO LTD CDP S360 21 час назад — « Pairing » clignote pour indiquer l'attente de pairing audio Bluetooth et du MIDI Low Energy peut entraîner un fonctionnement instable usersguide casio content dam global support manuals electronic musical instruments 008 fr c |||

...

 lang:it score:17 filesize: 6.44 M page\_count: 73 document date: 2024-12-11

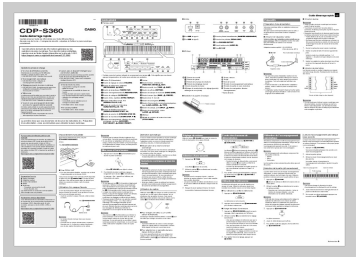

[pdf] Guide

CDPS360 FR CASIO COMPUTER CO LTD CDP S360 27 anp 2025 r — Jouer en vous accompagnant de données sonores d'un appareil externe raccordé Un lecteur audio portable ou autre peut être quickstartguide casio content dam global support manuals electronic musical instruments 008 fr c |||

...

lang:it score:17 filesize: 2.87 M page\_count: 2 document date: 2021-08-05




[pdf] Guide

CDPS360 NL CASIO COMPUTER CO LTD CDP S360 19 anp 2025 r — Wanneer de Digitale Piano op batterijen wordt gebruikt, is het mogelijk dat de noten vervormd klinken wanneer een uitvoering of melodie maximaal usersguide casio content dam global support manuals electronic musical instruments 008 nl c |||

...

 lang:it score:17 filesize: 6.4 M page\_count: 73 document date: 2024-12-11

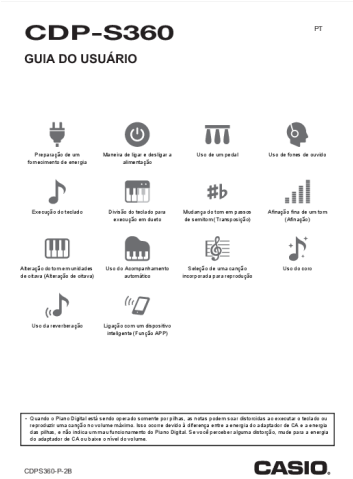

[pdf] User Manual Guide

CDPS360 PT CASIO COMPUTER CO LTD CDP S360 il y a 2 jours — Para emparelhar este produto com um dispositivo externo compatível tecnologia sem fio Bluetooth® você precisa conectar o adaptador para MIDI usersguide casio content dam global support manuals electronic musical instruments 008 pt c |||


... lang:it score:17 filesize: 6.39 M page\_count: 73 document date: 2024-12-11



[pdf] Guide

CDPS360 DE CASIO COMPUTER CO LTD CDP S360 20 anp 2025 r — Wenn das Digitalpiano nur mit Batteriestrom benutzt wird kann es vorkommen dass Noten beim Spielen auf der Tastatur oder Abspielen eines Songs usersguide casio content dam global support manuals electronic musical instruments 008 de c |||

 
... lang:it score:17 filesize: 6.48 M page\_count: 73 document date: 2024-12-11

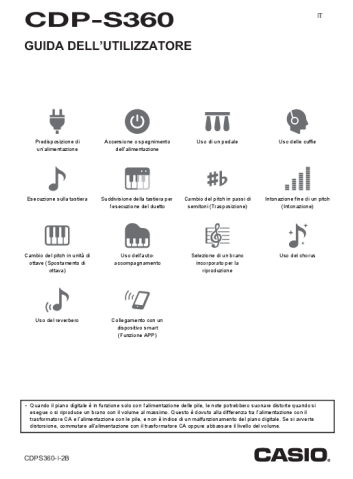

CASIO CDP-S360 Guida dell'Utilizzatore

Questa guida dell'utilizzatore per il pianoforte digitale CASIO CDP-S360 fornisce informazioni dettagliate su configurazione, funzioni, operazioni e risoluzione dei problemi, aiutando gli utenti a sfruttare al meglio il loro strumento.

 lang:it score:17 filesize: 6.71 M page\_count: 73 document date: 2024-12-11

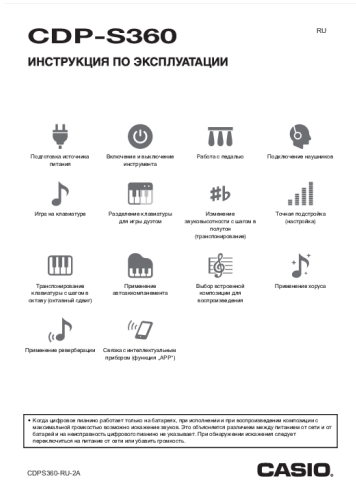


[pdf]

CDPS360 RU CASIO COMPUTER CO LTD casio cdp s360 Index of pictures data samodelka ru |||

...

 lang:it score:17 filesize: 6.91 M page\_count: 73 document date: 2021-09-15

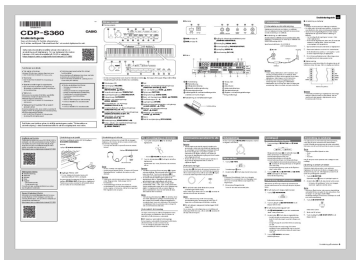

[pdf] Guide


CDPS360 SV CASIO COMPUTER CO LTD CDP S360 □ För att ändra antal slag per takt 1 Håll 3

METRONOME intryckt tills 4 Spela med till rytmen 5 Tryck en gång på bm START STOP för

quickstartguide casio content dam global support manuals electronic musical instruments 008 sv c |||

...

 lang:it score:16 filesize: 2.87 M page\_count: 2 document date: 2021-08-05

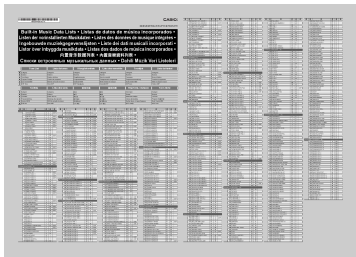


[pdf]

14M10APPEND WL 1A 2A CASIO COMPUTER CO LTD CDP S360 Built In Music Data List v

10364391861649874294 casioau cdn shop files |||

EN/ES/DE/FR/NL/IT/SV/PT/CN/TW/RU/TR Built-in Music Data Lists Listas de datos de msica incorporados Listen der vorinstallierten Musikdaten Listes des donnees de musique intgres Ingebouwde muziekgegevenslijsten Liste dei dati musicali incorporati Listor ver inbyggda musikdata Listas dos dados d...

 lang:it score:14 filesize: 1.12 M page\_count: 4 document date: 2023-05-30

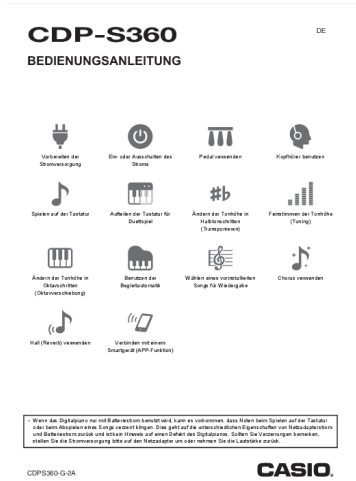

[pdf]

CDPS360 DE CASIO COMPUTER CO LTD CDP S360 pries 21 valandą — Die Wortmarke Bluetooth® und diesbezüglichen Logos sind eingetragene Marken von Bluetooth SIG Inc Dies lässt „Pairing blinken was Koppelbereitschaft 220787738 assets brack ch documents2 8 3 7 |||

...

lang:it score:11 filesize: 6.42 M page\_count: 73 document date: 2021-09-15