

[Manuals.plus](#) /

> [Nostalgia](#) /

> Nostalgia Oscar Mayer Extra Large Countertop 8 Hot Dog Roller and Bun Toaster Oven - Stainless Steel Rollers and Non-stick Warming Racks - Adjustable Timer Hot Dog Roller Yellow User Manual

Nostalgia Oscar Mayer

Nostalgia Oscar Mayer Hot Dog Roller & Bun Toaster Oven User Manual

Model: Oscar Mayer

PRODUCT OVERVIEW

The Nostalgia Oscar Mayer Extra Large Countertop 8 Hot Dog Roller and Bun Toaster Oven provides a convenient and enjoyable way to prepare hot dogs and warm buns. This appliance is designed for ease of use, featuring five stainless steel grill rollers for cooking hot dogs and two non-stick warming racks for buns, all controlled by an adjustable timer.



Nostalgia Oscar Mayer Hot Dog Roller and Bun Toaster Oven in yellow, with hot dogs cooking on top and buns warming below. Three prepared hot dogs with various toppings are shown on the left.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before operating this appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or any part of the unit in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.

INITIAL SETUP

Before first use, follow these steps:

1. Carefully unpack the hot dog roller and bun toaster oven and remove all packaging materials.
2. Wipe down the exterior of the unit with a damp cloth.
3. Wash the stainless steel rollers and non-stick warming racks with warm, soapy water. Rinse thoroughly and dry completely.
4. Place the unit on a stable, heat-resistant surface, ensuring adequate ventilation around the appliance.
5. Ensure the drip tray is properly inserted at the bottom of the unit.

HOT DOG ROLLER

cooks up to eight
hot dogs a time 

keep buns 
toasty & warm
inside the
convenient
warming
racks



The hot dog roller and bun toaster oven measures 9 inches high, 10 inches deep, and 15 inches wide.

OPERATING INSTRUCTIONS


Cooking Hot Dogs

Place up to 8 standard-sized hot dogs directly onto the stainless steel grill rollers. The rollers will rotate to ensure even cooking.

Warming Buns

Open the lower compartment door and place your hot dog buns on the non-stick warming racks. The racks will keep the buns warm and ready to serve.

EASY-TO-USE

 Just add your dogs and buns and set the automatic timer

a delightful way to whip up a quick meal for any party!



Simply add hot dogs to the rollers and buns to the warming racks for easy preparation.

Setting the Timer

Once hot dogs and buns are loaded, turn the timer knob located on the side of the unit to your desired cooking time. The appliance will begin cooking and automatically shut off when the timer expires.

Versatile Cooking

Beyond hot dogs, this versatile appliance can also be used to cook a variety of other items such as brats, veggie dogs, sausages, taquitos, and egg rolls, providing perfectly rolled and heated results.



also grill chicken,
turkey, veggie dogs,
sausages, brats,
taquitos and more!

The appliance is suitable for cooking various types of sausages and other rolled foods.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your hot dog roller and bun toaster oven. Always unplug the unit from the electrical outlet and allow it to cool completely before cleaning.

- **Exterior:** Wipe the exterior surfaces with a damp, non-abrasive cloth. Do not use harsh chemicals or abrasive cleaning pads.
- **Rollers and Racks:** The stainless steel rollers and non-stick warming racks are removable for easy cleaning. Wash them with warm, soapy water. For stubborn residue, a soft brush can be used. Rinse thoroughly and dry completely before reassembling.
- **Drip Tray:** Remove and empty the drip tray after each use. Wash it with warm, soapy water, rinse, and dry.
- **Do Not Immerse:** Never immerse the main unit, cord, or plug in water or any other liquid.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Hot dogs not cooking evenly	Rollers not rotating or hot dogs improperly placed.	Ensure the unit is plugged in and the 'POWER & ROLL' switch is on. Check that hot dogs are centered on the rollers and not obstructing movement.
Buns not warming	Warming racks not heating or unit not powered.	Verify the unit is plugged in and the timer is set. Ensure buns are placed correctly on the racks.
Unit not turning on	No power supply or loose connection.	Check that the power cord is securely plugged into a working electrical outlet. Ensure the timer knob is turned past '0'.
Excessive smoke or odor	Food residue or initial burn-off.	For first use, a slight odor is normal. If persistent, unplug and clean the unit thoroughly, especially the drip tray and rollers.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Nostalgia
Model Name	Oscar Mayer Hot Dog Roller & Bun
Color	Yellow
Product Dimensions (D x W x H)	10"D x 15"W x 9"H
Special Feature	Easy To Use, Automatic
Control Type	Knob Control
Power Source	Electric
Item Weight	6.74 pounds
Material	Stainless Steel (Rollers), Non-stick (Racks)

WARRANTY AND CUSTOMER SUPPORT

Nostalgia products are designed with quality and reliability in mind. For specific warranty details, please refer to the warranty card included with your product or visit the official Nostalgia website. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical assistance, troubleshooting beyond this guide, or to inquire about replacement parts, please contact Nostalgia customer support directly. Contact information can typically be found on the manufacturer's website or in the product packaging.

An official user manual in PDF format is also available for download:

[Download Official User Manual \(PDF\)](#)

