

[Manuals.plus](#) /

› [VEPRAG](#) /

› VEPRAG XRT140 Universal Remote Control User Manual

VEPRAG XRT140

VEPRAG XRT140 Universal Remote Control User Manual

Model: XRT140

INTRODUCTION

This user manual provides comprehensive instructions for the VEPRAG XRT140 Universal Remote Control. This remote is designed to replace original VIZIO Smart TV remote controllers, offering broad compatibility and ease of use. Please read this manual carefully before using the remote control to ensure proper operation and longevity.

PRODUCT OVERVIEW

The XRT140 universal remote features a channel number keyboard and dedicated application hotkeys for popular streaming services. It is designed for immediate use without complex programming.





Figure 1: Front view of the VEPRAG XRT140 Universal Remote Control. This image displays the layout of the buttons, including the power button, input selection, Vudu, Netflix, Prime Video, Xumo, Hulu, Redbox hotkeys, menu, info, navigation pad, back, home, CC, volume, mute, channel, number pad, and picture mode buttons. The VEPRAG brand logo is visible at the bottom.



Figure 2: The VEPRAG XRT140 Universal Remote Control positioned next to a VIZIO Smart TV, with text indicating compatibility with D-Series, E-Series, M-Series, P-Series, PX-Series, V-Series, and OLED-Series VIZIO TVs. This image visually confirms the remote's intended use with VIZIO televisions.

SETUP

The VEPRAG XRT140 Universal Remote Control is designed for immediate use with most VIZIO Smart TVs without requiring any programming.

1. Battery Installation:

Locate the battery compartment on the back of the remote control. Slide the battery cover downwards to open. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment. Close the battery cover by sliding it back into place until it clicks.

Note: Batteries are not included with the remote control.

2. First Use:

Once batteries are installed, point the remote control towards your VIZIO Smart TV. The remote should function immediately. No pairing or code entry is typically required.

OPERATING INSTRUCTIONS

This section details the functions of the various buttons on your XRT140 remote control.

Button	Function
Power ()	Turns the TV on or off.
INPUT	Cycles through available input sources (HDMI, AV, etc.).
VUDU / NETFLIX / PRIME VIDEO / XUMO / HULU / REDBOX	Direct access buttons for respective streaming applications.
MENU	Opens the TV's main menu for settings and options.
INFO	Displays information about the current program or input.
Navigation Pad (Up, Down, Left, Right, OK)	Navigates through menus and selects options. OK confirms selections.
BACK	Returns to the previous screen or menu.
Home (△)	Returns to the TV's SmartCast home screen.

Button	Function
CC	Toggles Closed Captions on or off.
VOL +/-	Adjusts the volume level up or down.
Mute ()	Mutes or unmutes the TV audio.
CH +/-	Changes the TV channel up or down.
Number Pad (0-9)	Directly enters channel numbers.
PIC	Accesses picture mode settings.

COMPATIBILITY

The VEPRAG XRT140 Universal Remote Control is compatible with a wide range of VIZIO Smart TV models, including but not limited to:

- **All VIZIO LED LCD HD UHD HDR Smartcast 4K 3D Smart TVs**
- **D-Series:** D24F-F1, D32F-F1, D39F-F0, D39F-F1, D43-F1, D50-F1, D55-F2, D60-F3, D65-F1, D70-F3, D55X-G1, D32H-F0, D40F-F1, D43F-F1, D43F-F2, D48F-F0, D50F-F1, D40F-G9, D24H-G9, D50X-G9
- **E-Series:** E43-F1, E43U-D2, E48-D0, E48U-D0, E49U-D1, E50-D1, E50-E1, E50-E3, E50-F2, E50U-D2, E50X-E1, E55-D0, E55-E1, E55-E2, E55-F0, E55-F1, E55U-D0, E55U-D2, E60E-3, E60-E3, E60-F3, E60U-D3, E65-D0, E65-D1, E65-E0, E65-E1, E65-E3, E65-F0, E65-F1, E65U-D1, E65U-D3, E70-D3, E70-E3, E70-F3, E70U-D3, E75-E16, E75-E3, E75-F1, E75-F2, E80-E3, E80-F3, E80U-DE
- **M-Series:** M50Q7-H1, M55Q7-H1, M55Q8-H1, M65Q7-H1, M65Q8-H1, M55-F0, M65-F0, M70-F3
- **P-Series:** P65Q9-H1, P75Q9-H1
- **PX-Series:** P65QX-H1, P75QX-H1
- **V-Series:** V655H1, V435H1, V505-H19, V405-G9, V505-G9, V655-G9, V555-H1, V605-H3, V655-H9, V35H1
- **OLED-Series:** OLED55-H1, OLED65-H1, OLED55H1, OLED65H1
- **Replaces other VIZIO remote models:** XRT112, XRT122, XRT302, XRT135, XRT510, XRT500, XRT100, XRT136, VR1, VR2, VR10, VR15

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Remote not responding.	◦ Batteries: Check if batteries are inserted correctly (polarity). Replace with fresh AAA batteries. ◦ Line of Sight: Ensure there are no obstructions between the remote and the TV's IR sensor. ◦ Distance: Make sure you are within the effective range of the TV's IR sensor.
Some buttons not working.	◦ Battery Level: Low batteries can cause intermittent functionality. Replace batteries. ◦ Compatibility: While highly compatible, ensure your specific VIZIO TV model is listed in the compatibility section. ◦ Stuck Buttons: Check for any debris or stickiness around the buttons.
Remote works intermittently.	◦ Weak Batteries: Replace batteries. ◦ Interference: Strong light sources (like direct sunlight) or other electronic devices can sometimes interfere with IR signals.

SPECIFICATIONS

- **Model:** XRT140
- **Brand:** VEPRAG
- **Compatible Devices:** VIZIO Smart TVs (LED, LCD, HD, UHD, HDR, 4K, 3D, SmartCast)
- **Power Source:** 2 x AAA Batteries (not included)
- **Dimensions:** 5.91 x 1.97 x 0.71 inches (15.0 x 5.0 x 1.8 cm)
- **Item Weight:** 1.76 ounces (50 grams)
- **Special Feature:** Universal replacement, no programming required
- **Color:** Black

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact information provided by your retailer or the manufacturer's official website. As this product is designed to work out of the box, most issues can be resolved by following the troubleshooting steps in this manual.

For further assistance, you may contact VEPRAG customer support through their official channels. Please have your product model (XRT140) and purchase details ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09S61QP78>

More documents and user manuals: **<https://manuals.plus/>**