

STREETZ CM770

Streetz CM770 Portable Bluetooth Speaker User Manual

Model: CM770

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Streetz CM770 Portable Bluetooth Speaker. Please read this manual thoroughly before using the device to ensure optimal performance and longevity. Keep this manual for future reference.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the device yourself. Contact qualified service personnel for any repairs.
- Keep the speaker away from water and other liquids.
- Use only the specified charging cable and power adapter to charge the device.
- Dispose of the device and its battery responsibly according to local regulations.

PACKAGE CONTENTS

Please check that all items are present in the package:

- Streetz CM770 Portable Bluetooth Speaker
- USB Charging Cable
- User Manual
- (Optional: Aux Cable, if typically included with such devices)

PRODUCT OVERVIEW

The Streetz CM770 is a compact and portable Bluetooth speaker designed for wireless audio playback and hands-free calling. It features a durable design and intuitive controls.



Figure 1: Front view of the Streetz CM770 Portable Bluetooth Speaker. The speaker features a black mesh grille on the front, a black rubberized frame, and a brown fabric loop on the right side for portability. Control buttons are visible on the top edge.

Controls and Ports (Refer to Figure 1)

- **Power Button:** Located on the top edge. Press and hold to turn on/off.
- **Volume Up/Next Track Button:** Located on the top edge. Short press for volume up, long press for next track.
- **Volume Down/Previous Track Button:** Located on the top edge. Short press for volume down, long press for previous track.
- **Play/Pause/Call Button:** Located on the top edge. Press to play/pause music, answer/end calls.
- **Charging Port:** Typically a Micro USB or USB-C port, located on the side or back.
- **AUX Input:** 3.5mm audio jack for wired connection, if available.

SETUP

1. Charging the Speaker

1. Connect the small end of the USB charging cable to the charging port on the speaker.
2. Connect the larger end of the USB charging cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate (color may vary, e.g., red) to show that the speaker is charging.
4. Once fully charged, the indicator light will change or turn off. Disconnect the charging cable. A full charge provides up to 3 hours of playback.

2. Powering On/Off

- **To Power On:** Press and hold the Power Button for approximately 3 seconds until you hear an audible prompt or see an indicator light.
- **To Power Off:** Press and hold the Power Button for approximately 3 seconds until you hear an audible prompt or the indicator light turns off.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

1. Ensure the speaker is powered on and within pairing mode (usually indicated by a flashing blue LED). If not, power it on.
2. Enable Bluetooth on your audio device (smartphone, tablet, computer).
3. Search for available Bluetooth devices. The speaker will appear as "CM770" or "Streetz CM770".
4. Select "CM770" from the list to connect. Once paired, you will hear a confirmation sound, and the LED indicator will stop flashing and remain solid blue.
5. The speaker will automatically attempt to reconnect to the last paired device when powered on.

2. Auxiliary (AUX) Connection

If your speaker supports an AUX input:

1. Connect one end of a 3.5mm audio cable (not included) to the AUX input port on the speaker.
2. Connect the other end of the 3.5mm audio cable to the headphone jack of your audio device.
3. The speaker will automatically switch to AUX mode, or you may need to press a mode button (if available).

3. Music Playback

- **Play/Pause:** Press the Play/Pause button once.
- **Next Track:** Long press the Volume Up button.
- **Previous Track:** Long press the Volume Down button.
- **Volume Up:** Short press the Volume Up button.
- **Volume Down:** Short press the Volume Down button.

4. Call Handling (Hands-Free Function)

- **Answer Call:** When an incoming call rings, press the Play/Pause/Call button once.
- **End Call:** During a call, press the Play/Pause/Call button once.
- **Reject Call:** When an incoming call rings, press and hold the Play/Pause/Call button for approximately 2 seconds.
- **Redial Last Number:** In standby mode, double-press the Play/Pause/Call button.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the speaker before first use and recharge it at least once every three months if not used regularly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Bluetooth is not enabled on the device; speaker is too far; speaker is already paired with another device.	Ensure Bluetooth is on. Move device closer. Disconnect from other devices or restart speaker.
No sound.	Volume is too low; device is not connected; incorrect mode.	Increase volume on both speaker and device. Re-pair Bluetooth or check AUX connection. Ensure correct input mode.
Poor sound quality.	Device is too far from speaker; interference.	Move device closer to the speaker. Avoid obstacles between devices.

SPECIFICATIONS

Model Number	CM770
Brand	STREETZ
Connectivity Technology	Bluetooth, Auxiliary, USB
Speaker Type	Portable Bluetooth Speaker
Maximum Output Power	3 Watts
Power Source	Battery Powered
Battery Playback Time	Up to 3 hours
Dimensions (L x W x H)	4 x 12 x 8 cm
Weight	260 grams
Hands-Free Function	Yes

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official STREETZ website. Do not attempt to repair the device yourself, as this may void your warranty. For further assistance, please contact STREETZ customer service through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question