

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Diosmio](#) /

› [Diosmio 2 Cub Tall Digital Security Safe Box User Manual](#)

## Diosmio 2 Cub Tall Digital Security Safe Box

# Diosmio 2 Cub Tall Digital Security Safe Box User Manual

Model: 2 Cub Tall Digital Security Safe Box

## 1. INTRODUCTION

---

Thank you for choosing the Diosmio 2 Cub Tall Digital Security Safe Box. This safe is designed to provide secure storage for your valuables, documents, and other important items. It features a digital keypad for easy access, a robust anti-pry door, and comes with a fireproof and waterproof money bag for enhanced protection. Please read this manual thoroughly before operating your safe to ensure proper use and maintenance.

## 2. SAFETY INSTRUCTIONS

---

- Always keep the emergency keys in a secure location away from the safe. Do not store them inside the safe.
- Ensure the safe is placed on a stable, level surface or securely mounted to a wall/floor to prevent tipping.
- Do not expose the safe to extreme temperatures or humidity.
- Keep children away from the safe and do not allow them to play with the keypad or keys.
- Regularly check the battery level and replace batteries when indicated by the low battery reminder.

## 3. PACKAGE CONTENTS

---

Carefully unpack your safe and verify that all items listed below are included. If any items are missing or damaged, please contact customer support.

## PRODUCT SIZE:



## PACKAGE LIST:

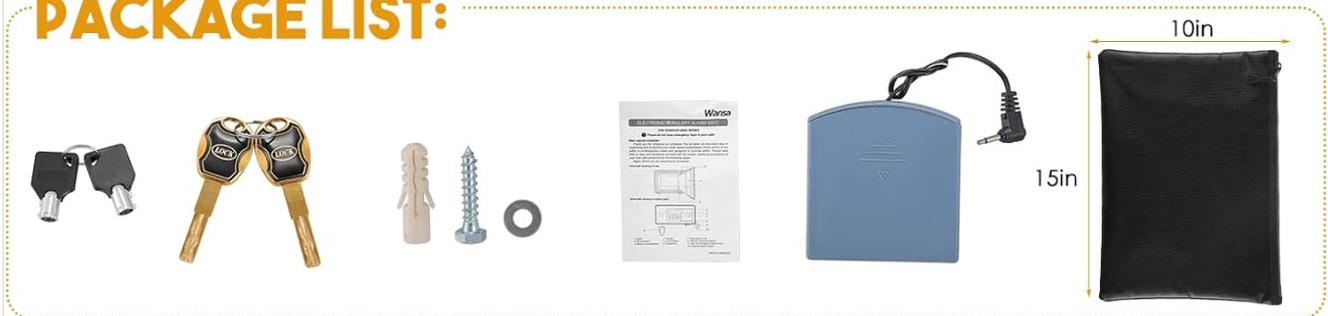


Figure 3.1: Product Dimensions and Package List

- Diosmio Digital Security Safe Box
- Master Keys (2 sets)
- Emergency Keys (2)
- Expansion Screws (for mounting)
- External Power Supply Box
- Fireproof and Waterproof Money Bag
- User Manual (this document)

## 4. PRODUCT OVERVIEW

The Diosmio safe is constructed with durable steel and features an advanced digital keypad for secure access. Its anti-pry door design enhances security against forced entry.

# LCD SAFE BOX WITH FIREPROOF BAG



Double  
Protection



Figure 4.1: LCD Safe Box with Fireproof Bag

# ANTI-PRY DOOR

Safe and solid structure  
excellent anti - theft performance



Figure 4.2: Anti-Pry Door Features

## Key Features:

- Digital Keypad with LCD Display
- Master Key and Emergency Backup Key Access
- Low Battery Reminder
- 40mm Thickened Steel Plate Door
- Anti-Pry Seamless Frame
- Three Solid Locking Bolts
- Removable and Height-Adjustable Internal Divider
- Pre-drilled Mounting Holes

# REMOVABLE DIVIDER



Figure 4.3: Removable Divider Options

## 5. SETUP

### 5.1 Battery Installation

The safe requires 4 AA batteries (not included) to power the digital keypad. Open the battery compartment located on the inside of the safe door and insert the batteries, ensuring correct polarity. The LCD display will light up once batteries are correctly installed.

### 5.2 Initial Code Setting

Upon first use, or after battery replacement, you will need to set your personal access code.

1. With the safe door open, press the red reset button located on the inside of the door (usually near the hinge).
2. The keypad will beep, and the display will show "SET".
3. Enter a new 3-8 digit code of your choice, then press the "#" key to confirm.
4. The display will show "GOOD" indicating the code has been successfully set.

5. Test the new code with the door open to ensure it works before closing the safe.

## 5.3 Mounting the Safe

The safe can be securely mounted to a wall or floor using the pre-drilled holes and included expansion screws.

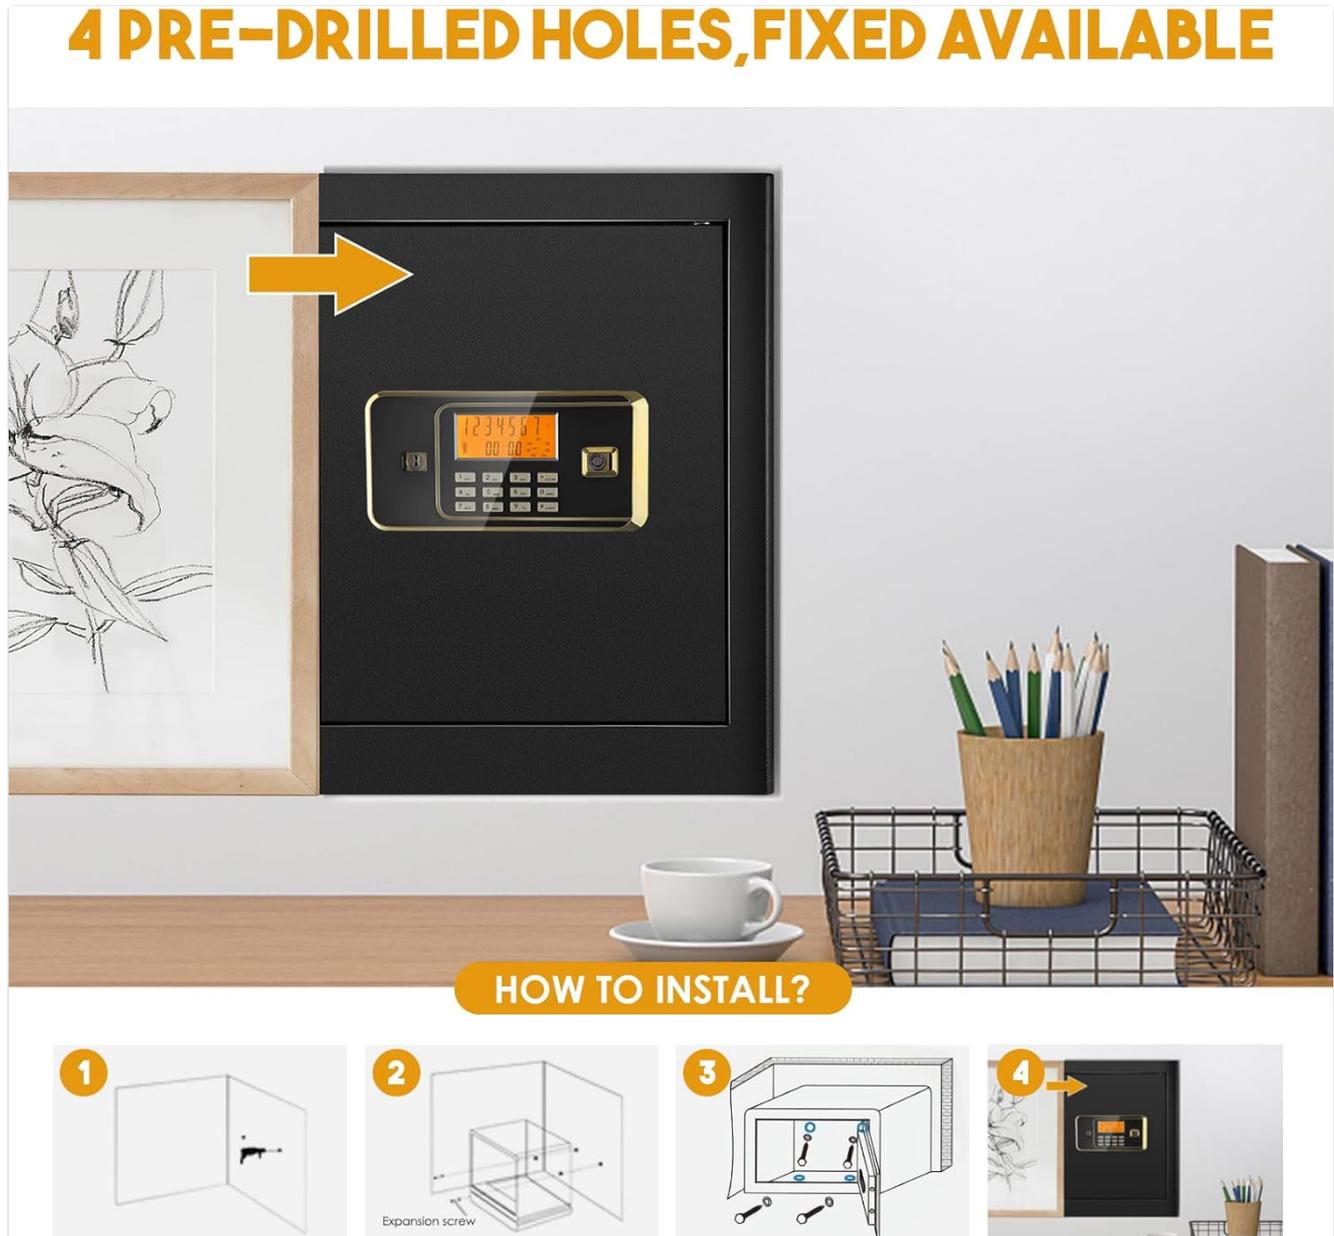


Figure 5.1: Mounting Instructions

1. Choose a suitable location for mounting.
2. Place the safe in the desired position and mark the drilling points through the pre-drilled holes on the back or bottom of the safe.
3. Drill holes in the wall or floor using an appropriate drill bit.
4. Insert the expansion screws into the drilled holes.
5. Align the safe's holes with the screws and secure the safe tightly.

## 6. OPERATING INSTRUCTIONS

### 6.1 Opening the Safe

There are three primary methods to open your Diosmio safe:

# 3 WAYS TO OPEN THE SAFE



Figure 6.1: Three Ways to Open the Safe

- 1. Using Master Key + Backup Key:** Insert the master key into the master keyhole and the backup key into the backup keyhole. Turn both keys simultaneously to open the safe.
- 2. Using Code + Master Key:** Insert the master key into the master keyhole. Enter your personal 3-8 digit code on the keypad, then press "#". Turn the master key to open the safe.
- 3. Using Master Keyhole in Horizontal Status + Code:** Insert the master key into the master keyhole and turn it to the horizontal position. Enter your personal 3-8 digit code on the keypad, then press "#". The safe will unlock.

## 6.2 Closing and Locking the Safe

Close the safe door firmly. The locking bolts will automatically engage. To ensure it is locked, you can try to turn the handle or gently pull the door.

## 6.3 Changing the User Code

1. Open the safe door.
2. Press the red reset button on the inside of the door.

3. The display will show "SET".
4. Enter your new 3-8 digit code, then press "#".
5. The display will show "GOOD". Your new code is now active.

## 6.4 Low Battery Reminder

When the battery power is low, the LCD display will show a battery reminder icon. Replace the batteries promptly to ensure continued operation. If batteries completely drain, you can use the emergency keys or external power supply box to open the safe.

## 7. MAINTENANCE

- **Cleaning:** Wipe the safe's exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace all four AA batteries when the low battery indicator appears. Use high-quality alkaline batteries for best performance.
- **Key Maintenance:** Keep keys clean and dry. Do not force keys into the lock.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with code.	Incorrect code entered; Low batteries; Keypad malfunction.	Re-enter code carefully; Replace batteries; Use emergency key.
Keypad does not respond.	Dead batteries; Loose battery connection.	Replace batteries; Ensure batteries are correctly inserted.
Door will not close properly.	Obstruction in door frame; Bolts not fully retracted.	Check for obstructions; Ensure handle is fully turned to retract bolts.
Forgotten code.	Code forgotten.	Use the emergency keys to open the safe, then reset the code.

## 9. SPECIFICATIONS

Feature	Detail
Model	2 Cub Tall Digital Security Safe Box
Brand	Diosmio
External Dimensions (H x W x D)	45 cm x 37.8 cm x 31 cm (17.71 in x 14.90 in x 12.20 in)
Internal Dimensions (H x W x D)	Approx. 43 cm x 35 cm x 25.5 cm (16.93 in x 13.78 in x 10.04 in)
Weight	Approx. 15.2 kg (33.5 lbs)
Lock Type	Electronic Keypad, Key Lock
Material	Solid Steel
Special Features	Fireproof (with included bag), Wall Mountable, Removable Divider

Feature	Detail
Power Source	4 x AA Batteries (not included)

## 10. WARRANTY AND SUPPORT

---

Diosmio products are manufactured to high-quality standards. For any questions, technical support, or warranty claims, please contact your retailer or the manufacturer directly. Please have your product model and purchase information ready when contacting support.

