

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Moulinex](#) /

› [Moulinex Blendforce 4-in-1 Blender with XL Chopper \(LM42X127\) Instruction Manual](#)

Moulinex LM42X127

Moulinex Blendforce 4-in-1 Blender (LM42X127) Instruction Manual

Model: LM42X127

[Safety Instructions](#) [Components](#) [Setup](#) [Operating Instructions](#) [Care & Maintenance](#)
[Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

Thank you for choosing the Moulinex Blendforce 4-in-1 Blender. This manual provides essential information for the safe and efficient operation, maintenance, and care of your appliance. Please read it thoroughly before first use and keep it for future reference.



The Moulinex Blendforce 4-in-1 Blender, model LM42X127, shown with its main blending jar and the XL chopper attachment.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before use.
- Do not immerse the motor unit in water or any other liquid.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces.
- Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- Blades are sharp. Handle with care.
- Ensure the lid is securely locked in place before operating the appliance.
- Do not blend hot liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Moulinex Blendforce blender:

- **Motor Unit:** The base containing the motor and control dial.
- **Blender Jar (2 Liters):** Main blending container with measurement markings.
- **Lid with Filler Cap:** For covering the blender jar and adding ingredients during operation.
- **Blade Assembly:** Detachable blades for blending.
- **XL Chopper (1.75 Liters):** Attachment for chopping larger quantities.
- **Chopper Blade:** Specific blade for the XL chopper.



Overview of the Moulinex Blendforce 4-in-1 Blender, highlighting its versatility with the main blending jar and the XL chopper attachment.





An exploded view demonstrating the individual components of the XL chopper attachment, including the base, blade, and container.

SETUP AND ASSEMBLY

Initial Cleaning

Before first use, wash all removable parts (jar, lid, blades, chopper components) in warm soapy water. Rinse thoroughly and dry. The motor unit should only be wiped with a damp cloth.

Assembling the Blender

1. Place the motor unit on a stable, flat surface.
2. Ensure the blade assembly is securely attached to the bottom of the blender jar.
3. Place the blender jar onto the motor unit. Rotate it clockwise until it locks into place. The Smart Lock system ensures proper alignment.
4. Add your ingredients to the jar. Do not exceed the maximum fill line.
5. Secure the lid onto the blender jar, ensuring it is properly sealed. Insert the filler cap.



The Smart Lock system ensures the blender jar is correctly positioned and secured on the motor unit before operation.

Assembling the XL Chopper

1. Place the motor unit on a stable, flat surface.
2. Insert the chopper blade into the XL chopper bowl.
3. Add your ingredients to the chopper bowl.
4. Place the XL chopper assembly onto the motor unit. Rotate it clockwise until it locks into place.


OPERATING INSTRUCTIONS

Ensure the appliance is correctly assembled and plugged into a suitable power outlet (230V).

Using the Blender

1. With ingredients in the jar and the lid secured, turn the control dial to your desired speed setting:

- **Speed 1 (Low):** For softer ingredients or light blending.
 - **Speed 2 (High):** For harder ingredients or more intensive blending.
 - **Pulse:** For short bursts of power, ideal for controlled chopping or crushing ice.
2. Blend until desired consistency is reached. The air cooling system helps prevent overheating during continuous use (up to 3 minutes).
 3. To stop, turn the dial back to '0'. Unplug the appliance before removing the jar.

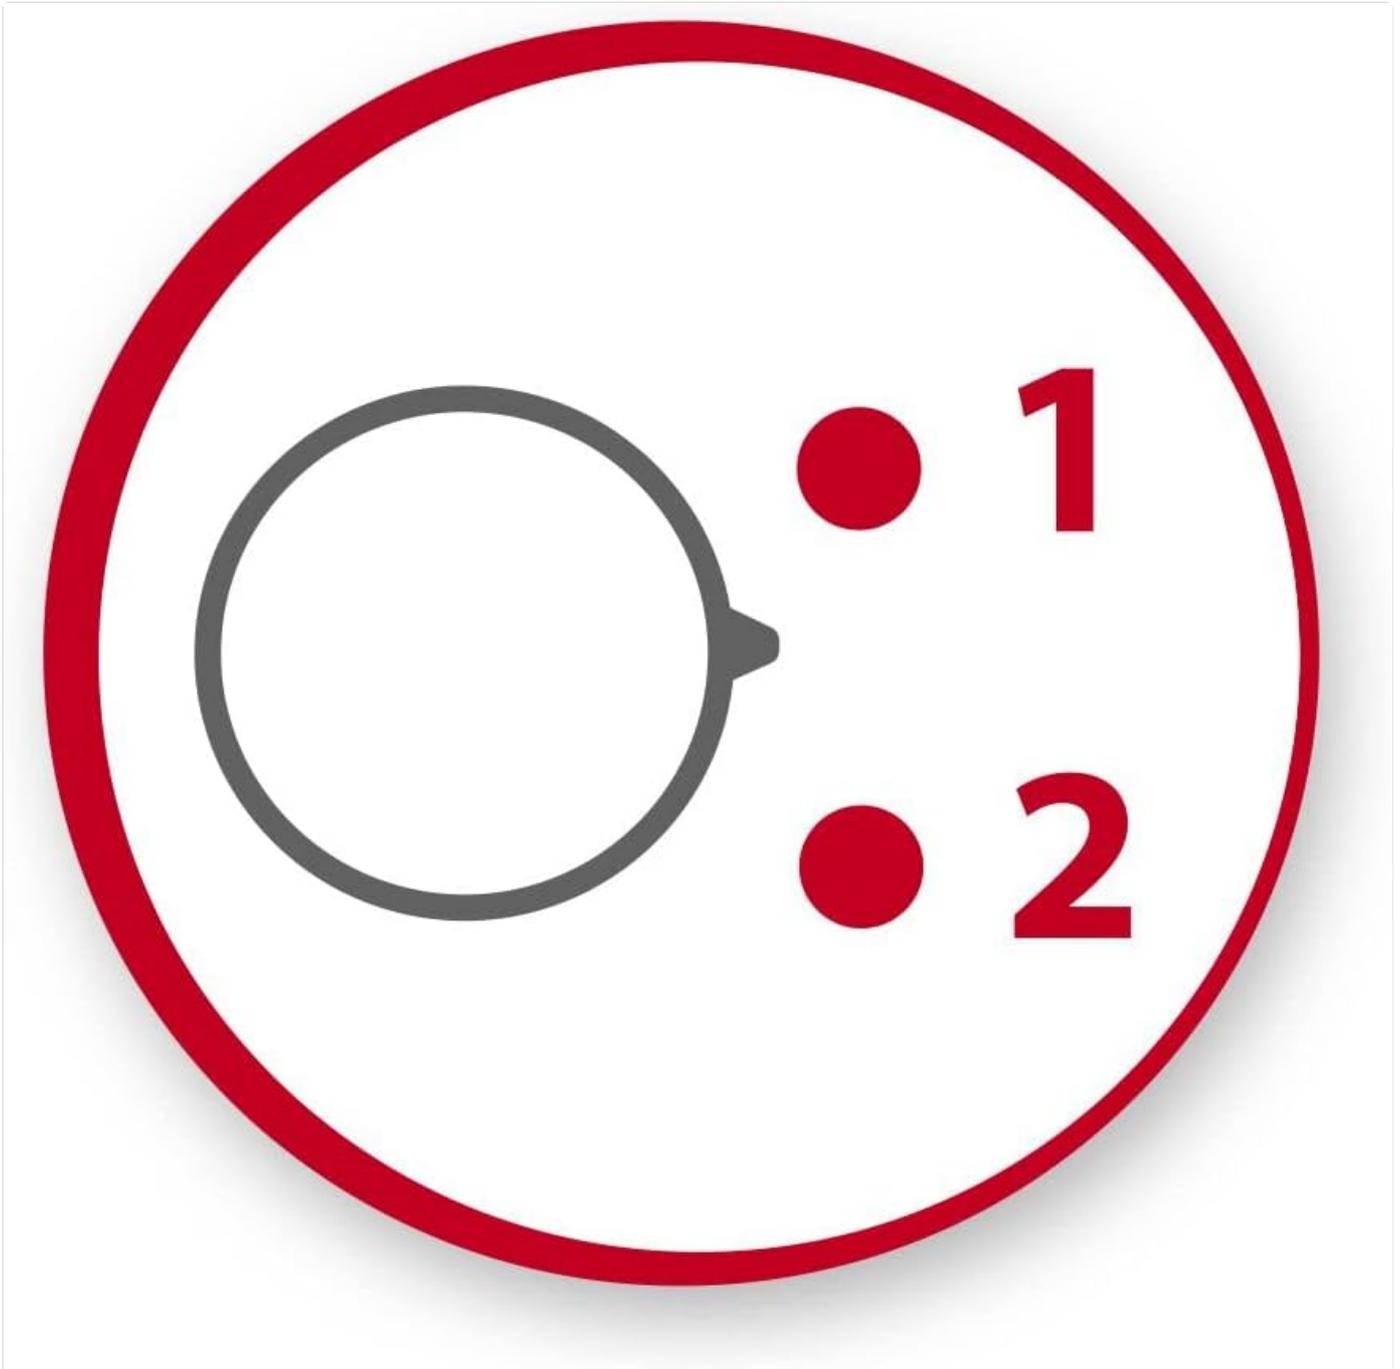

The control dial allows selection of two continuous speeds (1 and 2) and a Pulse function for intermittent blending.



The blender efficiently processes fruits to create smoothies and other beverages.

Ice Crushing Function

The blender features an effective ice crushing function. Use the 'Pulse' setting for best results. Add ice cubes to the blender jar (do not overfill) and use short, controlled pulses until the ice is crushed to your desired consistency.



Icon indicating the blender's ability to crush ice.



The blender efficiently crushes ice, as demonstrated by the bowl of crushed ice next to the appliance.

Using the XL Chopper

1. With ingredients in the chopper bowl and the lid secured, turn the control dial to 'Pulse' or a low speed setting (1 or 2) for short bursts.
2. Chop until desired consistency is reached. Avoid over-processing.
3. To stop, turn the dial back to '0'. Unplug the appliance before removing the chopper.



The XL chopper attachment is shown in use, processing food ingredients for meal preparation.

CARE AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your appliance.

Cleaning

1. Always unplug the blender before cleaning.
2. **Motor Unit:** Wipe with a damp cloth. Do not immerse in water.
3. **Blender Jar, Lid, Blades, Chopper Components:** These parts are dishwasher safe (top rack only) or can be washed by hand in warm soapy water. Handle blades with extreme care as they are sharp.
4. For quick cleaning, fill the blender jar with warm water and a drop of dish soap. Run on a low speed for a few seconds, then rinse.
5. Ensure all parts are completely dry before storing.



Demonstration of cleaning the blender blade assembly under running water. Exercise caution due to sharp edges.

Storage

Store the assembled blender and its attachments in a dry, safe place, out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not start.	Not plugged in; jar/chopper not correctly assembled; safety lock not engaged.	Ensure appliance is plugged in. Check that the jar or chopper is securely locked onto the motor unit.
Motor stops during operation.	Overloaded; ingredients too large/hard; prolonged continuous use.	Unplug, remove some ingredients, cut larger items into smaller pieces. Allow motor to cool down if used continuously for more than 3 minutes.
Ingredients not blending smoothly.	Insufficient liquid; ingredients stuck; incorrect speed.	Add more liquid. Stop the blender, remove the jar, and use a spatula to dislodge ingredients. Increase speed or use Pulse function.
Leakage from the jar.	Lid not properly sealed; blade assembly not tightened; jar overfilled.	Ensure lid is securely in place. Check that the blade assembly is tightly screwed onto the jar. Do not exceed the maximum fill line.

TECHNICAL SPECIFICATIONS

- **Model:** LM42X127
- **Brand:** Moulinex
- **Power:** 600 Watts
- **Voltage:** 230 Volts
- **Capacity (Blender Jar):** 2 Liters
- **Capacity (XL Chopper):** 1.75 Liters
- **Material:** Plastic
- **Number of Speeds:** 3 (Low, High, Pulse)
- **Special Features:** Variable Speed Control, Safety Lock, Air Cooling System, Ice Crushing Function.
- **Product Dimensions (DxWxH):** 37.4 x 22.8 x 31.6 cm
- **Item Weight:** 2.32 kg
- **Power Source:** Corded Electric

WARRANTY AND SUPPORT

This Moulinex Blendforce blender comes with a **one-year manufacturer's warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, service, or warranty inquiries, please contact your local Moulinex service center or refer to the official Moulinex website for contact information.



© 2024 Moulinex. All rights reserved.
Moulinex is a registered trademark.