

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER EM044KB19 Over The Range Microwave Oven User Manual

BLACK+DECKER EM044KB19

BLACK+DECKER EM044KB19 Over The Range Microwave Oven User Manual

Model: EM044KB19

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate the oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Do not attempt to tamper with or make any adjustments or repairs to the door, control panel, safety interlock switches, or any other part of the oven.
- Ensure proper ventilation. Do not block any ventilation openings.
- Always use microwave-safe cookware. Metal or foil can cause arcing.
- Supervise children closely when the microwave is in use.

This appliance is designed for household use only. Do not use outdoors.

PRODUCT OVERVIEW

The BLACK+DECKER EM044KB19 is a 1.9 cubic foot over-the-range microwave oven designed for efficient cooking and ventilation.

Key Features

- 1000 Watts cooking power with ten power settings.
- Pre-programmed auto menus for various foods including popcorn, potato, vegetable, pizza, snack, bacon,

frozen dinner, rice, and frozen breakfast.

- Two-speed, 400-CFM venting fan system to remove cooking odors.
- Cooktop LED lighting for clear visibility over your stove.
- Turntable On/Off function for accommodating large dishes.
- Child lock feature for safety.



Image: Front view of the BLACK+DECKER EM044KB19 microwave oven, showing food cooking on two levels inside.

Included Components

- Glass Tray Turntable Ring
- Shelf (for 2-level cooking)
- Grease Filters
- Exhaust Adaptor
- Installation Kit
- Installation Manual
- Use & Care Manual

SETUP & INSTALLATION

Proper installation is crucial for the safe and efficient operation of your over-the-range microwave oven. It is recommended that installation be performed by a qualified professional.

Before Installation

- Verify that the mounting surface is structurally sound and can support the weight of the microwave oven (approximately 62.2 pounds).
- Ensure adequate electrical supply (120V - 60Hz).
- Confirm cabinet dimensions meet the requirements for the microwave.

EXTERNAL DIMENSIONS

For Easier Installation

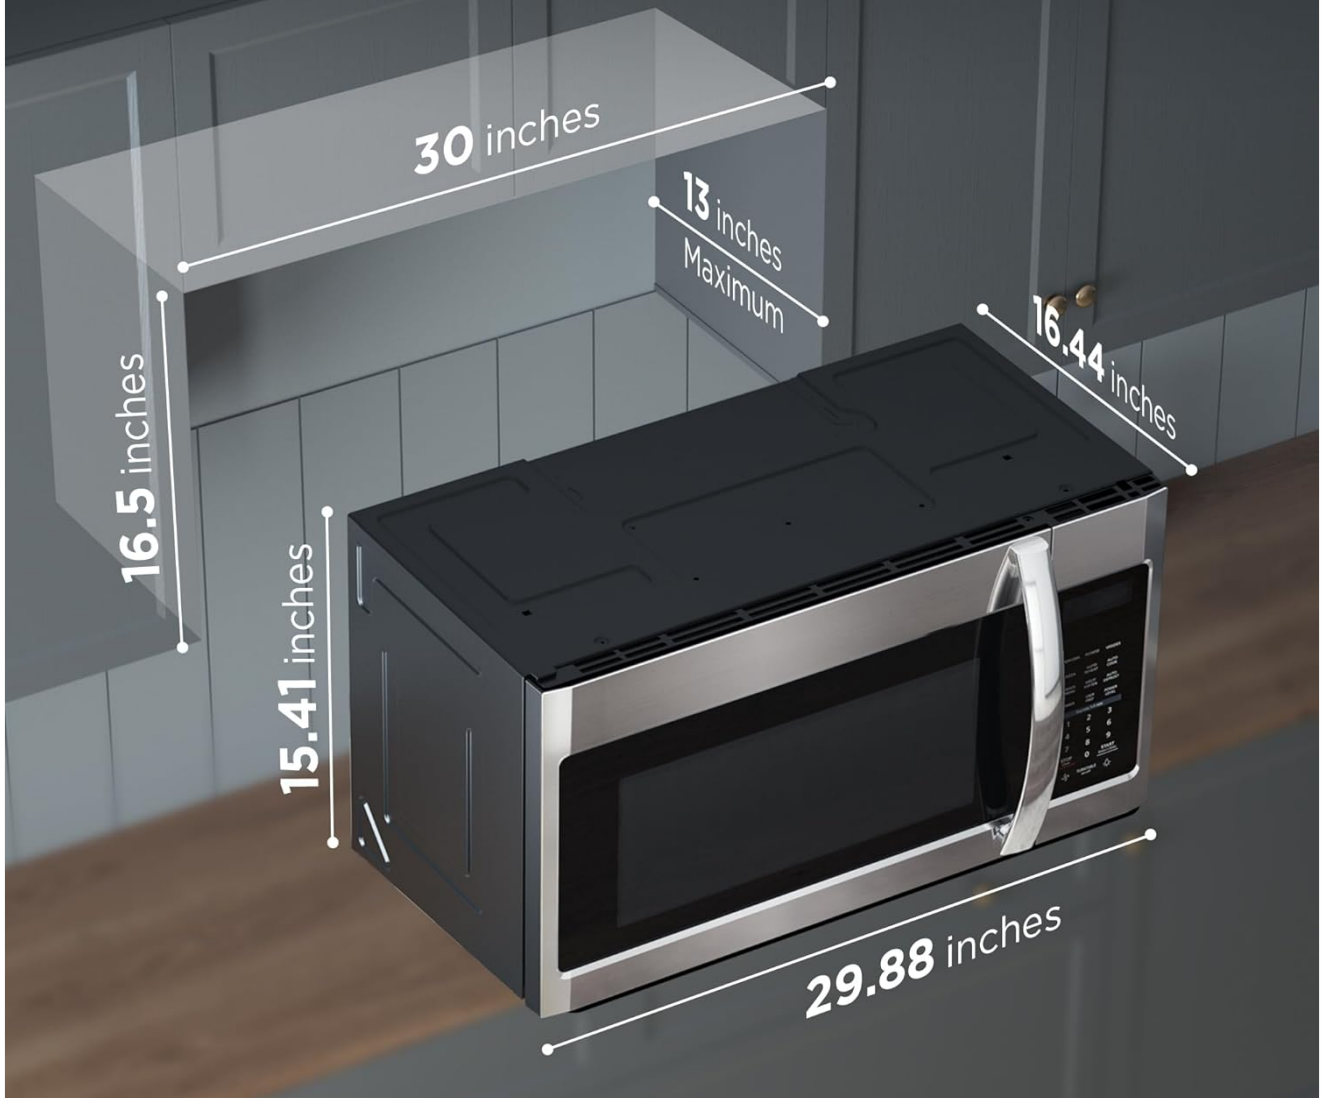


Image: Diagram illustrating the external dimensions of the microwave (29.9"W x 15.4"D x 16.4"H) and the corresponding cabinet space requirements for installation.

Mounting Instructions

1. Carefully read the separate installation manual provided with the product.
2. Prepare the cabinet and wall according to the template and instructions.
3. Install the mounting plate securely to the wall studs.
4. Lift the microwave into position, ensuring it hooks onto the mounting plate.
5. Secure the microwave to the upper cabinet using the provided bolts.
6. Connect the power cord to a grounded outlet.



Image: The BLACK+DECKER microwave oven neatly installed above a kitchen range, demonstrating its over-the-range placement.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and functions for optimal use.

ONE TOUCH COOK

Simplify Your Cooking



Image: Close-up of the microwave's control panel, highlighting the 'One Touch Cook' buttons for various food items like popcorn, potato, pizza, and more.

Basic Operation

- **Setting Cook Time:** Enter the desired cooking time using the number pad, then press 'START'.
- **Adjusting Power Level:** After entering cook time, press 'POWER LEVEL' and select a power level from 1 to 10 using the number pad. Press 'START'.
- **Express Cooking:** Press any number from 1 to 6 for 1 to 6 minutes of cooking at 100% power. Press '30 SEC' for an additional 30 seconds.
- **Stopping/Clearing:** Press 'STOP/Clear' to pause or cancel a cooking cycle.

One-Touch Cooking

The microwave features pre-programmed settings for common foods. Simply select the food type, and the oven will automatically set the appropriate power and time.

- **Popcorn:** Press 'POPCORN'.
- **Potato:** Press 'POTATO' repeatedly to select quantity.

- **Veggies:** Press 'VEGGIES' repeatedly to select quantity.
- **Pizza:** Press 'PIZZA'.
- **Snack Menu:** Press 'SNACK MENU' to cycle through options like hot dogs.
- **Auto Reheat:** Press 'AUTO REHEAT'.
- **Auto Cook:** Press 'AUTO COOK' for various pre-set meals.
- **Melt/Soften:** Press 'MELT/SOFTEN' for butter, chocolate, etc.
- **Auto Defrost:** Press 'AUTO DEFROST' and enter weight.



Image: A collage of various cooked foods, including popcorn, baked potatoes, steamed vegetables, pizza, and meat, demonstrating the versatility of the one-touch cooking functions.

Timer Function

The timer can be used independently of the microwave cooking function. Press 'TIMER', enter the desired time, then press 'START'.

Child Lock

To activate the child lock, press and hold 'STOP/Clear' for 3 seconds. The display will show 'LOCK'. To deactivate, repeat the process.

Turntable On/Off

The turntable can be turned off to accommodate larger, non-rotating dishes. Press the 'TURNTABLE On-Off' button to toggle its operation.

INTUITIVE CONTROL PANEL

With simply several touches, you can turn on/off and adjust different settings.



Image: An illustration of the microwave's intuitive control panel, pointing out features like the LED display, turntable on/off button, two-speed fan control, and cooktop LED lighting.

Cooktop LED Lighting

The integrated LED lighting illuminates your cooktop for better visibility. Press the 'LIGHT' button to turn it on or off.

COOKTOP LED LIGHTING

For A Clear and Bright View



Image: The microwave's cooktop LED lighting brightly illuminating the stove below, where two pots are cooking.

Venting System

The two-speed, 400-CFM venting fan system helps remove smoke, steam, and cooking odors from your kitchen. Press the 'VENT' button to select high or low speed.

TWO-SPEED VENTING SYSTEM

The venting system provides high and low speed to fit your different cooking needs.



Image: A visual comparison demonstrating the effectiveness of the microwave's two-speed venting system in clearing steam and odors from the cooktop area.

MAINTENANCE & CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth and mild soap.
- For stainless steel finishes, use a specialized stainless steel cleaner and polish in the direction of the grain.
- Avoid abrasive cleaners or scouring pads.

Interior Cleaning

- Clean the interior cavity with a soft cloth, warm water, and mild detergent.
- For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen residue, then wipe clean.
- The glass turntable and turntable ring can be removed and washed in warm soapy water or a dishwasher.

CAVITY DIMENSIONS

Satisfy Your Daily Needs



Image: The interior of the microwave, illustrating its cavity dimensions (19.84"W x 13.78"D x 9.09"H) and showing a pizza being placed inside, emphasizing the spaciousness for cleaning.

Filter Maintenance

- The grease filters located on the underside of the microwave should be cleaned regularly (monthly or as needed).
- Remove the filters and wash them in hot soapy water or a dishwasher. Ensure they are completely dry before reinstalling.
- Refer to the installation manual for instructions on replacing the charcoal filter (if applicable for recirculating ventilation).

TROUBLESHOOTING GUIDE

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Microwave does not start	Door not closed properly; Power cord unplugged; Blown fuse/tripped circuit breaker; Child lock activated.	Ensure door is securely latched; Check power connection; Reset circuit breaker; Deactivate child lock.
Food not heating evenly	Improper stirring/arrangement; Turntable not rotating; Incorrect power level/time.	Stir food during cooking; Ensure turntable is properly seated and rotating; Adjust power level and cooking time.
Excessive noise during operation	Turntable components not correctly placed; Foreign object inside.	Re-seat turntable and ring; Check for and remove any obstructions.
Fan not operating or weak	Fan speed setting too low; Filters clogged.	Select a higher fan speed; Clean or replace grease filters.
Light bulb not working	Bulb burned out.	Replace the bulb (refer to the service manual for instructions).

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	EM044KB19
Capacity	1.9 Cubic Feet
Wattage	1000 Watts
Voltage	120 Volts
Product Dimensions (D x W x H)	15.4" x 29.9" x 16.4"
Internal Dimensions (W x D x H)	19.84" x 13.78" x 9.09"
Item Weight	62.2 pounds
Turntable Diameter	13.5"
Venting System	Two-speed, 400 CFM
Color	Stainless Steel
Material	Stainless Steel
Special Feature	Auto Cook
Installation Type	Over-the-Range

WARRANTY & SUPPORT

This BLACK+DECKER appliance comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration.

For technical assistance, troubleshooting beyond this guide, or to inquire about warranty service, please contact BLACK+DECKER customer support. Contact information can typically be found on the manufacturer's website or in the documentation provided with your purchase.