#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- inkBOOK /
- > inkBOOK Calypso Plus E-Reader User Manual

## inkBOOK Calypso Plus

# inkBOOK Calypso Plus E-Reader User Manual

Model: Calypso Plus

# 1. Introduction


Welcome to the user manual for your new inkBOOK Calypso Plus E-Reader. This guide provides essential information on setting up, operating, and maintaining your device to ensure a seamless reading experience. The inkBOOK Calypso Plus is designed for comfortable and extensive digital reading, featuring a high-resolution, anti-glare screen and ample storage for your entire e-book library.

## 2. PRODUCT OVERVIEW

## 2.1 Key Features

- Seamless reading experience with the Skoobe application.
- Intuitive and easy-to-navigate menu system.
- Perfectly readable text with 212 pixels per inch screen resolution.
- Storage capacity for up to 10,000 e-books.
- Anti-glare, paper-like screen for comfortable reading in various lighting conditions, including direct sunlight.

## 2.2 Device Components

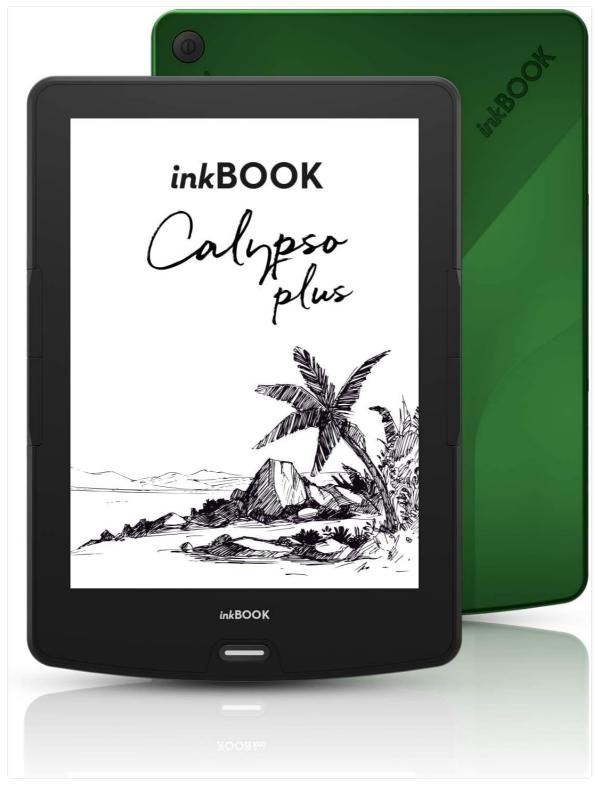

**Figure 2.1: Front View.** This image shows the front of the inkBOOK Calypso Plus E-Reader, featuring its display with a book cover depicting a tropical island scene. The inkBOOK logo is visible at the top and bottom of the bezel.



**Figure 2.2: Rear View.** This image displays the back of the inkBOOK Calypso Plus E-Reader, showcasing its distinctive green casing and the inkBOOK branding.





**Figure 2.3: Side View with Buttons.** This image provides a side profile of the inkBOOK Calypso Plus E-Reader, highlighting the physical page-turn buttons located on the side for convenient navigation.

Umyśliłem sobie Umyśliłem sobie teraz zbudować porządne osiedle. Namiot mój stał dotychczas na grząskim torfowisku, tuż nad brzeteraz zbudować giem, przeto na miejscu niezdrowym, a w dodatku zbyt odległym od słodkiej wody. porządne Rozejrzawszy się dobrze, obrałem małe osiepłaskowzgórze, w pobliżu potoku u stóp pagórka, wznoszącego się pionowo. W dle. Namiot mój skalnej jego ścianie było małe zagłębienie, niby wejście do jaskini, ale zbyt płytstał dotychczas kie, by je zwać grotą. Płaszczyzna ta, porosła trawą, miała około stu metrów szena grząskim torrokości, była dwa razy tak długa, a leżała po północno-zachodniej stronie pagórka, tak że nie dochodziły tu niemal całkiem fowisku, tuż nad gorące promienie słońca. Postanowiłem zbudować sobie mieszkanie tu właśnie, brzegiem, przeto wprost zagłębienia skały. Zakreśliłem przed ściana półkole o promieniu pionona miejscu niewym do skały, długości dziesięciu metrów, a średnicy dwudziestu mniej

**Figure 2.4: Text Clarity Comparison.** This image shows two inkBOOK Calypso Plus E-Readers side-by-side, demonstrating the clarity and readability of text on the screen. One device displays a full page of text, while the other shows a zoomed-in view to emphasize the sharp character rendering.

#### 3. SETUP

### 3.1 Charging the Device

Before first use, fully charge your inkBOOK Calypso Plus. Connect the included USB cable to the device's USB port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status.

## 3.2 Initial Power On and Setup

- 1. Press and hold the power button until the screen lights up.
- 2. Follow the on-screen prompts to select your preferred language.
- 3. Connect to a Wi-Fi network to access online features and download content.
- 4. Complete any initial registration or account setup as prompted.

#### 4. OPERATING INSTRUCTIONS

#### 4.1 Navigating the Interface

The inkBOOK Calypso Plus features an intuitive touchscreen interface. Tap to select items, swipe to turn pages or scroll through lists. Physical page-turn buttons are also available on the side for quick navigation within books.

## 4.2 Reading E-books

- 1. From the home screen, tap on a book cover to open it.
- 2. Tap the left or right side of the screen, or use the physical buttons, to turn pages.
- 3. Tap the center of the screen to bring up reading options, such as font size, line spacing, and brightness settings.

## 4.3 Using the Skoobe Application

The inkBOOK Calypso Plus supports the Skoobe application for unlimited reading. Ensure you are connected to Wi-Fi, then locate and open the Skoobe app from your device's applications menu. Log in with your Skoobe account credentials to access their extensive library.

## 4.4 Connecting to Wi-Fi

- 1. Go to **Settings** from the home screen.
- 2. Select Wi-Fi.
- 3. Choose your desired network from the list and enter the password if prompted.

#### 5. MAINTENANCE

#### 5.1 Cleaning the Device

Use a soft, lint-free cloth to gently wipe the screen and body of the e-reader. Do not use liquid cleaners or abrasive materials, as they may damage the screen or finish.

#### **5.2 Battery Care**

To prolong battery life, avoid exposing the device to extreme temperatures. For long-term storage, it is recommended to charge the battery to about 50% before turning off the device.

#### 5.3 Software Updates

Periodically check for software updates in the device's settings menu to ensure optimal performance and access to the latest features. Connect to Wi-Fi before attempting any updates.

## 6. TROUBLESHOOTING

## **6.1 Device Not Turning On**

Ensure the device is sufficiently charged. Connect it to a power source and wait a few minutes before attempting to power it on again. If the issue persists, try holding the power button for an extended

## 6.2 Screen Display Issues (Ghosting/Pixelation)

E-ink screens may occasionally show faint remnants of previous images (ghosting) or appear pixelated. This is often normal for e-ink technology. The device typically performs a full screen refresh every few pages to clear ghosting. If ghosting is excessive or persistent, ensure your software is up to date. For pixelation, verify that the font settings are appropriate for the screen resolution.

## 6.3 Wi-Fi Connectivity Problems

Check if other devices can connect to your Wi-Fi network. Restart your router and the e-reader. Ensure you are entering the correct Wi-Fi password. If the problem continues, try forgetting the network on your e-reader and reconnecting.

## **6.4 Unresponsive Touchscreen**

If the touchscreen is unresponsive, try restarting the device. If a restart does not resolve the issue, ensure the screen is clean and free of debris. Avoid using sharp objects on the screen.

#### 7. Specifications

Feature	Specification
Brand	inkBOOK
Model	Calypso Plus
Color	Green
Screen Size	6 Inches
Display Technology	E-Ink
Connectivity Technology	USB
Human Interface Input	Touchscreen
Bluetooth Compatibility	No
ASIN	B09SBFWR1N

#### 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official inkBOOK website. Information regarding spare parts availability and guaranteed software updates is not available at this time.

For further assistance, please contact inkBOOK customer service through their official channels.

#### Related Documents - Calypso Plus



#### inkBOOK Calypso Plus User Manual: Setup, Features, and Navigation Guide

Comprehensive user manual for the inkBOOK Calypso Plus e-reader, covering setup, Wi-Fi connectivity, e-book management, reading settings, and product information. Learn how to personalize your device and navigate its features.



## inkBOOK FOCUS Quick Start Guide

A concise guide to setting up and using your inkBOOK FOCUS e-reader, covering basic operations, charging, data transfer, and important safety information.



#### inkBOOK Solaris Quick Start Guide, Safety, and Warranty Information

Essential safety guidelines, quick start instructions, and warranty details for the inkBOOK Solaris ereader. Learn about RF signal precautions, charging, and device care.