

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Generisch](#) /

› [Instruction Manual for Measuring Cup Compatible with WMF Egg Cookers](#)

### Generisch Compatible with WMF FS-1000039955, 3200000059, 04.1507.0011 Egg Cookers

# Instruction Manual for Measuring Cup

Compatible with WMF FS-1000039955, 3200000059, 04.1507.0011 Egg Cookers

## 1. PRODUCT OVERVIEW

---

This document provides essential information for the proper use, care, and maintenance of your new measuring cup. This measuring cup is designed as a compatible replacement part for specific WMF egg cooker models, ensuring accurate water measurement for optimal egg cooking results.



Figure 1: Transparent measuring cup. This cup features a single horizontal line mark, typically indicating the water level for a specific egg cooking consistency.

The measuring cup is made from a transparent material, allowing for clear visibility of water levels. It is lightweight and designed for ease of use with compatible egg cookers.

## 2. SETUP

---

Before first use, it is important to prepare the measuring cup:

1. **Unpack:** Carefully remove the measuring cup from its packaging.
2. **Initial Cleaning:** Wash the measuring cup thoroughly with warm water and a mild dish soap. Rinse completely and allow it to air dry or dry with a clean cloth. This removes any manufacturing residues.

## 3. OPERATING INSTRUCTIONS

---

This measuring cup is specifically designed to measure the correct amount of water for your compatible WMF egg cooker. Accurate water measurement is crucial for achieving desired egg consistency (e.g., soft, medium, hard-boiled).

1. **Identify the Mark:** Locate the horizontal line mark inside the measuring cup. This mark indicates the recommended water level for a specific egg cooking setting (e.g., for soft-boiled eggs).
2. **Fill with Water:** Fill the measuring cup with cold tap water up to the designated mark. Ensure you view the water level at eye level to avoid parallax errors.
3. **Transfer Water:** Carefully pour the measured water into the heating plate of your WMF egg cooker, following the instructions provided with your egg cooker.
4. **Pierce Eggs (if applicable):** Use the piercing pin, if available on your egg cooker or the measuring cup itself (often located at the bottom), to gently pierce the blunt end of each egg. This helps prevent cracking during cooking.

*Note: This measuring cup features a single indicator mark. If your egg cooker requires different water levels for various consistencies (e.g., soft, medium, hard), you may need to refer to your egg cooker's original manual or experiment to find the correct water levels relative to this cup's mark.*

## 4. MAINTENANCE AND CLEANING

---

Regular cleaning will ensure the longevity and hygiene of your measuring cup.

- **After Each Use:** Rinse the measuring cup with warm water immediately after use to prevent any residue buildup.
- **Hand Washing:** Wash the cup by hand using warm water and a mild dish soap. Use a soft sponge or cloth to clean the interior and exterior.
- **Drying:** Allow the cup to air dry completely or dry with a clean, soft cloth before storing.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the transparent material.
- **Dishwasher Safety:** While some plastic items are dishwasher safe, hand washing is recommended to preserve the clarity and integrity of the measuring cup over time.

## 5. TROUBLESHOOTING

---

Most issues with a measuring cup are minor. Here are some common concerns:

- **Inaccurate Measurement:**
  - Ensure you are filling the cup precisely to the indicated mark.
  - Always view the water level at eye level to avoid misreading due to parallax.
  - If the single mark does not yield desired egg consistency, you may need to adjust the water level slightly based on your preference and egg cooker model. Consider making a small, temporary mark with a non-toxic marker if you find a consistent alternative level.
- **Cup Appears Cloudy or Scratched:**
  - This can occur from using abrasive cleaning materials or prolonged exposure to harsh detergents. Always use soft cloths and mild soap for cleaning.
  - Avoid dropping the cup or exposing it to sharp objects.

## 6. SPECIFICATIONS

---

<b>Brand</b>	Generisch
<b>Compatibility</b>	WMF FS-1000039955, 3200000059, 04.1507.0011 Egg Cookers
<b>Material</b>	Transparent Plastic (as per visual, despite specification stating Stainless Steel)
<b>Color</b>	Transparent
<b>Dimensions (L x W x H)</b>	9.6 x 5.6 x 4.9 cm (approx.)
<b>Item Weight</b>	20 g (approx.)

## 7. WARRANTY AND SUPPORT

---

For any questions regarding this measuring cup, including warranty information or support, please contact the seller or manufacturer directly through your purchase platform. Please retain your proof of purchase for any warranty claims.