

[Manuals.plus](#) /

› [Torkase](#) /

› Torkase Smart WiFi Floor Lamp User Manual

Torkase LDD-25W-C

Torkase Smart WiFi Floor Lamp User Manual

Model: LDD-25W-C

1. INTRODUCTION

Thank you for purchasing the Torkase Smart WiFi Floor Lamp. This lamp is designed to provide versatile and intelligent lighting for your home, featuring full RGBCW color changing capabilities, dimmable brightness, and control via the Smart Life App, Amazon Alexa, and Google Home. Please read this manual carefully before use to ensure proper installation, operation, and maintenance.



Image: The Torkase Smart WiFi Floor Lamp, showcasing its sleek golden design and a smartphone displaying the intuitive Smart Life app interface for light control.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, please observe the following safety precautions:

- Read all instructions before using the lamp.
- Do not operate the lamp with a damaged cord or plug. If damaged, contact customer support.
- Do not modify the plug. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.
- Do not expose the lamp to rain or moisture. This lamp is for indoor use only.
- Always unplug the lamp from the electrical outlet before cleaning or performing any maintenance.
- Do not attempt to disassemble or repair the lamp yourself. Refer all servicing to qualified service personnel.
- Keep the lamp away from heat sources and direct sunlight.

- Ensure the lamp is placed on a stable, level surface to prevent tipping.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Lamp Head (with integrated LED)
- Upper Lamp Pole
- Middle Lamp Pole
- Lower Lamp Pole
- Lamp Base
- Power Adapter
- User Manual

4. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your Torkase Smart WiFi Floor Lamp:

1. Carefully unpack all components from the box and lay them out on a clean, flat surface.
2. Screw the Lower Lamp Pole into the Lamp Base clockwise until secure. Ensure the power cord passes freely through the pole.
3. Screw the Middle Lamp Pole into the top of the Lower Lamp Pole clockwise.
4. Screw the Upper Lamp Pole into the top of the Middle Lamp Pole clockwise.
5. Finally, screw the Lamp Head onto the top of the Upper Lamp Pole clockwise. Ensure all connections are tight to prevent wobbling.
6. Connect the power adapter to the lamp's power input port, usually located near the base or on the lower pole.
7. Plug the power adapter into a standard electrical outlet.

Ambient Color Changing Lighting



Image: A visual representation of the Torkase Smart WiFi Floor Lamp, highlighting its assembled form and suggesting the ease of putting together its modular components.

5. INITIAL SETUP AND APP CONNECTION

To unlock the full smart features of your lamp, connect it to the Smart Life App.

1. **Download the Smart Life App:** Search for "Smart Life" in the Apple App Store or Google Play Store, or scan the QR code provided in the quick start guide (if applicable) to download and install the app.
2. **Register/Log In:** Open the Smart Life App and register for a new account or log in with an existing one.
3. **Prepare the Lamp for Pairing:** Ensure the lamp is plugged in and powered on. The lamp should be blinking rapidly (usually indicating pairing mode). If not, power cycle the lamp (turn off and on) three times until it blinks rapidly.
4. **Add Device:** In the Smart Life App, tap the "+" icon in the top right corner to add a device. Select "Lighting" > "Light Source (Wi-Fi)".
5. **Connect to Wi-Fi:** Confirm the lamp is blinking rapidly. Enter your 2.4GHz Wi-Fi network password. (Note: The lamp only supports 2.4GHz Wi-Fi networks. If you have a dual-band router, ensure your phone is connected to the 2.4GHz band during setup).
6. **Pairing:** The app will begin searching for the lamp. Once found, it will connect and add the device. This may take a few moments.
7. **Rename Device:** After successful pairing, you can rename your lamp for easier identification (e.g., "Living Room Lamp").

Smart Life App Control

control the lights from anywhere anytime



Image: A series of smartphone screens demonstrating the various control interfaces within the Smart Life App, including color selection, scene modes, and timer functions for the lamp.

5.1. Connecting to Voice Assistants (Alexa/Google Home)

Once your lamp is connected to the Smart Life App, you can link it to Amazon Alexa or Google Home for voice control.

1. For Amazon Alexa:

- Open the Alexa App.
- Go to "Skills & Games".
- Search for "Smart Life" and enable the skill.
- Link your Smart Life account when prompted.
- Discover devices. Your Torkase lamp should appear.

2. For Google Home:

- Open the Google Home App.
- Tap "+" > "Set up device" > "Works with Google".
- Search for "Smart Life" and link your account.
- Assign the lamp to a room if desired.

App & Voice Control



Work with
Google Assistant



WORK WITH
Amazon Alexa

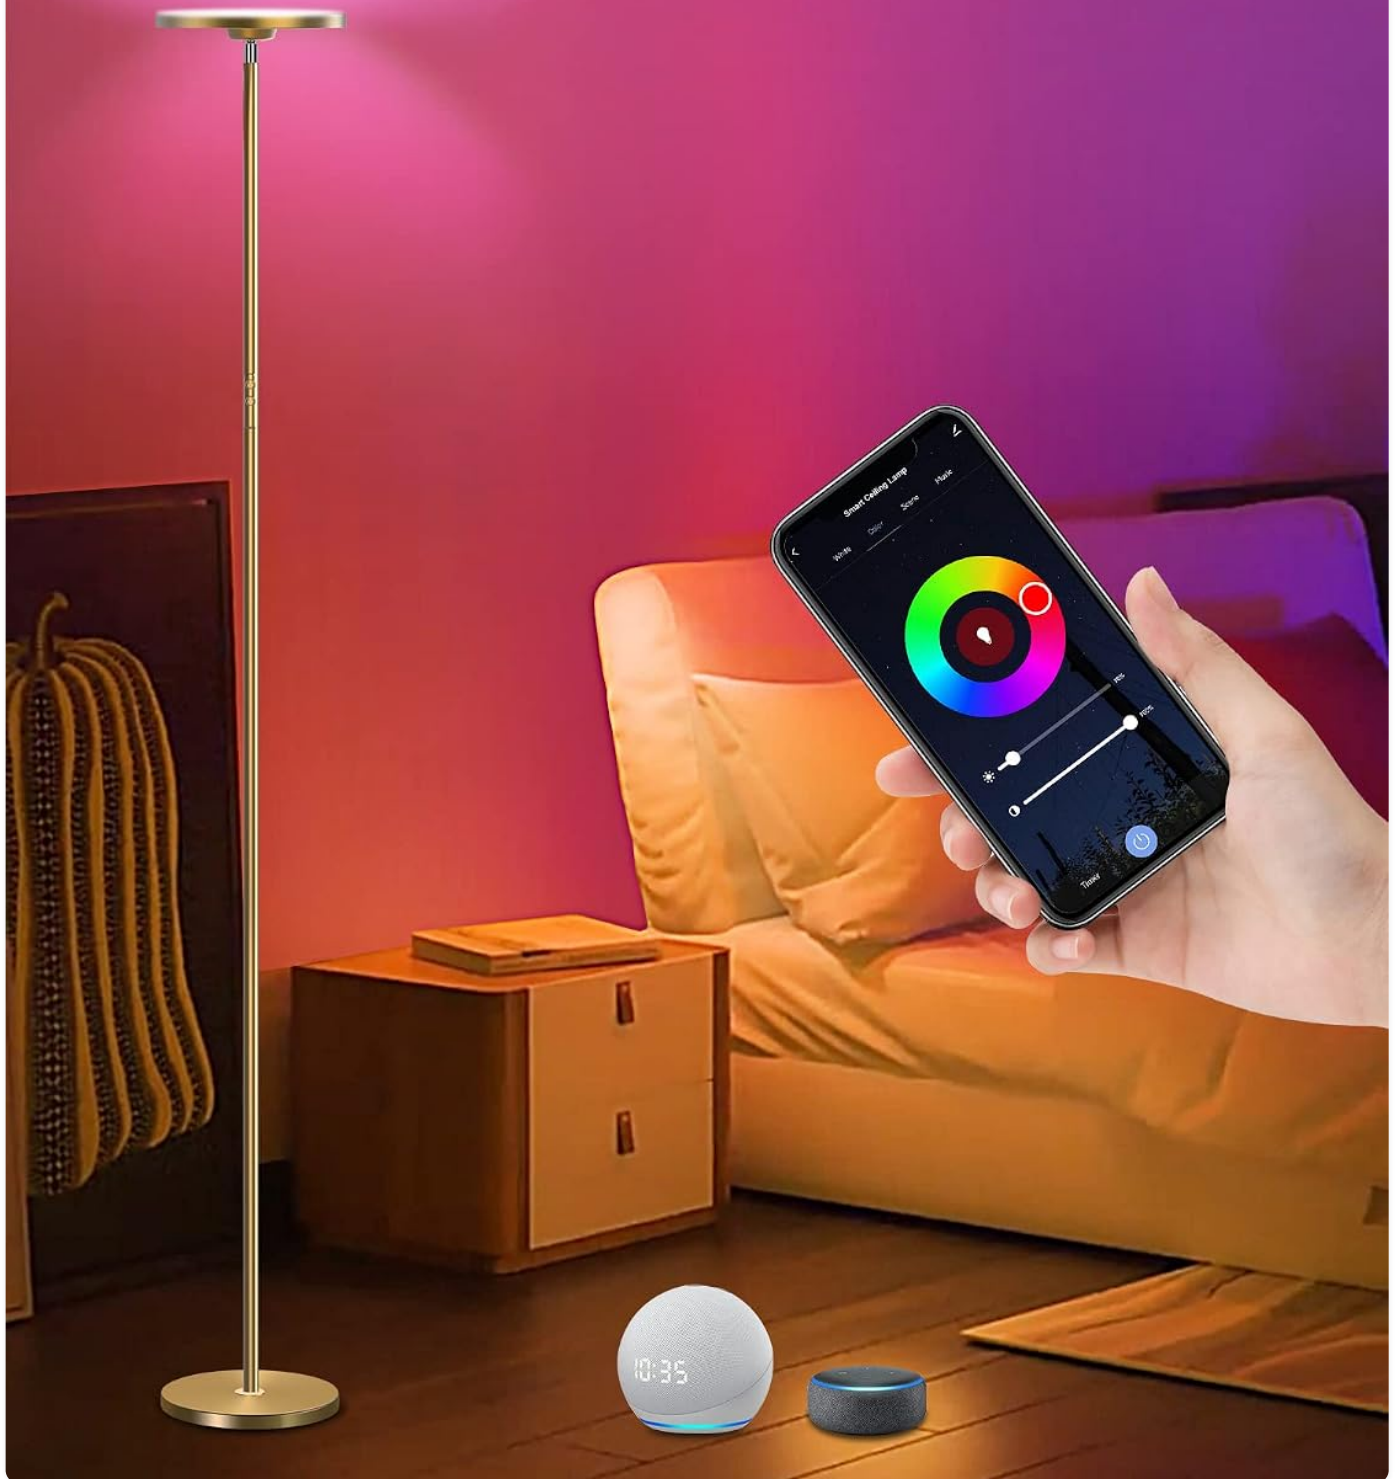


Image: The Torkase Smart WiFi Floor Lamp positioned in a room, with icons indicating compatibility with Google Assistant and Amazon Alexa, and a hand holding a smartphone displaying the control app.

6. OPERATING THE LAMP

6.1. Smart Life App Control

The Smart Life App provides comprehensive control over your lamp:

- **Power On/Off:** Toggle the lamp on or off.
- **Brightness Adjustment:** Smoothly dim or brighten the light from 1% to 100%.
- **Color Temperature Control:** Adjust the white light from warm (2700K) to cool (6500K).
- **RGB Color Selection:** Choose from millions of colors to create any ambiance.
- **Scene Modes:** Select pre-set scenes (e.g., Reading, Party, Relax) or create custom scenes.
- **Timer & Schedule:** Set schedules for the lamp to turn on/off automatically at specific times.
- **Music Sync:** Some versions of the app may offer music synchronization features.

Comfortable Eye Caring Lighting

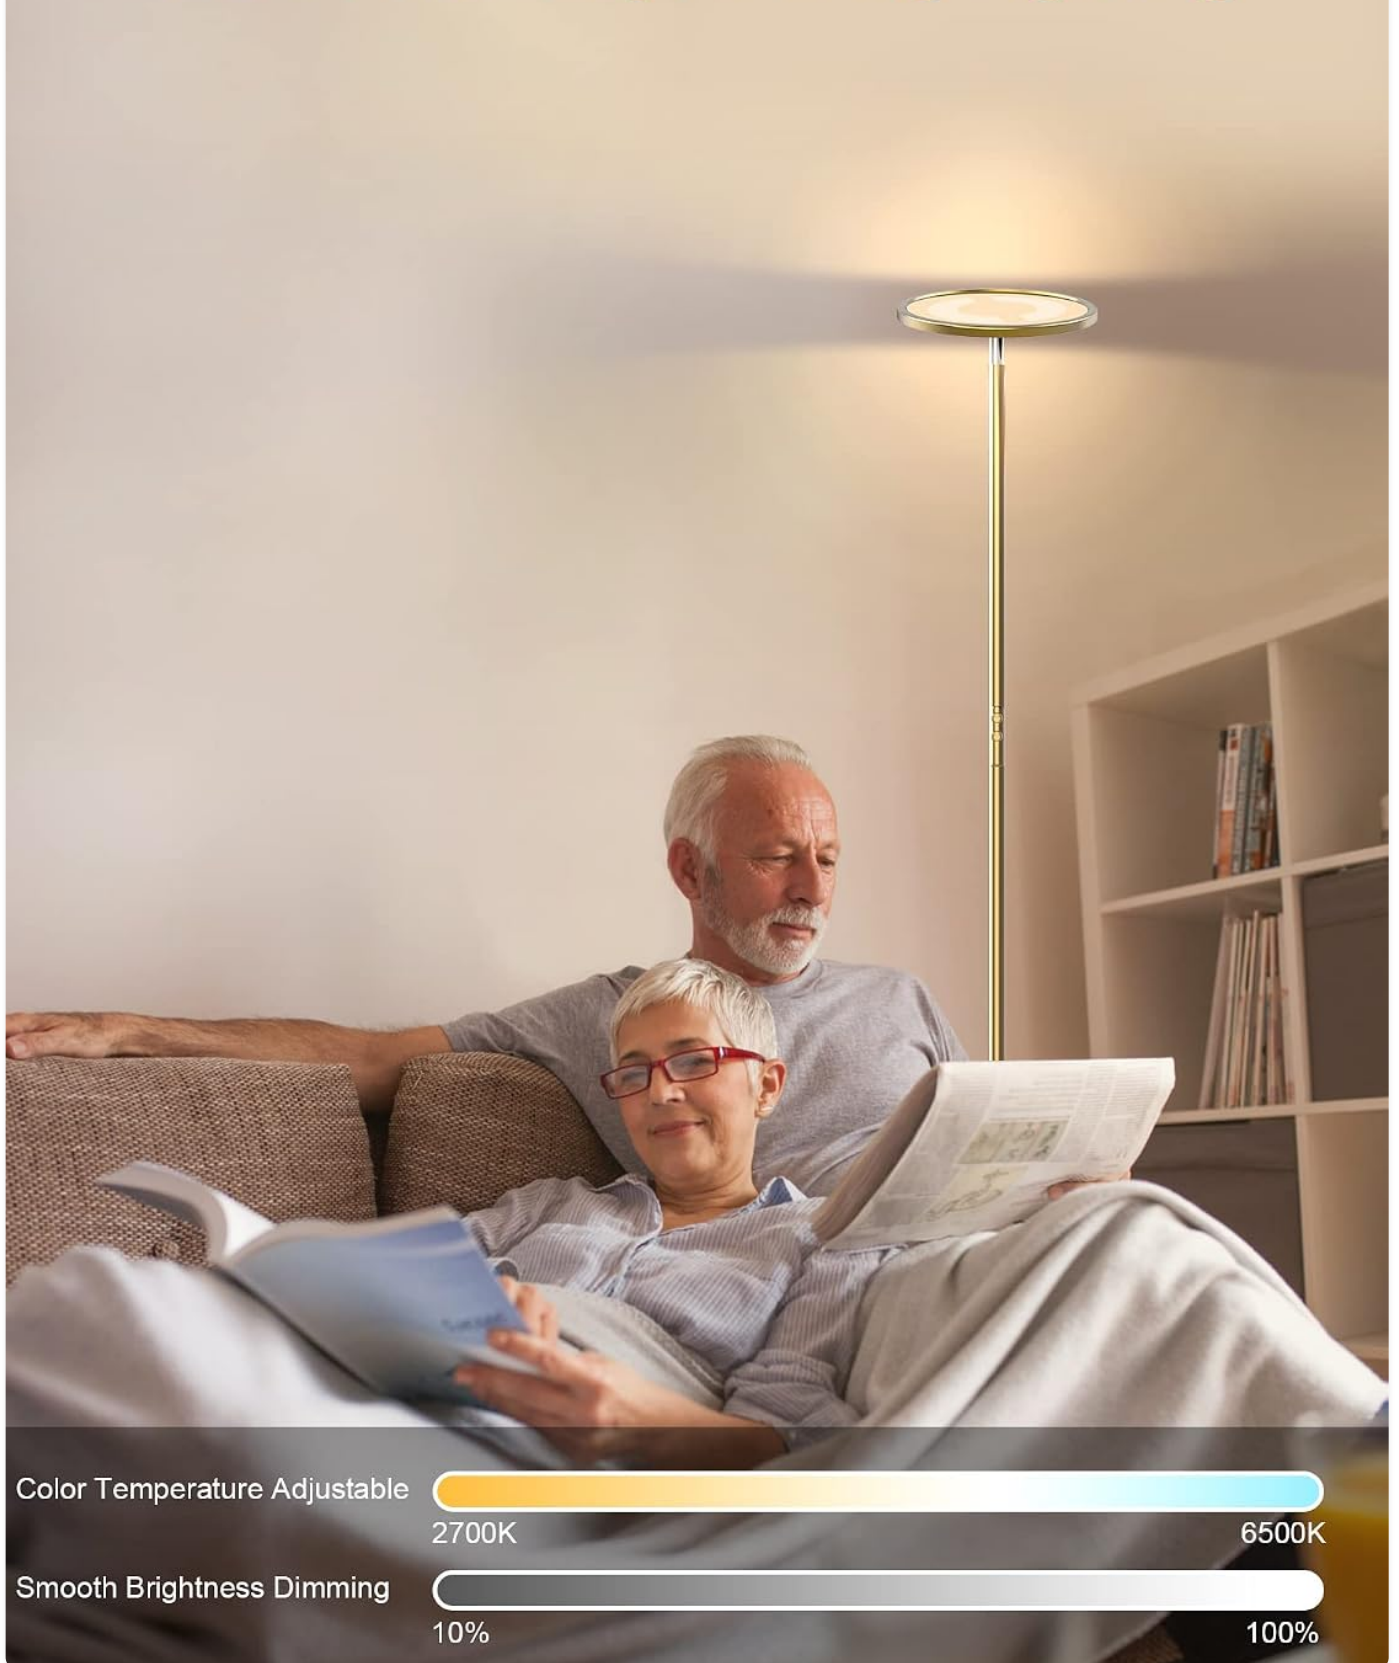


Image: A Torkase Smart WiFi Floor Lamp illuminating a living space with a soft, warm light, accompanied by a graphic illustrating the adjustable color temperature (2700K to 6500K) and smooth brightness dimming (10% to 100%).

6.2. Voice Control

Use simple voice commands with your linked Alexa or Google Home device:

- "Alexa, turn on [Lamp Name]."
- "Hey Google, turn off [Lamp Name]."
- "Alexa, set [Lamp Name] to 50% brightness."
- "Hey Google, change [Lamp Name] to blue."
- "Alexa, set [Lamp Name] to warm white."

6.3. Touch Control (On-Lamp)

The lamp features integrated touch controls for basic functions:

- **Power Button:** Tap to turn the lamp on or off.
- **Color/Brightness Button:** Tap to cycle through pre-set color modes or hold to adjust brightness.
- **USB Charging Port:** Use the integrated USB port to charge your mobile devices.

Touch Control & USB Port

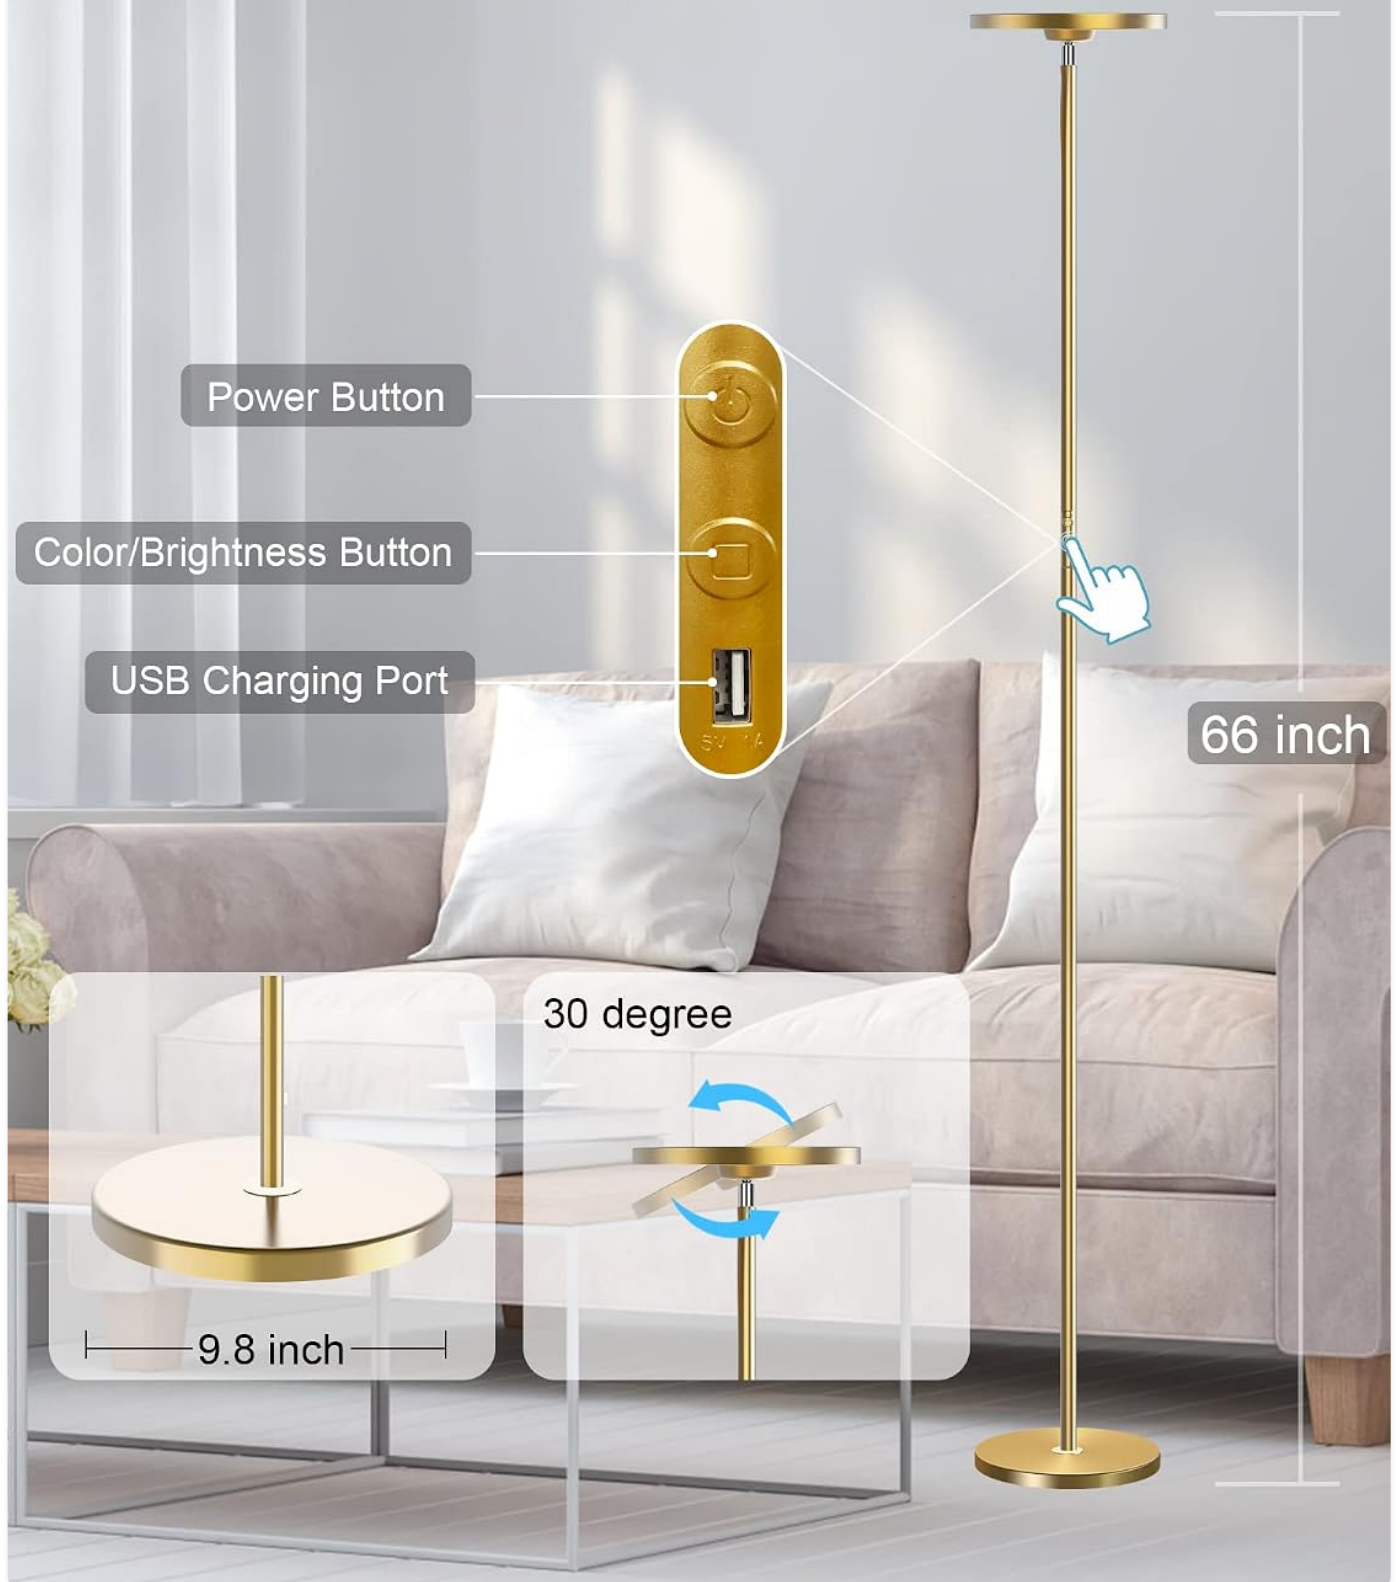


Image: A detailed diagram of the Torkase Smart WiFi Floor Lamp, pointing out the Power Button, Color/Brightness Button, and USB Charging Port on the lamp pole, along with its 66-inch height and 9.8-inch base diameter.

6.4. Up/Down Dual Side Lighting

The Torkase Smart WiFi Floor Lamp is designed with dual-sided lighting, providing both upward ambient light and

downward task lighting, enhancing the versatility of illumination in your space.

Updown Dual Side Lighting



Image: The Torkase Smart WiFi Floor Lamp illuminating a modern living area, showcasing its ability to provide both upward and downward light simultaneously, creating a balanced lighting environment.

7. MAINTENANCE

- **Cleaning:** Always unplug the lamp before cleaning. Use a soft, dry cloth to wipe the lamp. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- **LED Light Source:** The LED light source is integrated and not user-replaceable. Do not attempt to replace the LED.
- **Storage:** If storing the lamp for an extended period, unplug it and store it in a cool, dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Not plugged in; power outlet issue; lamp not assembled correctly.	Ensure the power adapter is securely plugged into the lamp and a working outlet. Check all pole connections are tight.
Cannot connect to Wi-Fi/Smart Life App.	Incorrect Wi-Fi password; 5GHz Wi-Fi network; lamp not in pairing mode; network interference.	• Ensure you are entering the correct Wi-Fi password. • Confirm your Wi-Fi network is 2.4GHz. • Power cycle the lamp (turn off/on 3 times) until it blinks rapidly to enter pairing mode. • Try moving the lamp closer to your Wi-Fi router. • Restart your router.
Voice control not working.	Lamp not linked to voice assistant; incorrect commands; network issue.	Ensure the Smart Life skill/service is enabled and linked in your Alexa/Google Home app. Use the exact lamp name. Check your internet connection.
Lamp randomly turns on/off.	Existing schedule/timer; network instability; interference.	Check for any active schedules or timers in the Smart Life App. Ensure your Wi-Fi network is stable.

9. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Torkase
Model Number	LDD-25W-C
Lamp Type	Floor Lamp
Style	Modern
Special Features	Color Changing, Dimmable
Material	Metal
Room Type	Living Room, Bedroom
Controller Type	Amazon Alexa, Android, Google Assistant, iOS

Feature	Detail
Connectivity Technology	Wi-Fi (2.4GHz only)
Mounting Type	Floor Mount
Wattage	25 watts
Control Method	Touch, App, Voice
Assembly Required	Yes
Item Weight	9.9 pounds
Product Dimensions	9.8 x 9.8 x 66 inches
Area Lighting Classification	IP20
UPC	761325200598

10. WARRANTY AND SUPPORT

Torkase products are manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Torkase website.

If you encounter any issues or have questions about your Torkase Smart WiFi Floor Lamp, please contact Torkase customer support for assistance. You can often find support contact information on the product packaging or on the official Torkase brand store page:

[Visit the Torkase Store on Amazon](#)

© 2024 Torkase. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question