

[manuals.plus](#) /

› [Safecourt Kitchen](#) /

› [Safecourt Kitchen Electric Coffee Grinder User Manual](#)

Safecourt Kitchen CG100

Safecourt Kitchen Electric Coffee Grinder User Manual

Model: CG100

1. INTRODUCTION

Thank you for choosing the Safecourt Kitchen Electric Coffee Grinder. This compact and efficient appliance is designed to provide freshly ground coffee beans, spices, and grains with ease and precision. Its powerful motor and durable stainless steel blades ensure a uniform grind, enhancing the flavor of your beverages and dishes. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new grinder.



Image 1.1: The Safecourt Kitchen Electric Coffee Grinder, a sleek black unit with a clear lid, shown alongside coffee beans and star anise.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Safety Lock Mechanism:** The grinder is equipped with a built-in safety lock. It will only operate when the lid is properly and securely closed. Do not attempt to bypass this safety feature.
- **Power Source:** Ensure the voltage indicated on the appliance matches your local power supply before connecting.
- **Water and Liquids:** Do not immerse the motor base, cord, or plug in water or any other liquid. Do not operate with wet hands.
- **Children and Supervision:** This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- **Blade Safety:** The stainless steel blades are very sharp. Exercise extreme caution when handling, cleaning, or emptying the grinding chamber.
- **Overheating Protection:** To prevent overheating, do not operate the grinder continuously for more than 30 seconds. Allow a short break between grinding cycles.
- **Unplug When Not in Use:** Always unplug the grinder from the power outlet before assembling,

disassembling, cleaning, or when not in use.

- **Damage:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.

3. PRODUCT OVERVIEW

The Safecourt Kitchen Electric Coffee Grinder consists of a durable ABS housing, a transparent lid, and a grinding chamber equipped with 304 stainless steel blades. The compact design includes a convenient power cord storage compartment at the bottom.

RECOMMENDED
REASON #05



DRABLE AND SAFE

Stainless steel blade and inner wall.



Image 3.1: Top-down view of the grinder's stainless steel blades within the grinding chamber, surrounded by various spices and coffee beans, highlighting its durability and multi-purpose use.

4. SETUP

Before first use, ensure all packaging materials are removed and the grinder is clean.

1. **Unpack:** Carefully remove the grinder and all its components from the packaging.
2. **Clean:** Wipe the exterior of the grinder with a damp cloth. Clean the grinding chamber and lid with a soft, damp cloth or brush. Do not submerge the motor base in water.
3. **Position:** Place the grinder on a stable, dry, and flat surface.
4. **Cord Management:** Unwind the necessary length of the power cord from the storage compartment at the bottom of the unit.

5. OPERATING INSTRUCTIONS

The Safecourt Kitchen Electric Coffee Grinder is designed for simple, one-touch operation.

1. **Fill the Grinding Chamber:** Open the transparent lid and add your desired amount of coffee beans, spices, or grains into the stainless steel grinding chamber. The maximum capacity is 60g, sufficient for brewing up to 8 cups of coffee.
2. **Secure the Lid:** Place the transparent lid firmly onto the grinder. Ensure it is properly aligned and locked into place. The grinder will not operate if the lid is not securely closed due to the built-in safety lock.
3. **Connect to Power:** Plug the power cord into a standard electrical outlet.
4. **Grind:** Press and hold the power button located on the front of the grinder. The blades will begin to rotate, grinding the contents.
5. **Control Grind Fineness:** The grinding time determines the fineness of the grind.
 - For **French Press** (coarse grind): Grind for approximately 10-15 seconds.
 - For **Drip Coffee Maker** (medium grind): Grind for approximately 15-20 seconds.
 - For **Espresso** (fine grind): Grind for approximately 25-30 seconds.

Release the button to stop grinding.

6. **Check and Empty:** Once grinding is complete, unplug the grinder, carefully remove the lid, and pour out the freshly ground contents.

MULTI-PURPOSE

Great for coffee, spices, and grains



Image 5.1: The grinder being used in a kitchen setting, demonstrating its multi-purpose capability for coffee, spices, and grains.



FAST GRINDING SPEED

The fastest coffee powder can be produced in 10 seconds, and coffee powder can be produced in drip pot in 20 seconds.

Image 5.2: A visual guide illustrating different grinding times (10-15s, 15-20s, 25-30s) corresponding to various grind fineness levels.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your grinder.

- **Always Unplug:** Before cleaning, always ensure the grinder is unplugged from the power outlet.
- **Grinding Chamber and Blades:** Use a small brush (a soft toothbrush works well) to remove any residual coffee grounds or spices from the stainless steel grinding chamber and around the blades. You can also wipe with a slightly damp cloth, but ensure no water enters the motor base.
- **Lid:** The transparent lid can be washed with warm, soapy water. Rinse thoroughly and dry completely before reattaching.
- **Exterior:** Wipe the exterior of the motor base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Drying:** Ensure all parts are completely dry before reassembling or storing the grinder.
- **Storage:** Store the grinder in a dry place, away from direct sunlight and moisture. Utilize the power cord storage compartment at the bottom for neat storage.

7. TROUBLESHOOTING

If you encounter any issues with your Safecourt Kitchen Electric Coffee Grinder, refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Grinder does not start	Lid not properly closed; Not plugged in; Power outage.	Ensure lid is securely locked in place; Check power plug connection; Check household circuit breaker.
Grind is inconsistent or too coarse	Insufficient grinding time; Overfilling the chamber.	Increase grinding time (refer to Section 5); Do not exceed 60g capacity.
Grinder stops during operation	Overheating; Safety lock disengaged.	Allow unit to cool down for 10-15 minutes; Ensure lid remains securely closed during operation.
Unusual noise or smell	Foreign object in chamber; Motor issue.	Unplug immediately and check for foreign objects; If problem persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Safecourt Kitchen
Model Number	CG100
Colour	Plain Red (Product image shows black, please verify actual color upon purchase)
Product Dimensions	9 x 9 x 18 cm
Item Weight	740 Grams
Capacity	60 Grams / 60 Millilitres
Power / Wattage	150 watts
Voltage	230 Volts
Material	Stainless Steel (blades and cups), ABS (housing)
Manufacturer	Safecourt Kitchen

9. WARRANTY AND SUPPORT

Safecourt Kitchen is committed to providing high-quality products. While specific warranty details are not provided in this manual, most products come with a standard manufacturer's warranty covering defects in materials and workmanship.


For warranty claims, technical support, or any questions regarding your Safecourt Kitchen Electric Coffee


Grinder, please contact the retailer where you purchased the product or visit the official Safecourt Kitchen website for customer service contact information.

Please have your model number (CG100) and proof of purchase ready when contacting support.

© 2024 Safecourt Kitchen. All rights reserved.
This manual is subject to change without notice.

Related Documents - CG100

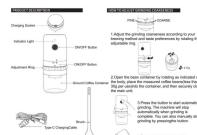	<p>SafeCourt Kitchen CG200 Contact Grill Instruction Manual</p> <p>Comprehensive instruction manual for the SafeCourt Kitchen CG200 Contact Grill, covering safety precautions, parts identification, usage instructions for contact, press, and open grilling, cleaning, care, and storage.</p>
	<p>SafeCourt Kitchen Juicer JE200 User Manual - Safety, Operation, and Care Guide</p> <p>Comprehensive user manual for the Safecourt Kitchen Juicer JE200. Includes detailed instructions on important safeguards, specifications, assembly, usage, parts identification, cleaning, and troubleshooting.</p>
	<p>CJ100 Citrus Juicer User Manual Safecourt Kitchen</p> <p>User manual for the Safecourt Kitchen CJ100 Citrus Juicer, providing operating instructions, safety advice, and care information for making fresh citrus juice.</p>
	<p>SafeCourt Kitchen CJ200 Citrus Juicer Pro User Manual - Features, Operation, and Safety</p> <p>Comprehensive user manual for the SafeCourt Kitchen CJ200 Citrus Juicer Pro. Learn about important safeguards, specifications, parts identification, assembly, usage, tips, disassembly, cleaning, and troubleshooting for your electric citrus juicer.</p>
	<p>CREAROMA Portable Coffee Grinder: User Guide and Instructions</p> <p>Learn how to use and adjust the CREAROMA portable coffee grinder for optimal brewing. This guide covers product features and step-by-step instructions for setting grinding coarseness.</p>
	<p>Suvykep KA-1 Manual Coffee Grinder Instructions and Usage Guide</p> <p>Comprehensive instructions for operating and maintaining the Suvykep KA-1 manual coffee grinder. Learn about grind settings, assembly, usage, and important care tips for optimal coffee brewing.</p>

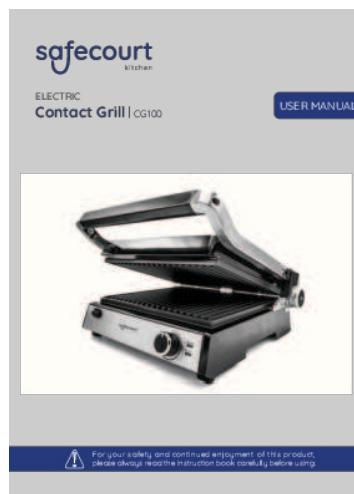

[Safecourt Electric Contact Grill CG100 User Manual](#)

User manual for the Safecourt Electric Contact Grill CG100, providing safety instructions, operating procedures, parts identification, cleaning, and maintenance guidelines.

lang:en score:23 filesize: 5.84 M page_count: 29 document date: 2023-04-11



[SafeCourt CG100 Contact Grill User Manual](#)

User manual for the SafeCourt CG100 Contact Grill, providing important safety instructions, assembly, usage guides, and maintenance tips for household use.

lang:en score:17 filesize: 225.33 K page_count: 20 document date: 2021-12-06