

COMFEE' MZ-ZG16E101A2

Comfee Egg Cooker MZ-ZG16E101A2 User Manual

Model: MZ-ZG16E101A2

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid contact with moving parts.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

PRODUCT OVERVIEW

The Comfee MZ-ZG16E101A2 Egg Cooker is designed for convenient and efficient egg preparation. It can cook up to 7 eggs simultaneously with a simple one-touch operation. Its compact design and stainless steel heating plate make it a practical addition to any kitchen.

Components

- Main Unit with Heating Plate
- Egg Tray (holds up to 7 eggs)
- Transparent Lid
- Measuring Cup (not pictured, but typically included for water measurement)



Image: Exploded view showing the main unit, egg tray, and transparent lid of the Comfee Egg Cooker.



Image: The Comfee Egg Cooker MZ-ZG16E101A2 fully assembled with its transparent lid.

SETUP

Before first use, ensure all packaging materials are removed and clean the removable parts.

1. **Unpack:** Carefully remove the egg cooker and all its components from the packaging.
2. **Clean:** Wash the egg tray, transparent lid, and measuring cup (if included) with warm, soapy water. Rinse thoroughly and dry. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the main unit on a dry, stable, and heat-resistant surface, away from the edge of the counter. Ensure there is adequate ventilation around the unit.



Image: Bottom view of the Comfee Egg Cooker, illustrating its stable feet for secure placement.

OPERATING INSTRUCTIONS

Follow these steps to cook eggs using your Comfee Egg Cooker.

Cooking Eggs

1. **Add Water:** Use the provided measuring cup to add the appropriate amount of water to the heating plate of the main unit. Refer to the 'Water Measurement Guide' below for desired egg doneness.
2. **Place Eggs:** Place the egg tray onto the main unit. Carefully place up to 7 eggs into the designated slots on the egg tray. For best results, use the piercing tool (if included with your measuring cup) to make a small hole in the larger end of each egg to prevent cracking.
3. **Secure Lid:** Place the transparent lid over the egg tray and main unit, ensuring it is properly seated.
4. **Plug In:** Plug the power cord into a standard electrical outlet.
5. **Start Cooking:** Press the one-touch power button located on the front of the unit. The indicator light will illuminate, signifying that cooking has begun.
6. **Completion:** The egg cooker will automatically shut off and the indicator light will turn off once all the water has evaporated and the eggs are cooked.
7. **Serve:** Carefully remove the lid (steam will be hot) and the egg tray. Transfer the cooked eggs to a bowl of cold water to stop the cooking process and make them easier to peel.

Water Measurement Guide (Approximate)

The amount of water determines the doneness of the eggs. Adjust based on your preference and egg size.

Egg Doneness	Water Level (Approximate)
Soft-Boiled	Fill to the 'Soft' line on the measuring cup (or approx. 30-40ml)
Medium-Boiled	Fill to the 'Medium' line on the measuring cup (or approx. 50-60ml)
Hard-Boiled	Fill to the 'Hard' line on the measuring cup (or approx. 70-80ml)



Image: Close-up view of the one-touch power button on the Comfee Egg Cooker.



Image: Top-down view of the Comfee Egg Cooker showing eggs placed on the egg tray, ready for cooking.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your egg cooker.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Wash Removable Parts:** The egg tray and transparent lid can be washed in warm, soapy water. Rinse thoroughly and dry completely. These parts may also be top-rack dishwasher safe (check product specific instructions if available).
3. **Clean Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads.
4. **Clean Heating Plate:** After use, mineral deposits (scale) may form on the stainless steel heating plate. To remove, add a small amount of white vinegar or a descaling solution to the heating plate and let it sit for 5-10 minutes. Gently scrub with a non-abrasive sponge or cloth, then wipe clean with a damp cloth. Rinse by wiping with a clean, damp cloth several times. Do not immerse the main unit in water.
5. **Storage:** Ensure all parts are dry before storing the egg cooker in a cool, dry place.



Image: Side view of the Comfee Egg Cooker, illustrating its compact design for easy cleaning and storage.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Egg cooker does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the unit is securely plugged into a working outlet. Check your home's circuit breaker.
Eggs are undercooked.	Insufficient water added; lid not properly sealed.	Add more water according to the guide. Ensure the lid is securely placed to retain steam.
Eggs are overcooked.	Too much water added.	Reduce the amount of water used for the desired doneness.

Problem	Possible Cause	Solution
Eggs crack during cooking.	Eggs too cold; no hole pierced.	Allow eggs to reach room temperature before cooking. Use the piercing tool (if available) to make a small hole in the larger end of each egg.
White residue on heating plate.	Mineral deposits from water (scale).	Clean the heating plate with white vinegar or a descaling solution as described in the 'Maintenance and Cleaning' section.

SPECIFICATIONS

Feature	Specification
Model Number	MZ-ZG16E101A2
Brand	COMFEE'
Power	400 W
Capacity	Up to 7 eggs; 0.3 L water capacity
Product Dimensions (L x W x H)	18.7 x 16.4 x 16.6 cm
Net Weight	0.5 kg
Material	Stainless Steel
Color	Yellow

WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or questions regarding your Comfee Egg Cooker, please contact Comfee customer service. Contact information can typically be found on the manufacturer's official website or on the product packaging.

Please have your model number (MZ-ZG16E101A2) and proof of purchase ready when contacting support.