

Phiaton PPU-TN0610WH01

Phiaton Bonobuds True Wireless Earbuds User Manual

Model: BonoBuds (PPU-TN0610WH01)

1. INTRODUCTION

The Phiaton Bonobuds are true wireless earbuds designed to provide an immersive audio experience. They feature Active Noise Cancellation (ANC), Ambient Mode, Bluetooth 5.2 connectivity, and intuitive touch controls. This manual provides instructions for setup, operation, maintenance, and troubleshooting to ensure optimal use of your Bonobuds.



Image 1.1: Phiaton Bonobuds True Wireless Earbuds and Charging Case. The image displays the white earbuds and their compact charging case.

 
2. WHAT'S IN THE BOX

- Phiaton Bonobuds True Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable
- Multiple Sizes of Eartips
- Quick Start Guide

3. SETUP

3.1. Charging the Earbuds and Case

Before first use, fully charge the Bonobuds and their charging case. Place the earbuds into the charging case. Connect the USB-C charging cable to the charging port on the case and to a power source. The LED indicator on the case will show the charging status. A full charge provides up to 20 hours of total playback time with the charging case.

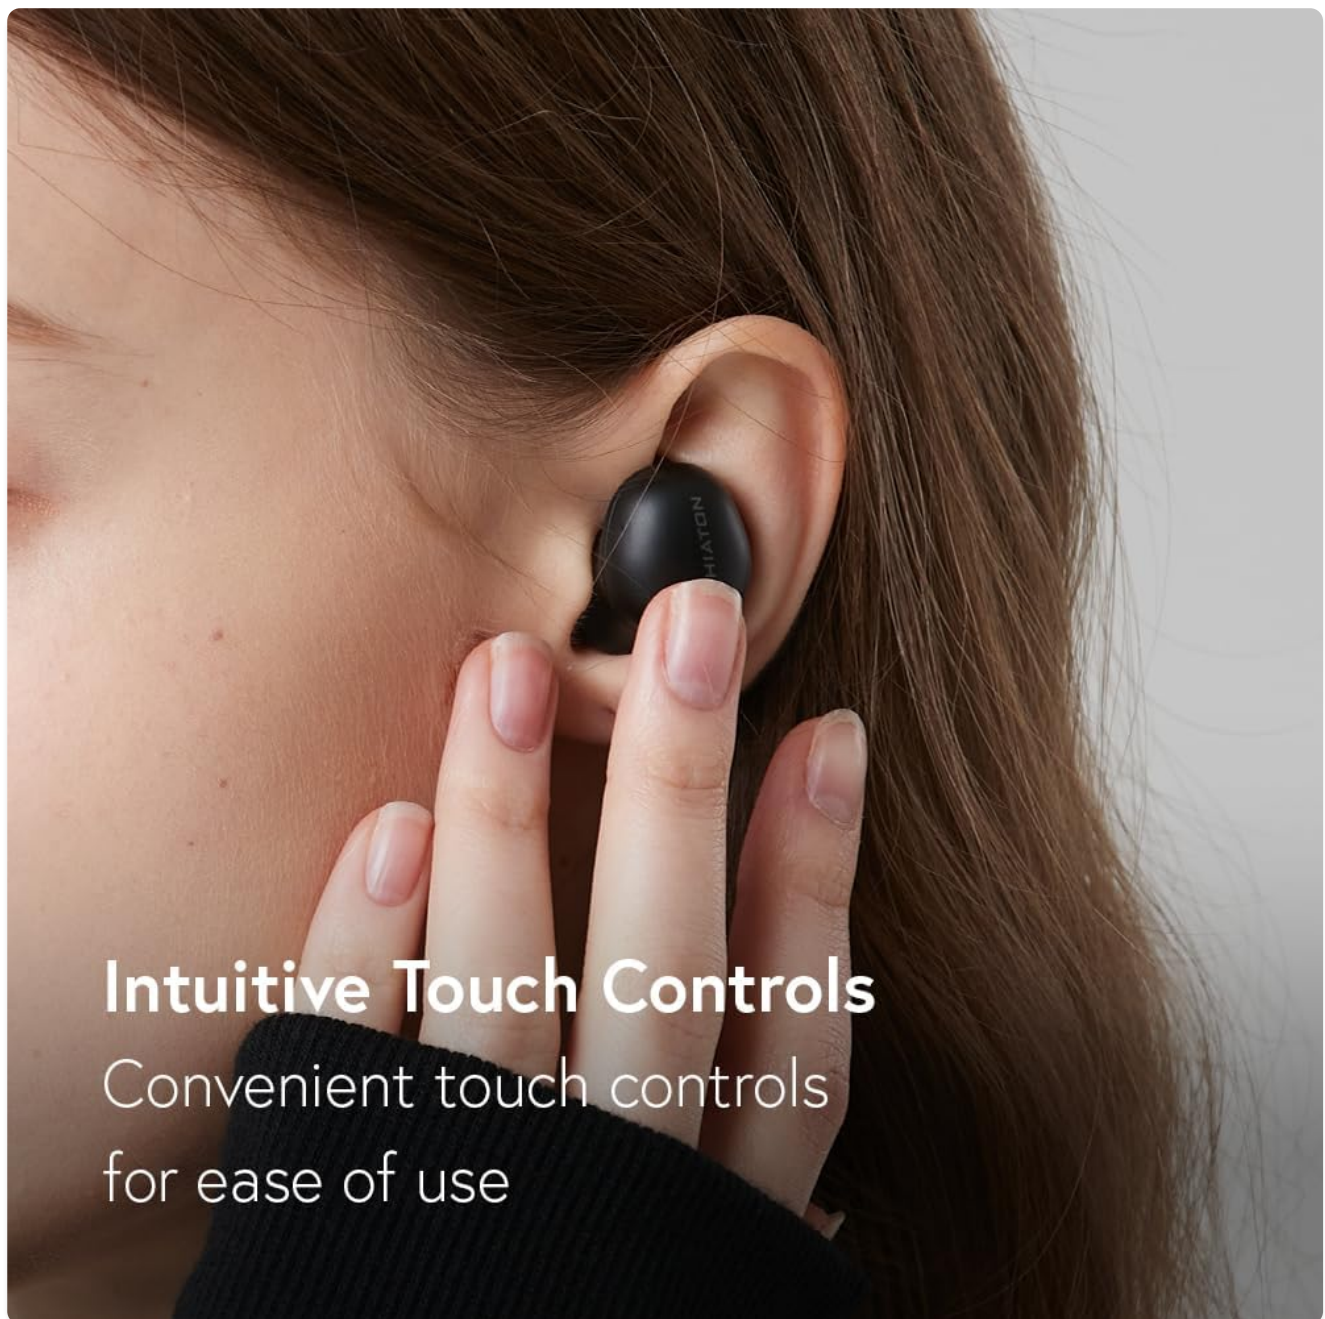

Intuitive Touch Controls

Convenient touch controls
for ease of use

Image 3.1: Quick Charge and 20 Hour Battery. This image shows the blue Bonobuds in their charging case, highlighting the quick charge capability and 20-hour battery life.

3.2. Bluetooth Pairing

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing LED light on the earbuds.
3. On your device (smartphone, tablet, etc.), go to Bluetooth settings and turn Bluetooth on.
4. Select "Phiaton Bonobuds" from the list of available devices.
5. Once connected, the LED indicator on the earbuds will stop flashing.
6. If pairing fails, place the earbuds back in the case, close it, and repeat the steps.

4. OPERATING THE EARBUDS

4.1. Power On/Off

- **Power On:** Open the charging case, and the earbuds will automatically power on and attempt to connect to

the last paired device.

- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging.

4.2. Touch Controls

The Bonobuds feature intuitive touch controls on each earbud. Specific functions may vary slightly depending on your device and application.



Image 4.1: Intuitive Touch Controls. A person is shown touching the side of an earbud, illustrating the touch control functionality.

Table 4.1: Basic Touch Control Functions

Action	Function
Single Tap (Left/Right)	Play/Pause Music, Answer/End Call
Double Tap (Right)	Next Track
Double Tap (Left)	Previous Track

Action	Function
Triple Tap (Left/Right)	Activate Voice Assistant
Long Press (Left/Right)	Toggle ANC / Ambient Mode / Normal Mode
Long Press (Incoming Call)	Reject Call

4.3. Active Noise Cancellation (ANC) and Ambient Mode

The Bonobuds feature Digital Hybrid ANC to reduce environmental noise and an Ambient Mode to allow you to hear your surroundings.

- **Active Noise Cancellation (ANC):** Reduces external noise for an immersive listening experience.
- **Ambient Mode:** Allows ambient sounds to pass through, keeping you aware of your surroundings.
- **Toggle Modes:** Use the long press touch control on either earbud to cycle through ANC, Ambient Mode, and Normal (off) modes.

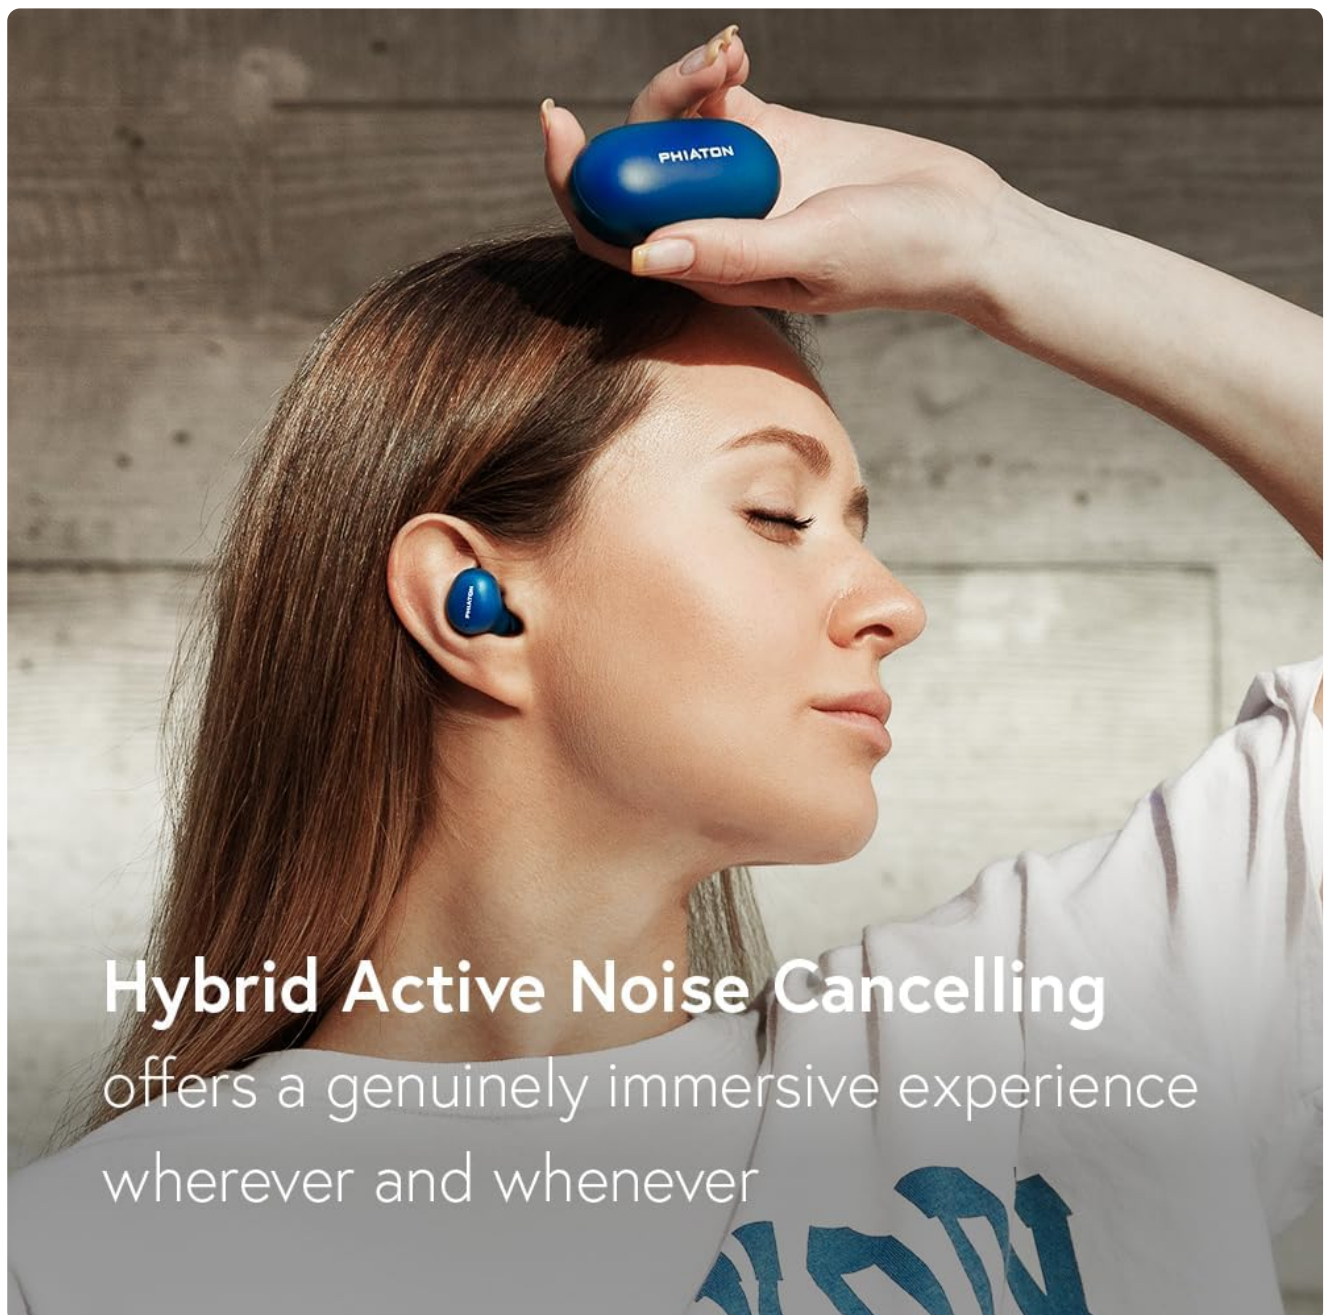 


Image 4.2: Hybrid Active Noise Cancelling. A person is shown wearing a blue earbud, illustrating the noise-cancelling feature for an

4.4. Call Functionality

The Bonobuds are equipped with 4 microphones to ensure clear call transmission.

- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Long press on either earbud during an incoming call.

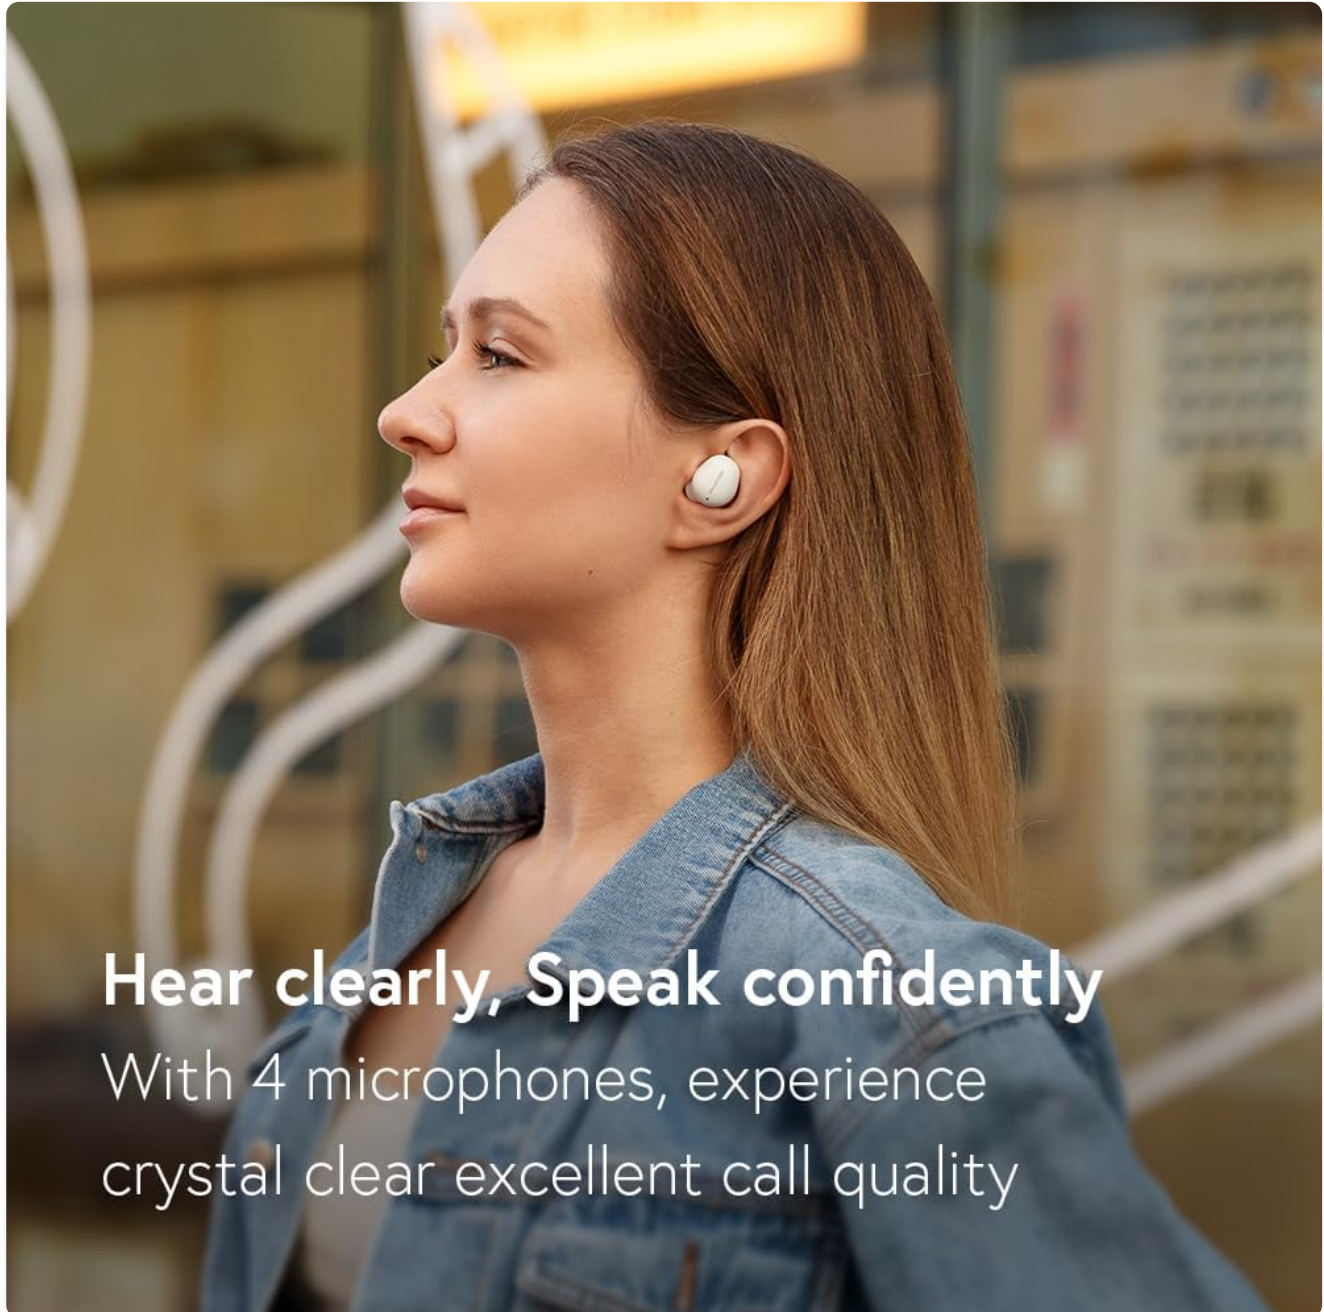 


Image 4.3: Clear Call Quality. A person is shown wearing a white earbud, indicating the clear call functionality provided by the 4 microphones.

5. MAINTENANCE

5.1. Cleaning

- Regularly clean the earbuds, eartips, and charging case with a soft, dry, lint-free cloth.
- Remove eartips and clean them with mild soap and water if necessary. Ensure they are completely dry before reattaching.

- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Keep charging contacts on both earbuds and case clean and free of debris.

5.2. Storage

When not in use, store the Bonobuds in their charging case to protect them from dust, damage, and to keep them charged.

6. TROUBLESHOOTING

6.1. No Sound or Intermittent Audio

- Ensure the earbuds are properly paired with your device.
- Check the volume level on both your device and the earbuds.
- Ensure the earbuds are charged.
- Move closer to your device to avoid interference or range issues.
- Try re-pairing the earbuds with your device.

6.2. Earbuds Not Pairing

- Place both earbuds back into the charging case and close the lid for 5 seconds.
- Open the lid and try pairing again.
- Ensure Bluetooth is enabled on your device and that the earbuds are discoverable.
- Forget the device from your phone's Bluetooth settings and try pairing from scratch.

6.3. Charging Issues

- Ensure the USB-C cable is securely connected to both the charging case and the power source.
- Try a different USB-C cable or power adapter.
- Clean the charging contacts on the earbuds and inside the case.

7. SPECIFICATIONS

Feature	Detail
Brand	Phiaton
Model Name	BonoBuds
Model Number	PPU-TN0610WH01
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.2
Bluetooth Range	Up to 10 meters (33 feet)
Audio Driver Type	12mm Dynamic Drivers
Frequency Response	50 Hz to 20 kHz
Noise Control	Active Noise Cancellation

Feature	Detail
Impedance	16 Ohms
Sensitivity	105 dB
Battery Life	Up to 20 hours (with charging case)
Control Method	Touch
Item Weight	45 Grams
Water Resistance Level	Water Resistant
Material	Plastic



Phiaton Sound Technology

Custom-made 12mm Dynamic Drivers

Image 7.1: Phiaton Sound Technology. An exploded view of an earbud highlights the custom-made 12mm dynamic drivers responsible for audio output.

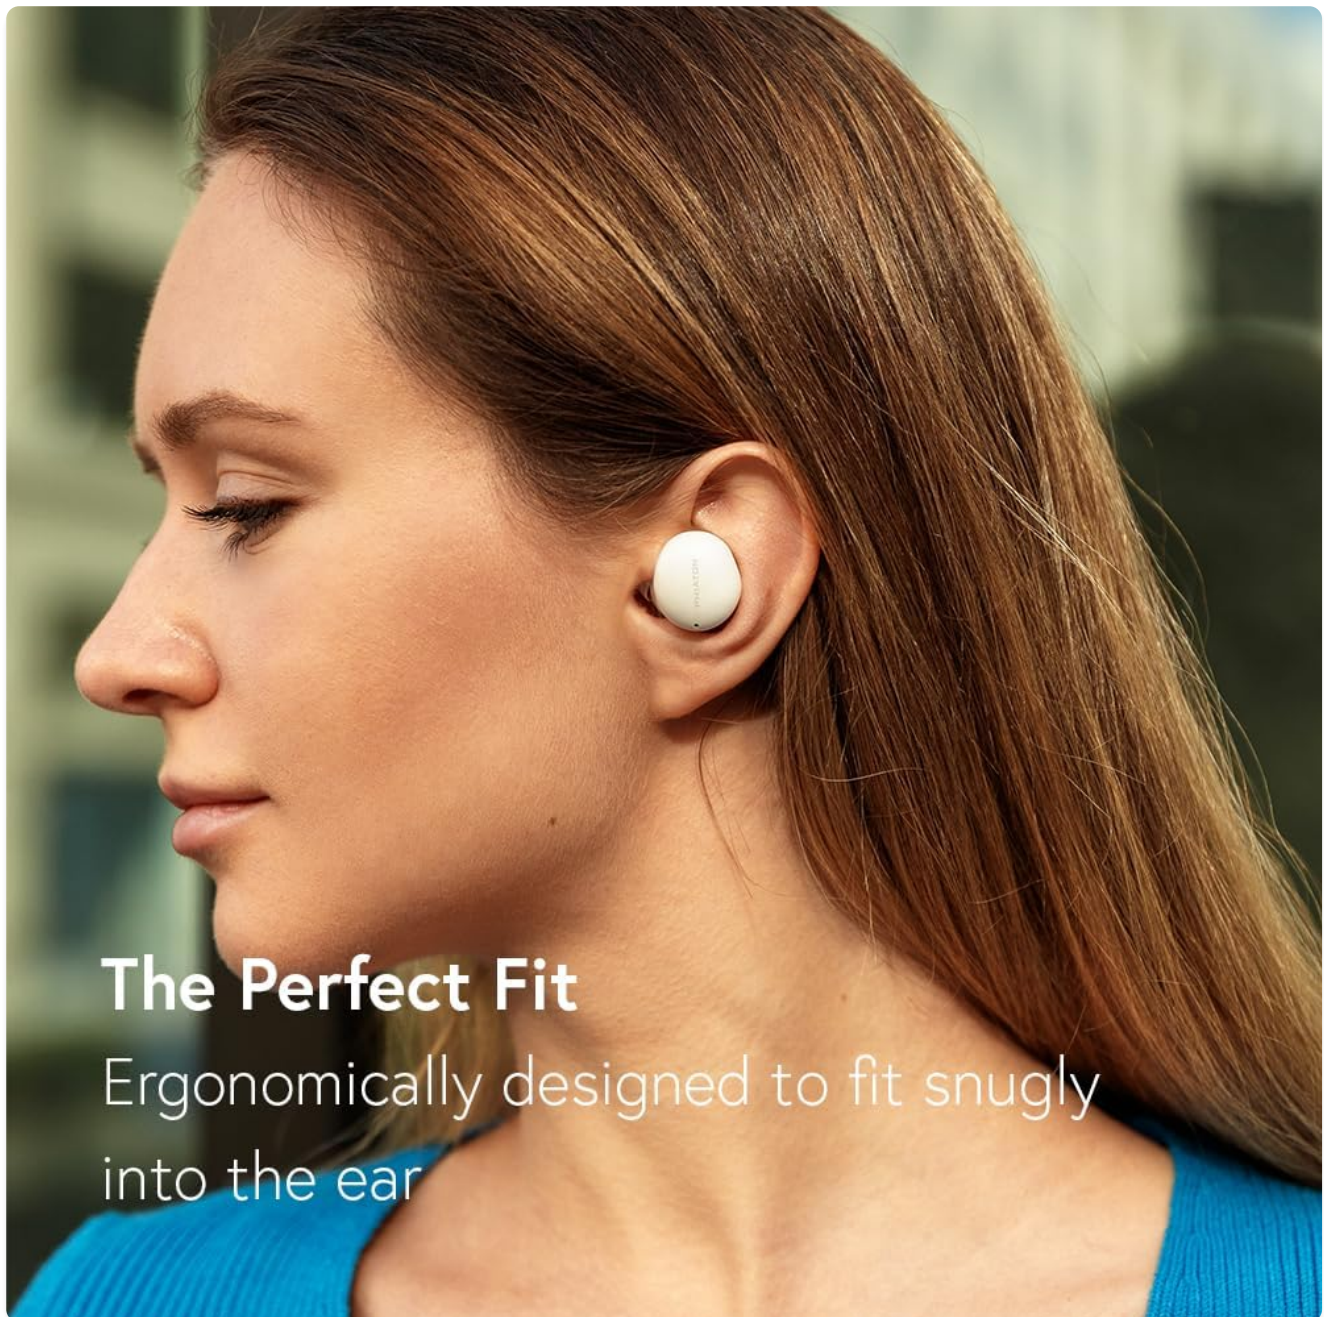 


Image 7.2: Ergonomic Fit. A person is shown wearing a white earbud, demonstrating its snug and comfortable fit in the ear.

8. WARRANTY INFORMATION

Phiaton products are covered by a limited warranty against defects in materials and workmanship. The warranty period typically begins from the date of original purchase. Please refer to the warranty card included in your product packaging or visit the official Phiaton website for detailed warranty terms and conditions specific to your region.

9. SUPPORT

For further assistance, technical support, or customer service inquiries, please visit the official Phiaton support website or contact their customer service department. Contact details can typically be found on the Phiaton website or in your product's quick start guide.

Website: www.phiaton.com/support (Example link, please verify official website)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question