

LDAILY LD-10093US-BL-FP

LDAILY Portable Twin Tub Washing Machine

Model: LD-10093US-BL-FP | Brand: LDAILY

INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation, installation, and maintenance of your LDAILY Portable Twin Tub Washing Machine. Please read this manual thoroughly before using the appliance and retain it for future reference. Proper use will ensure optimal performance and extend the lifespan of your washing machine.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, observe the following precautions:

- Read all instructions before using the appliance.
- Ensure the power supply matches the voltage specified on the rating label.
- Do not operate the machine with a damaged power cord or plug.
- Keep children away from the appliance during operation.
- Do not wash waterproof materials or clothing that may float, as this can cause imbalance.
- Unplug the machine from the power outlet when not in use or before cleaning.
- Do not immerse the electrical parts in water.
- Ensure the machine is placed on a stable, level surface.
- Do not open the spin tub lid until the spin cycle has completely stopped.

PRODUCT OVERVIEW

The LDAILY Portable Twin Tub Washing Machine features a dual-tub design, allowing for simultaneous washing and spinning. It is designed for compact living spaces such as apartments, dorms, and RVs.

Main Components

- **Wash Tub:** For washing clothes (18 lbs capacity).
- **Spin Tub:** For spinning clothes dry (8 lbs capacity).

- **Control Panel:** Includes Wash Timer, Wash Selector, and Spin Timer.
- **Water Inlet:** For filling water into the wash tub.
- **Drain Hose:** For draining water out of the machine.
- **Lint Filter:** Collects lint during the wash cycle.
- **Transport Cover:** Protects the tubs when not in use.



Figure 1: Front-angled view of the LDAILY Portable Twin Tub Washing Machine.

This image displays the overall design of the washing machine, highlighting its compact and functional structure with two distinct tubs for washing and spinning.



Figure 2: Key features of the washing machine.

This image provides close-up views of the transport cover, water inlet pipe, removable lint filter, and the drainage hose, illustrating their design and location on the appliance.

SETUP

Unpacking

1. Carefully remove the washing machine from its packaging.
2. Inspect the machine for any damage incurred during transit. Contact customer support if damage is found.
3. Remove all packing materials, including any protective films or tapes.

Placement

- Place the washing machine on a firm, level surface to prevent vibration and noise during operation.
- Ensure there is adequate space around the machine for ventilation and access.
- Avoid placing the machine in direct sunlight or in areas with high humidity.
- The machine dimensions are approximately 27.5" W x 16" D x 32" H.

Wash & Dry Clothes Simultaneously

✓ Washing Time: 0-15 Minutes ✓ Spin Time: 0-5 Minutes

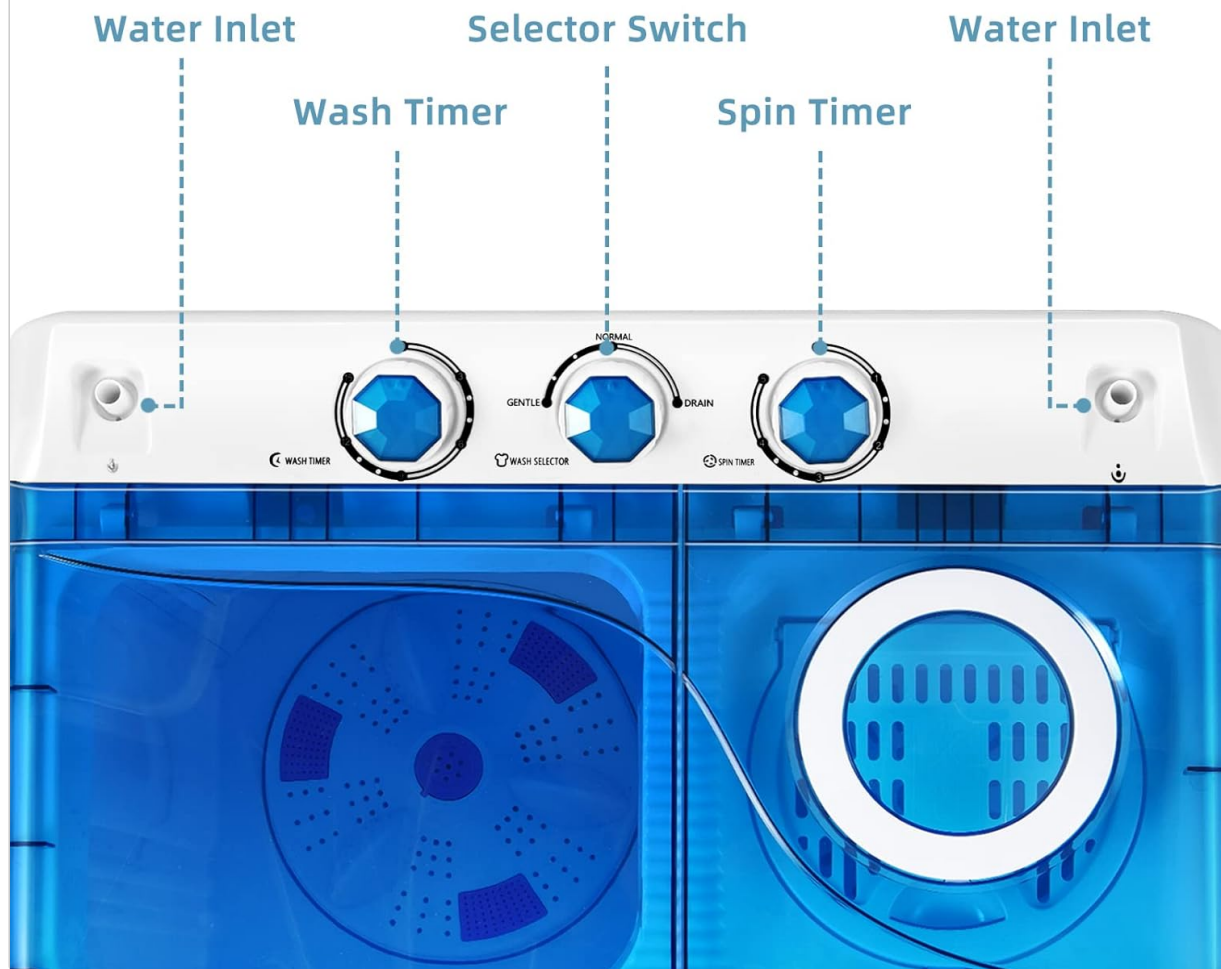


Figure 3: Product dimensions.

This diagram illustrates the physical dimensions of the washing machine, including its width, depth, and height, which are crucial for proper placement.

Connections

- **Water Inlet:** Connect the inlet hose to a water faucet. Ensure a secure connection to prevent leaks.
- **Drain Hose:** Position the drain hose to direct wastewater into a sink, tub, or floor drain. The built-in drain pump facilitates drainage.
- **Power:** Plug the power cord into a grounded 120V electrical outlet.

OPERATION

Control Panel



Figure 4: Control panel layout.

This diagram labels the various controls on the top panel, including the water inlets, wash timer, wash selector, and spin timer, which are used to operate the machine.

- **Wash Timer (0-15 minutes):** Sets the duration of the wash cycle.
- **Wash Selector:** Choose between 'Gentle', 'Normal', or 'Drain' modes.
- **Spin Timer (0-5 minutes):** Sets the duration of the spin cycle.

Washing Procedure

1. Load clothes into the wash tub. Do not exceed the 18 lbs capacity.
2. Add appropriate detergent.
3. Fill the wash tub with water through the water inlet.
4. Set the **Wash Timer** to the desired duration (up to 15 minutes).
5. Select the appropriate wash mode using the **Wash Selector** ('Gentle' for delicate items, 'Normal' for regular loads).
6. The washing process will begin.
7. Once the wash cycle is complete, set the **Wash Selector** to 'Drain' to empty the water.

Mini Body But Large Capacity

Satisfying almost daily laundry requirements



Underwear x 28



Socks x 105



T-Shirt x 14



Jeans x 7

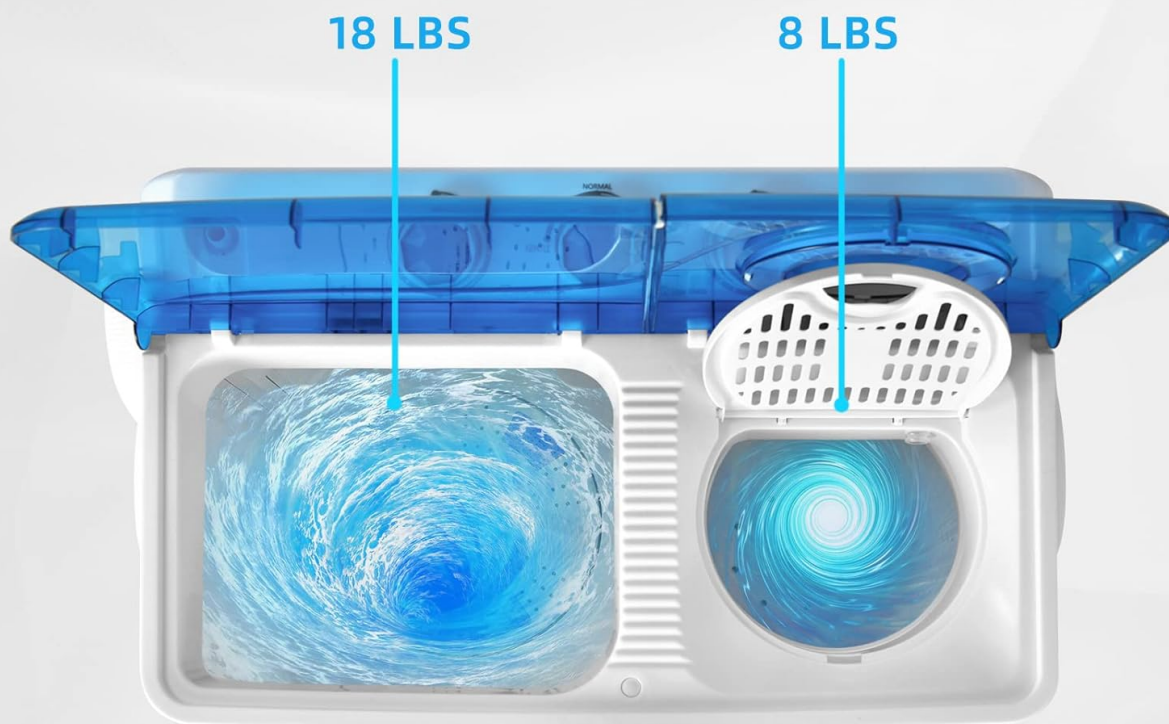


Figure 5: Wash and spin tub capacities.

This image provides a top-down view, clearly indicating the separate wash tub with an 18 lbs capacity and the spin tub with an 8 lbs capacity, along with examples of clothing items.

Spinning Procedure

1. After washing and draining, transfer the wet clothes from the wash tub to the spin tub. Do not exceed the 8 lbs spin capacity.
2. Ensure clothes are evenly distributed in the spin tub to prevent imbalance.
3. Place the spin cap on top of the clothes in the spin tub.
4. Close the spin tub lid.
5. Set the **Spin Timer** to the desired duration (up to 5 minutes).
6. The spin cycle will begin. Do not open the lid until the tub has completely stopped rotating.

MAINTENANCE

Cleaning the Lint Filter

Regularly clean the lint filter to maintain washing efficiency and prevent lint buildup on clothes.

- Remove the lint filter from the wash tub.
- Clean any accumulated lint under running water.
- Reinsert the lint filter securely into its position.

General Cleaning

- Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Clean the interior of the tubs periodically to prevent mold or odor buildup.
- Ensure the machine is unplugged before any cleaning.

Storage



- Drain all water from the machine.
- Wipe the interior and exterior dry.
- Store the machine in a dry, well-ventilated area, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------------|--|---|
| Machine does not start | Power cord not plugged in; power outage; timer not set. | Check power connection; verify power supply; set timer. |
| Water does not drain | Drain hose kinked or blocked; drain selector not set to 'Drain'. | Straighten drain hose; clear blockage; set selector to 'Drain'. |
| Excessive vibration/noise | Machine not on a level surface; uneven load in spin tub. | Adjust machine to a level surface; redistribute clothes evenly. |
| Water leaks | Inlet/drain hose loose; excessive water fill. | Tighten hose connections; do not overfill the tub. |

SPECIFICATIONS

| Feature | Detail |
|--------------------|----------------------|
| Model Number | LD-10093US-BL-FP |
| Brand | LDAILY |
| Capacity (Wash) | 18 lbs |
| Capacity (Spin) | 8 lbs |
| Product Dimensions | 16"D x 27.5"W x 32"H |
| Item Weight | 33.5 pounds |
| Voltage | 120 Volts |
| Operation Mode | Semi-automatic |

| | |
|---|--|
|  | <p>CIAT AQUACIATPOWER LD/ILD 602R-4000R Instruction Manual</p> <p>This instruction manual provides detailed information on the installation, operation, and maintenance of CIAT AQUACIATPOWER LD and ILD chillers and reversible heat pumps, models 602R through 4000R. It covers safety instructions, handling and positioning, dimensions, clearances, electrical connections, application data, water connections, system water flow rate control, system start-up, main components, options, standard maintenance, and final shut-down procedures.</p> |
|  | <p>Sharp Air Purifier Operation Manual FP-J80 FP-J60 Series</p> <p>This operation manual provides detailed instructions for the Sharp FP-J80 and FP-J60 series air purifiers, covering setup, operation, maintenance, and troubleshooting for optimal air quality.</p> |