

[manuals.plus](#) /› [Jectse](#) /› [Jectse Bluetooth Speaker Alarm Clock with LED Mirror Display User Manual](#)**Jectse Jectsesb81t679n01182**

Jectse Bluetooth Speaker Alarm Clock with LED Mirror Display User Manual

Model: Jectsesb81t679n01182

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Jectse Bluetooth Speaker Alarm Clock. Please read this manual thoroughly before using the product to ensure proper function and longevity.

The Jectse Bluetooth Speaker Alarm Clock is a multi-functional device featuring a digital clock, dual alarm capabilities, an LED mirror display, FM radio, and Bluetooth connectivity for audio playback. It also supports music playback via a memory card.

2. PRODUCT OVERVIEW

2.1. Key Features

- Bluetooth 5.0 Connectivity:** Wirelessly stream audio from compatible devices.
- Dual Alarm Clock:** Set two independent alarms for different wake-up times.
- LED Mirror Display:** Clear digital time display that also functions as a mirror.
- FM Radio:** Digitally tuned FM radio (87.5MHz-108MHz) for news, music, and weather.
- Memory Card Playback:** Supports music playback from a memory card (up to 32GB, not included).
- Built-in Rechargeable Battery:** 1600mAh lithium battery for portable use.
- Compact Design:** Product dimensions are approximately 116 x 51 x 33mm (4.6 x 2 x 1.3 inches).

2.2. Package Contents

- 1 x Jectse Alarm Clock Speaker
- 1 x Micro USB Charging Cable
- 1 x User Manual (this document)

2.3. Product Diagram

Refer to the image below for an overview of the device's components and controls.



Figure 1: Front view of the Jectse Bluetooth Speaker Alarm Clock, showing the speaker grille, LED display, and control buttons (SET, M, Play/Pause, Previous, Next).



Figure 2: Side view of the alarm clock with dimensions: 116mm (4.6in) length, 51mm (2in) height, and 33mm (1.3in) depth.

3. SETUP

3.1. Initial Charging

Before first use, fully charge the device. Connect the provided Micro USB charging cable to the charging port on the side of the alarm clock and the other end to a standard USB power adapter (not included).



Figure 3: The alarm clock and its Micro USB charging cable.

The battery indicator on the LED display will show charging status. A full charge typically takes a few hours.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

Press and hold the **Power/Mode (M)** button to turn the device on or off.

4.2. Setting the Time

1. In clock mode, press and hold the **SET** button until the hour digits begin to flash.
2. Use the **Previous (◀◀)** and **Next (▶▶)** buttons to adjust the hour.
3. Press the **SET** button again to switch to minute adjustment. Use the **Previous (◀◀)** and **Next (▶▶)** buttons to adjust the minutes.
4. Press the **SET** button a third time to confirm and exit time setting mode.

4.3. Setting Alarms (Dual Alarm Function)

The device supports two independent alarms. Follow these steps for each alarm:



Figure 4: The alarm clock illustrating the dual alarm feature with two distinct alarm settings.

1. In clock mode, short press the **SET** button once to enter Alarm 1 setting mode. The alarm icon and hour digits will flash.
2. Use the **Previous (◀◀)** and **Next (▶▶)** buttons to adjust the hour.
3. Press **SET** again to adjust minutes. Use **Previous (◀◀)** and **Next (▶▶)** to adjust.
4. Press **SET** a third time to select the alarm sound (e.g., buzzer, FM radio). Use **Previous (◀◀)** and **Next (▶▶)** to cycle through options.
5. Press **SET** a fourth time to confirm Alarm 1 settings.
6. To set Alarm 2, repeat steps 1-5, but short press the **SET** button twice to enter Alarm 2 setting mode.
7. To enable/disable an alarm, short press the **SET** button until the desired alarm icon flashes, then press the **Play/Pause (▶▶ ■ ■)** button to toggle it on or off.

Note: The alarm volume is independent of the main speaker volume and may be fixed or adjustable within the alarm settings. If the alarm sound is too loud, check if there's an option to adjust it during the alarm setup process.

4.4. Bluetooth Mode

1. Press the **Power/Mode (M)** button repeatedly until "BT" appears on the display, indicating Bluetooth mode.

2. On your mobile device, enable Bluetooth and search for "Jectse Speaker" or a similar device name.
3. Select the device to pair. A confirmation sound will indicate successful pairing.
4. You can now play audio from your device through the speaker. Use the **Play/Pause (▶■ ■)**, **Previous (◀◀)**, and **Next (▶▶)** buttons to control playback.

4.5. FM Radio Mode

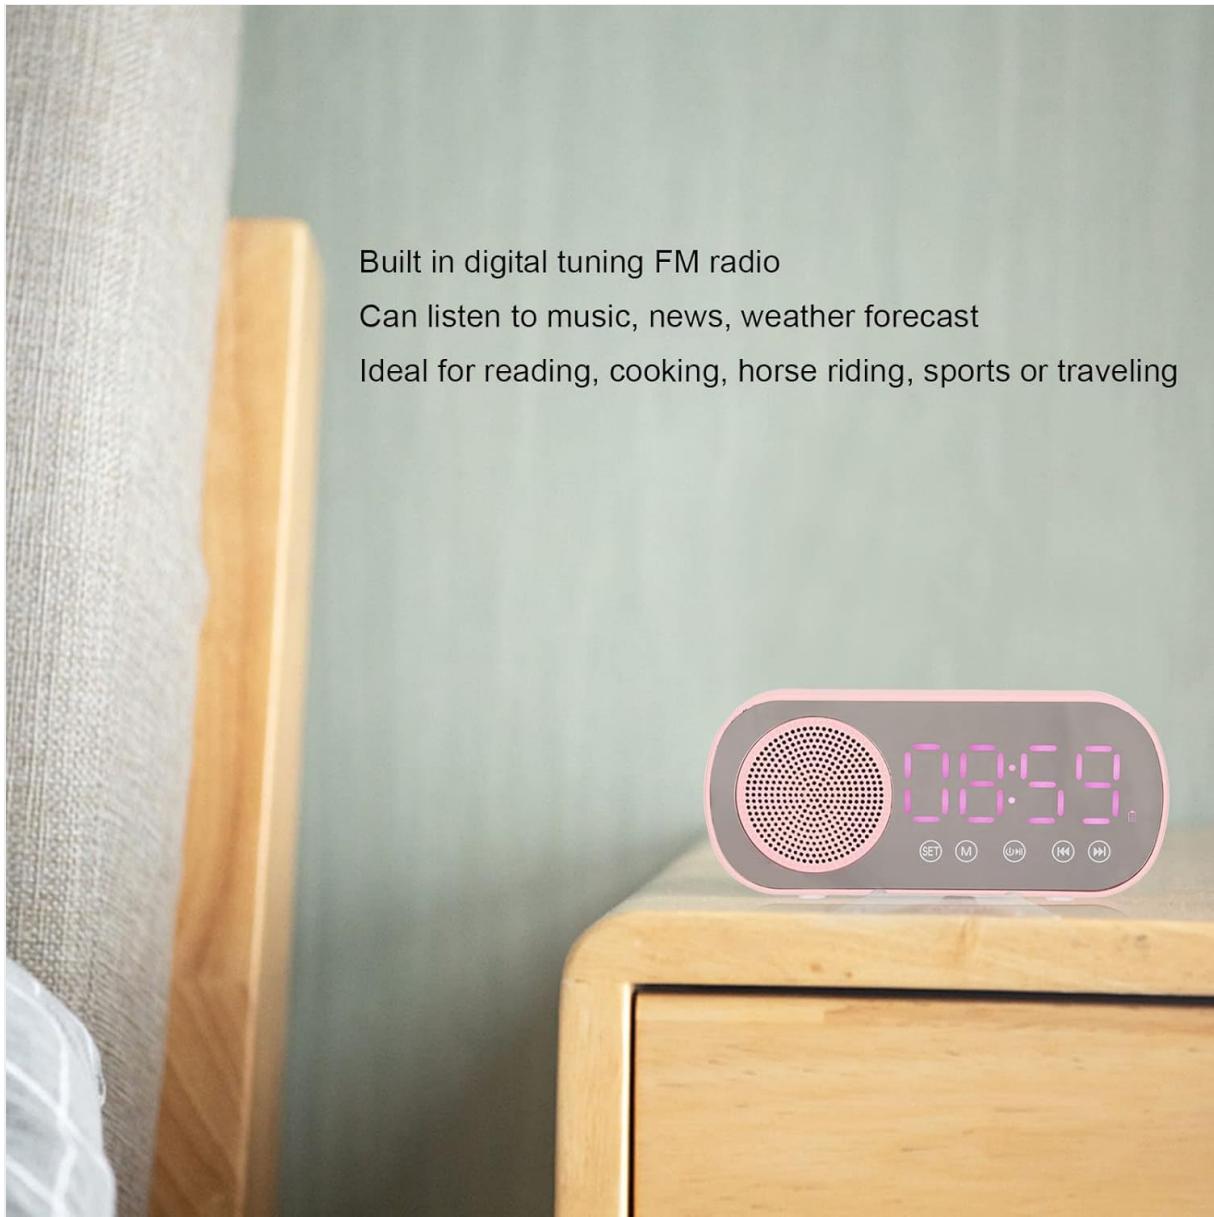


Figure 5: The alarm clock functioning as an FM radio on a bedside table.

1. Press the **Power/Mode (M)** button repeatedly until "FM" appears on the display.
2. Press the **Play/Pause (▶■ ■)** button to automatically scan and save available FM stations.
3. Use the **Previous (◀◀)** and **Next (▶▶)** buttons to switch between saved stations.
4. For better reception, ensure the device is not obstructed and try repositioning it.

4.6. Memory Card Playback

Insert a memory card (Micro SD card, up to 32GB, not included) into the designated slot on the device. The device will automatically switch to memory card mode and begin playing audio files. Use the **Play/Pause (▶■ ■)**, **Previous (◀◀)**, and **Next (▶▶)** buttons to control playback.

4.7. Volume Adjustment

In any audio playback mode (Bluetooth, FM, Memory Card), press and hold the **Previous (◀◀)** button to decrease volume or the **Next (▶▶)** button to increase volume.

4.8. LED Mirror Display



Figure 6: The alarm clock's LED display also functions as a mirror.

The front panel of the device features an LED display that shows the time and other information. When not actively displaying information, the surface can be used as a mirror.



Figure 7: The LED display showing multiple functions and indicators, including time, battery level, and Bluetooth status.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use abrasive cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Water Exposure:** This device is not waterproof. Avoid exposure to water or high humidity.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device using the provided USB cable.

Problem	Possible Cause	Solution
Cannot pair via Bluetooth.	Bluetooth not enabled on device or phone; device not in pairing mode.	Ensure the alarm clock is in Bluetooth mode ("BT" displayed) and your phone's Bluetooth is on and searching. Move devices closer.
FM radio reception is poor.	Weak signal; interference.	Reposition the device. Avoid placing near other electronic devices that may cause interference.
Alarm is too loud/quiet.	Alarm volume not adjusted during setup.	Re-enter alarm setting mode and check if there is an option to adjust alarm volume. Some models may have a fixed alarm volume.
Display is hard to read.	Lighting conditions; display brightness setting.	Adjust ambient lighting. Check if there is a display brightness setting (refer to specific model instructions if available, not detailed in general description).

7. SPECIFICATIONS

Feature	Detail
Model	Jectsesb81t679n01182
Material	ABS (Acrylonitrile Butadiene Styrene)
Product Size	Approx. 116 x 51 x 33mm (4.6 x 2 x 1.3 inches)
Battery Type	Lithium Battery (Built-in)
Battery Capacity	1600mAh
Bluetooth Version	5.0
Play Modes	Bluetooth, Memory Card (Max 32G, not included)
Clock Modes	Digital Clock, Dual Alarm Clock, FM Radio
FM Radio Frequency	87.5MHz-108MHz
Connectivity Technology	Bluetooth, USB
Item Weight	5.3 ounces

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.

