

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bonsenkitchen](#) /

› [Bonsenkitchen Immersion Blender HB3202 Instruction Manual](#)

Bonsenkitchen HB3202

Bonsenkitchen Immersion Blender HB3202 Instruction Manual

Model: HB3202

PRODUCT OVERVIEW

The Bonsenkitchen Immersion Blender HB3202 is a versatile handheld electric blender designed to simplify your kitchen tasks. Featuring a powerful motor and durable stainless steel blades, it offers 2 mixing speed settings for efficient blending. This 3-in-1 package includes the main blender unit, a whisk attachment, and a 24oz (700ml) beaker, making it ideal for preparing soups, smoothies, sauces, baby food, and more. Its detachable design ensures easy cleaning and convenient storage.



Image: Bonsenkitchen Immersion Blender HB3202 with main unit, whisk attachment, and 24oz beaker.

SAFETY INSTRUCTIONS

- Always unplug the appliance before cleaning or when not in use.
- Do not immerse the motor unit in water or other liquids.
- Keep hands, hair, clothing, and utensils away from moving blades during operation to prevent injury.
- Blades are sharp. Handle with care when assembling, disassembling, or cleaning.
- Do not use the appliance for purposes other than its intended use.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SETUP AND ASSEMBLY

The Bonsenkitchen Immersion Blender HB3202 features a detachable design for easy assembly and disassembly.

- 1. Attaching the Blending Shaft:** Align the blending shaft with the motor unit and twist clockwise until it locks securely into place.
- 2. Attaching the Whisk:** Insert the whisk into the whisk gear box, then align the whisk gear box with the motor unit and twist clockwise until it locks securely.
- 3. Attaching the Chopper (if applicable):** Place the chopper blade onto the center pin inside the chopper bowl. Secure the chopper lid onto the bowl, then align the motor unit with the chopper lid and twist clockwise until it locks.

Image: Illustration of the detachable mechanism for easy assembly.

OPERATING INSTRUCTIONS

The Bonsenkitchen Immersion Blender offers two mixing speeds for various blending tasks.

- 1. Power On:** Plug the appliance into a suitable power outlet.
- 2. Select Speed:** The blender features two speed buttons on the ergonomic handle. Press the 'I' button for lower speed, suitable for softer ingredients like soups and smoothies. Press the 'II' button for higher speed, ideal for tougher ingredients like nuts or for faster blending.
- 3. Blending:** Immerse the blending shaft or whisk into your ingredients. Press and hold the desired speed button to operate. Release the button to stop.
- 4. Recommended Use:** Use the blending shaft for pureeing soups directly in pots, making smoothies in the 24oz beaker, or preparing sauces. Use the whisk attachment for whipping eggs, cream, or batters.



Image: Close-up of the ergonomic handle showing the two speed control buttons.

Your browser does not support the video tag.

Video: Official Bonsenkitchen Immersion Blender demonstration, showcasing its features and ease of use.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity of your Bonsenkitchen Immersion Blender.

- Unplug:** Always unplug the appliance from the power outlet before cleaning.

- **Detachable Parts:** The blending shaft, whisk, and chopper bowl/blade are detachable. Press the release buttons to detach them from the motor unit.
- **Hand Wash:** Wash the detachable parts (blending shaft, whisk, chopper bowl, and blade) with warm soapy water. Rinse thoroughly and dry immediately.
- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
- **Dishwasher:** Do not wash the motor unit or any electrical components in a dishwasher. Some detachable parts may be dishwasher safe, but hand washing is recommended to preserve their lifespan.
- **Storage:** Store the cleaned and dried appliance and its accessories in a dry place.

TROUBLESHOOTING

If you encounter any issues with your Bonsenkitchen Immersion Blender, please refer to the following common troubleshooting tips:

- **Appliance Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check if there is a power outage or a tripped circuit breaker.
- **Motor Stops During Use:** The appliance may have overheated due to prolonged use or processing very tough ingredients. Unplug the blender and let it cool down for at least 15-20 minutes before attempting to use it again. Reduce the load or processing time for very dense mixtures.
- **Ineffective Blending:** Ensure the blending shaft or attachment is correctly and securely locked into the motor unit. For thicker mixtures, add a small amount of liquid to aid blending. Avoid overfilling the beaker or chopper bowl.
- **Excessive Vibration or Noise:** Check that all attachments are properly secured. Ensure the appliance is not damaged. If the issue persists, discontinue use and contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	Bonsenkitchen
Model Number	HB3202
Power Source	AC Power Source
Mixing Speeds	2 Adjustable Speeds
Blade Material	Stainless Steel
Beaker Capacity	24 oz (700 ml)
Product Dimensions	2.5"D x 2.5"W x 17"H

Included Components

Hand Blender, 24oz Beaker, Whisk Attachment

WARRANTY AND SUPPORT

This Bonsenkitchen Immersion Blender HB3202 comes with a **Limited Warranty**. For detailed information regarding warranty coverage, terms, and conditions, please refer to the warranty card included in your product packaging or visit the official Bonsenkitchen website.

For customer support, technical assistance, or any inquiries regarding your product, please contact Bonsenkitchen customer service through their official website or the contact information provided in your product manual.

You can also visit the [Bonsenkitchen Store on Amazon](#) for more information and products.