

## PETKIT P4108

# PETKIT Eversweet 3 Pro Wireless Pet Water Fountain User Manual

Model: P4108

Thank you for choosing the PETKIT Eversweet 3 Pro Wireless Pet Water Fountain. This manual provides essential information for setup, operation, and maintenance to ensure optimal performance and the well-being of your pet.

[Introduction](#)

[Product Overview](#)

[Setup Instructions](#)

[Operating Modes](#)

[Maintenance](#)

[Specifications](#)

[Troubleshooting](#)

[Warranty & Support](#)

## 1. INTRODUCTION

The PETKIT Eversweet 3 Pro is an intelligent automatic pet water fountain designed to provide fresh, clean water for your cats and dogs. Featuring a wireless pump, stainless steel inner tank, and a multi-layer filtration system, it ensures a safe and hygienic drinking experience. This manual will guide you through the installation, operation, and maintenance of your new pet water fountain.

## 2. PRODUCT OVERVIEW

### 2.1 Components

The PETKIT Eversweet 3 Pro includes the following main components:

- Main Unit (Water Reservoir)

- Wireless Water Pump
- Filter Tray
- Filter Unit (Multi-layer filter)
- Water Tray Cover
- USB Power Cable (Adapter not included)
- User Manual

## CONTENU DU COLIS



Image: Contents of the PETKIT Eversweet 3 Pro package, showing the main unit, filter, and user manual.

## 2.2 Key Features

- **Wireless Pump Design:** Facilitates easy cleaning and ensures no exposed wires in the water, enhancing safety.
- **Stainless Steel Inner Tank:** Made from food-grade 304 stainless steel, resistant to high temperatures and less prone to bacterial growth.
- **Multi-layer Filtration System:** Includes a high-density filter, coconut shell activated carbon, and ion-exchange resin to remove hair, dust, odors, and heavy metals.
- **Ultra-Quiet Operation:** Roman column water flow structure reduces noise to below 25dB, ensuring a peaceful environment.
- **Smart App Connectivity:** Connects via Bluetooth to the PETKIT app for monitoring water levels, filter status, and customizing operating modes.
- **Detachable Base:** Allows for easy refilling and cleaning of the main unit.
- **Large Capacity:** 1.8L (61 oz) capacity provides fresh water for 5-7 days.

## Filtre de Filtration Multicouche Amélioré

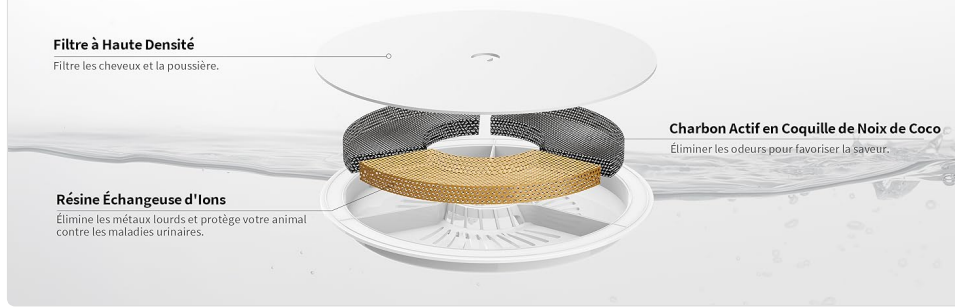 


Image: Diagram highlighting the durable and hygienic 304 stainless steel inner tank.

## Surveillez et Contrôlez à Distance Votre Fontaine d'Eau

Vous pouvez contrôler votre fontaine d'eau à distance via l'interconnexion à distance, si vous avez au moins un des produits PETKIT comme appareil principal.



Image: Exploded view of the multi-layer filter, showing high-density filter, activated carbon, and ion-exchange resin.

### 3. SETUP INSTRUCTIONS

Follow these steps to set up your PETKIT Eversweet 3 Pro water fountain:

- 1. Unpack Components:** Remove all items from the packaging.
- 2. Disassemble for Initial Cleaning:**
  - Twist the water tray cover counter-clockwise to remove it.
  - Remove the filter tray and the filter unit.
  - Remove the wireless pump from the filter tray.
  - Rinse all components (except the main unit base with the power cord) with clean water.
- 3. Rinse New Filter:** Lightly rinse the new filter element under running water before placing it.
- 4. Assemble Filter and Pump:**
  - Reattach the wireless pump to the filter tray, ensuring it is securely in place.
  - Place the rinsed filter unit into the filter tray.
- 5. Fill with Water:**
  - Remove the entire stainless steel water basin from the main unit.
  - Fill the stainless steel basin with potable water. Ensure the water level is below the "MAX" line.
  - Place the filled basin back into the main unit.
- 6. Place Water Tray Cover:** Install the water tray cover onto the main unit by twisting it clockwise

until secure.

7. **Connect Power:** Connect the USB power cable to a suitable adapter (not included) and plug it into a power outlet. The fountain will begin operating.

Your browser does not support the video tag.

Video: This video demonstrates the initial setup of the PETKIT Eversweet 3 Pro, including component assembly, water filling, and power connection.

## 4. OPERATING MODES

The PETKIT Eversweet 3 Pro offers multiple operating modes, which can be controlled via the PETKIT app:

- **Normal Mode:** The fountain operates continuously, providing a constant flow of water.
- **Smart Mode:** The fountain operates intermittently to conserve energy and extend filter life. You can customize the frequency and duration of water flow via the app.
- **Night Mode (Do Not Disturb):** Allows you to set specific hours during which the fountain will pause operation or reduce indicator light brightness to avoid disturbance.

The indicator light on the front of the unit provides status information:

- **Solid Blue:** Continuous operation.
- **Solid Green:** Intermittent operation (Smart Mode).
- **Flashing Blue:** Low water level, requires refilling.



Image: Screenshot of the PETKIT app showing options for Smart, Normal, and Night modes, along with filter and water level indicators.

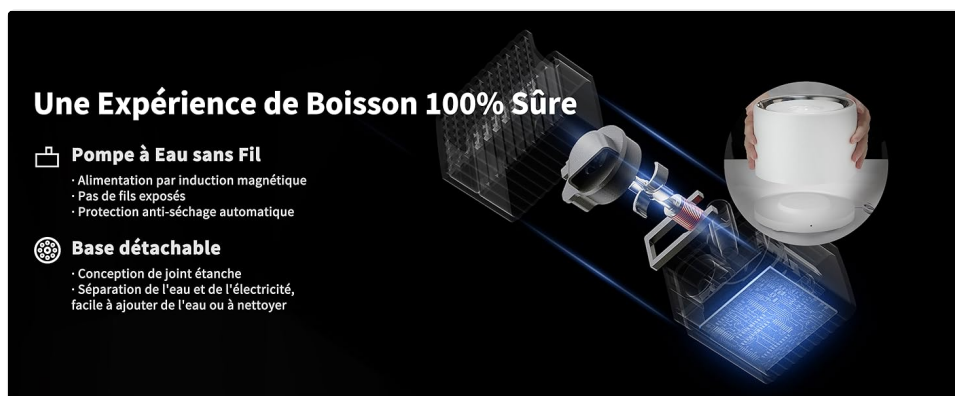 


Image: Screenshots of the PETKIT app demonstrating customizable functions like light settings and filter reminders.

## 5. MAINTENANCE

Regular cleaning and filter replacement are crucial for maintaining the fountain's performance and your pet's health.

### 5.1 Cleaning Instructions

- 1. Disconnect Power:** Always unplug the fountain before cleaning.
- 2. Disassemble Components:**
  - Remove the water tray cover by twisting counter-clockwise.
  - Remove the filter and filter tray.
  - Remove the wireless pump from the filter tray.
  - Disassemble the wireless pump: remove the filter cotton, open the front cover, and use tweezers to remove the impeller.
- 3. Clean Components:**
  - Clean the pump's front cover, impeller, and the pump body thoroughly using the provided brush and clean water.
  - Clean the filter cotton.
  - Clean the water tray cover and the stainless steel water basin with a sponge and clean water.
  - Rinse all parts thoroughly to remove any soap residue.
- 4. Reassemble:**
  - Reinstall the impeller, pump front cover, and filter cotton onto the wireless pump.
  - Attach the wireless pump back to the filter tray.
  - Place the filter tray with the pump into the stainless steel basin, ensuring the pump aligns with the groove at the bottom.
  - Install a new, rinsed filter unit.
  - Place the water tray cover back on the unit by twisting clockwise.
- 5. Refill and Restart:** Refill with fresh potable water and reconnect the power.

Your browser does not support the video tag.

Video: This video provides detailed instructions on how to disassemble and clean all components of the PETKIT Eversweet 3 Pro water fountain for thorough maintenance.

### 5.2 Filter Replacement

The multi-layer filter should be replaced regularly, typically every 2-4 weeks, depending on usage and water quality. The PETKIT app will provide reminders for filter replacement. Always rinse a new filter under running water before installation.

## 6. SPECIFICATIONS

Feature	Detail
Model Number	P4108

Dimensions (L x W x H)	19.5 x 19.5 x 14.8 cm (7.7 x 7.7 x 5.8 inches)
Weight	1.3 kg (2.87 lbs)
Capacity	1.8 Liters (61 oz)
Material	Stainless Steel (inner tank)
Power Source	USB Cable (Adapter not included)
Voltage	2.3E+2 Volts
Noise Level	< 25 dB
Connectivity	Bluetooth (for app control)
Intended Use	Indoor use for small breed pets (cats and dogs)

## 7. TROUBLESHOOTING

If you encounter issues with your PETKIT Eversweet 3 Pro, refer to the following common solutions:

- **Fountain Not Dispensing Water:**

- Check if the power cable is securely connected.
- Ensure the water level is sufficient; refill if the blue indicator light is flashing.
- Disassemble and clean the wireless pump and filter thoroughly, as blockages can prevent water flow.
- Verify that the wireless pump is correctly aligned with the groove in the basin.

- **Excessive Noise:**

- Ensure the water level is adequate. Low water levels can cause pump noise.
- Clean the pump impeller and surrounding area to remove any debris or hair that might be causing vibration.
- Check that all components are correctly assembled and seated.

- **App Connectivity Issues:**

- Ensure Bluetooth is enabled on your mobile device.
- Make sure your device is within range of the fountain.
- Restart the PETKIT app and try reconnecting.
- If connecting to other PETKIT devices for remote control, ensure they are properly configured and within range.

- **Water Quality Concerns (Odor/Debris):**





 




- Replace the filter unit as scheduled or if water quality deteriorates.
- Perform a thorough cleaning of all fountain components.
- Use fresh, potable water.

## 8. WARRANTY & SUPPORT

For warranty information and customer support, please refer to the official PETKIT website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims. For additional resources and product information, visit the [PETKIT Brand Store](#).

© 2024 PETKIT. All rights reserved.

### Related Documents - P4108

  EVERSWEET 3 PRO (UVC) <small>Based on official</small>	<a href="#">PETKIT Eversweet 3 Pro (UVC) User Manual and Specifications</a> Comprehensive user manual and technical specifications for the PETKIT Eversweet 3 Pro (UVC) pet water fountain, including setup, operation, safety guidelines, and product details.
	<a href="#">PETKIT EVERSWEET WIRELESS SUS304 User Manual   Smart Pet Water Fountain</a> Comprehensive user manual for the PETKIT EVERSWEET WIRELESS SUS304 smart pet water fountain. Learn about setup, maintenance, safety guidelines, and indicator light functions for optimal pet hydration.
English 	<a href="#">PETKIT Eversweet 5 Mini: Smart Pet Drinking Fountain User Guide</a> Learn about the PETKIT Eversweet 5 Mini, a smart ceramic pet drinking fountain designed for cats and small dogs. This guide covers setup, maintenance, and features.
 <small>PETKIT EVERSWEET SOLO 2 (UVC) WIRELESS PET WATER FOUNTAIN</small> <small>MODEL P4114</small> 	<a href="#">PETKIT EVERSWEET SOLO 2 Wireless Pet Water Fountain User Manual</a> Comprehensive user manual for the PETKIT EVERSWEET SOLO 2 Wireless Pet Water Fountain (Model P4114), covering technical specifications, setup, usage instructions, safety warnings, troubleshooting, and maintenance.
English 	<a href="#">PETKIT EVERSWEET WIRELESS SUS304 User Manual - Setup, Use, and Safety Guide</a> Comprehensive user manual for the PETKIT EVERSWEET WIRELESS SUS304 pet water fountain, covering setup, operation, maintenance, safety guidelines, and specifications.
   EVERSWEET 3 PRO (UVC) <small>Ultimate pet manual</small>	<a href="#">PETKIT Eversweet 3 Pro (UVC) User Manual</a> User manual for the PETKIT Eversweet 3 Pro (UVC) pet water fountain. Includes setup, indicator lights, safety precautions, and specifications.

